


Magic Chef CYE4000AZS 02 - CONTROL PANEL

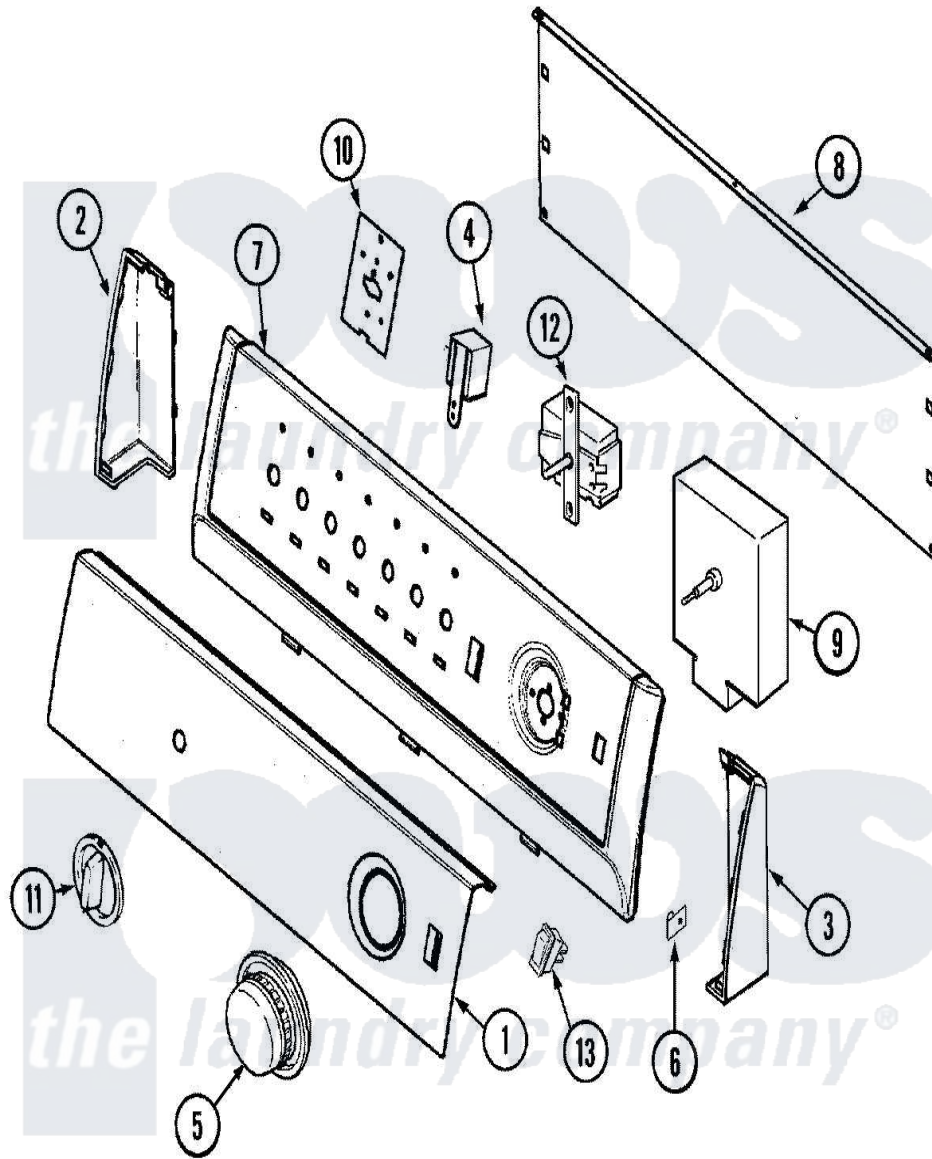

Magic Chef [Residential Magic Chef CYE4000AZS Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001395			Panel, Control
2	21001546			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	21001547			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	53-1639			Buzzer Assembly
5	31001388			Knob/Skirt, Timer
6	25-7851			Speedclip, End Cap To Top
7	21001553			Frame
8	21001527			Shield, Rear
"	25-3457			Screw, Sems
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1815	31001513		Timer
"	63-6743	31001484		Resistor Assembly

10	21001517		Shield, Control
11	21001544		Knob, Selector
12	31001348	31001449	Switch, Selector
13	21001902		Switch, Rocker
NI	16000327		Not Available
			GUIDE, QUICK REF. - MAYTAG
"	31001414		Not Available
			MANUAL, USE & CARE
"	31001415		Not Available
			MANUAL, USE & CARE (FRCH)
"	31001460		Not Available
			MANUAL, USE & CARE (SPAN)
"	21001419		Not Available
			MANUAL, LAUNDERING TIPS

