


Magic Chef CYG1004AWW 02 - CONTROL PANEL

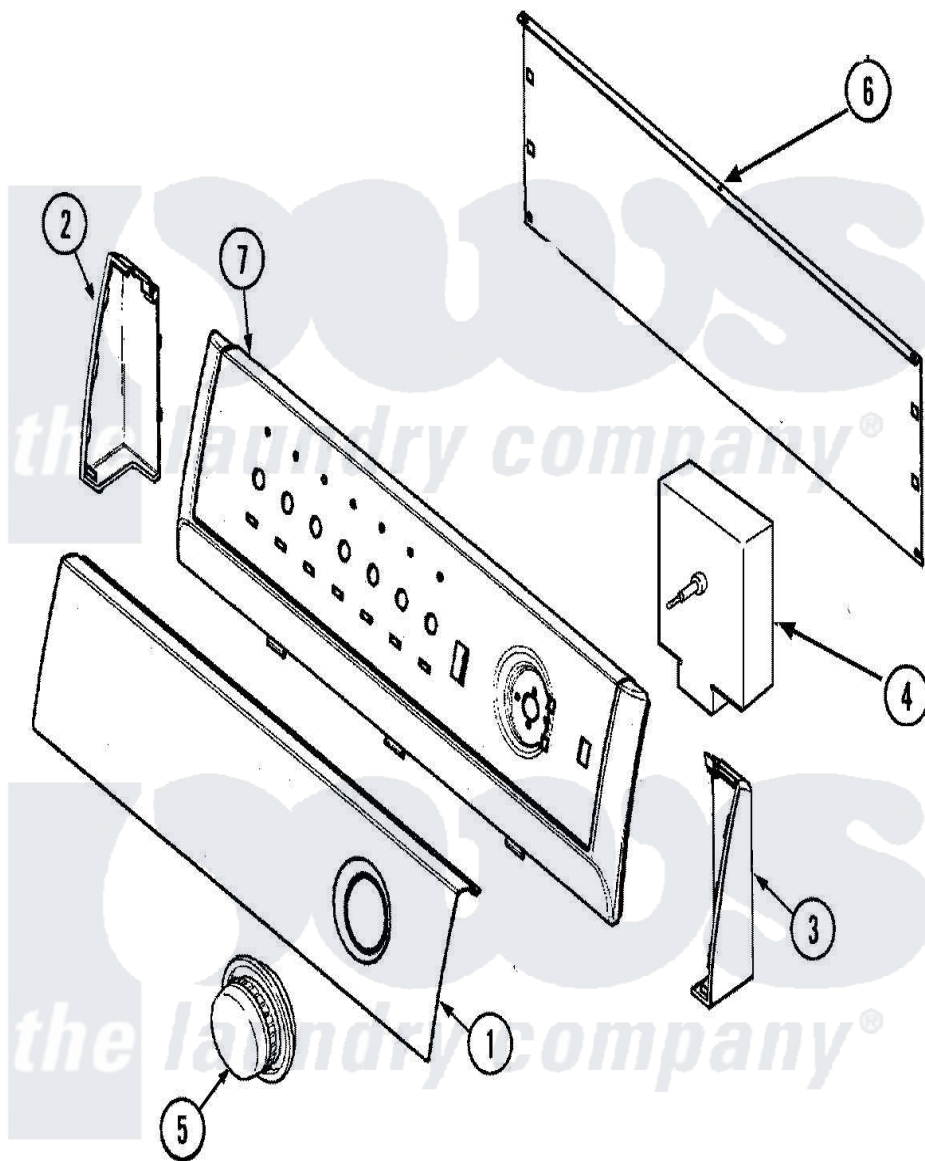

Magic Chef [Residential Magic Chef CYG1004AWW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	31001776			Control Panel
2	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001546			Endcap, Panel
3	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001547			Endcap, Panel
4	31001119	W10116760		Screw
"	31001108			Timer
5	31001388			Knob/Skirt, Timer
6	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001527			Shield, Rear
7	21001552			Frame , Control Panel