


# Magic Chef CYG2000AWA 01 - CONTROL PANEL

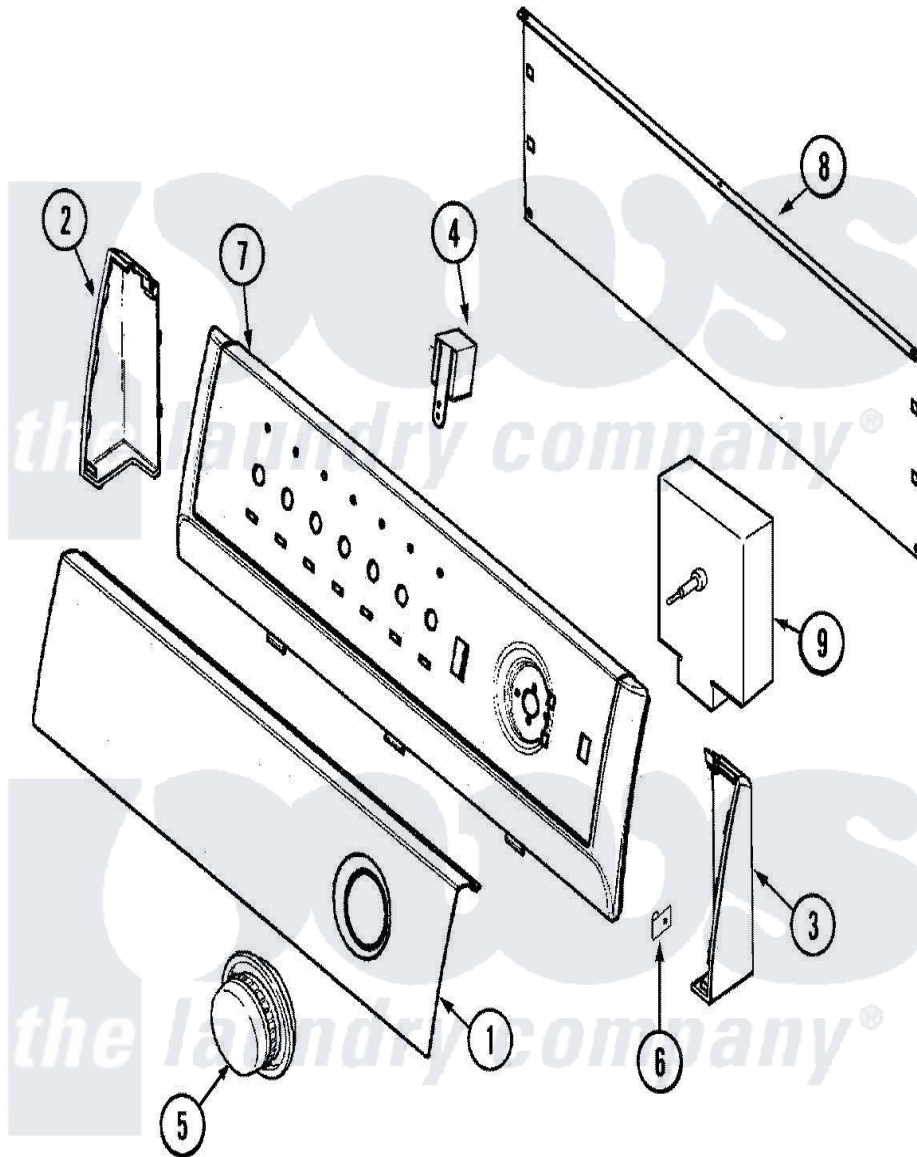

Magic Chef [Residential Magic Chef CYG2000AWA Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">31001403</a>			Panel, Control
2	21001557	<a href="#">21001769</a>		Endcap, Panel
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
3	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001564	<a href="#">21001768</a>		Endcap, Panel
4	<a href="#">53-1639</a>			Buzzer Assembly
5	<a href="#">31001393</a>			Knob And Skirt Assembly
6	<a href="#">25-7851</a>			Speedclip, End Cap To Top
7	21001560	<a href="#">21001767</a>		Frame
8	<a href="#">21001527</a>			Shield, Rear
"	<a href="#">25-3457</a>			Screw, Sems
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
9	<a href="#">31001108</a>			Timer
NI	21001419		Not Available	MANUAL, LAUNDERING TIPS

