


Magic Chef CYG4000AWW 01 - CABINET

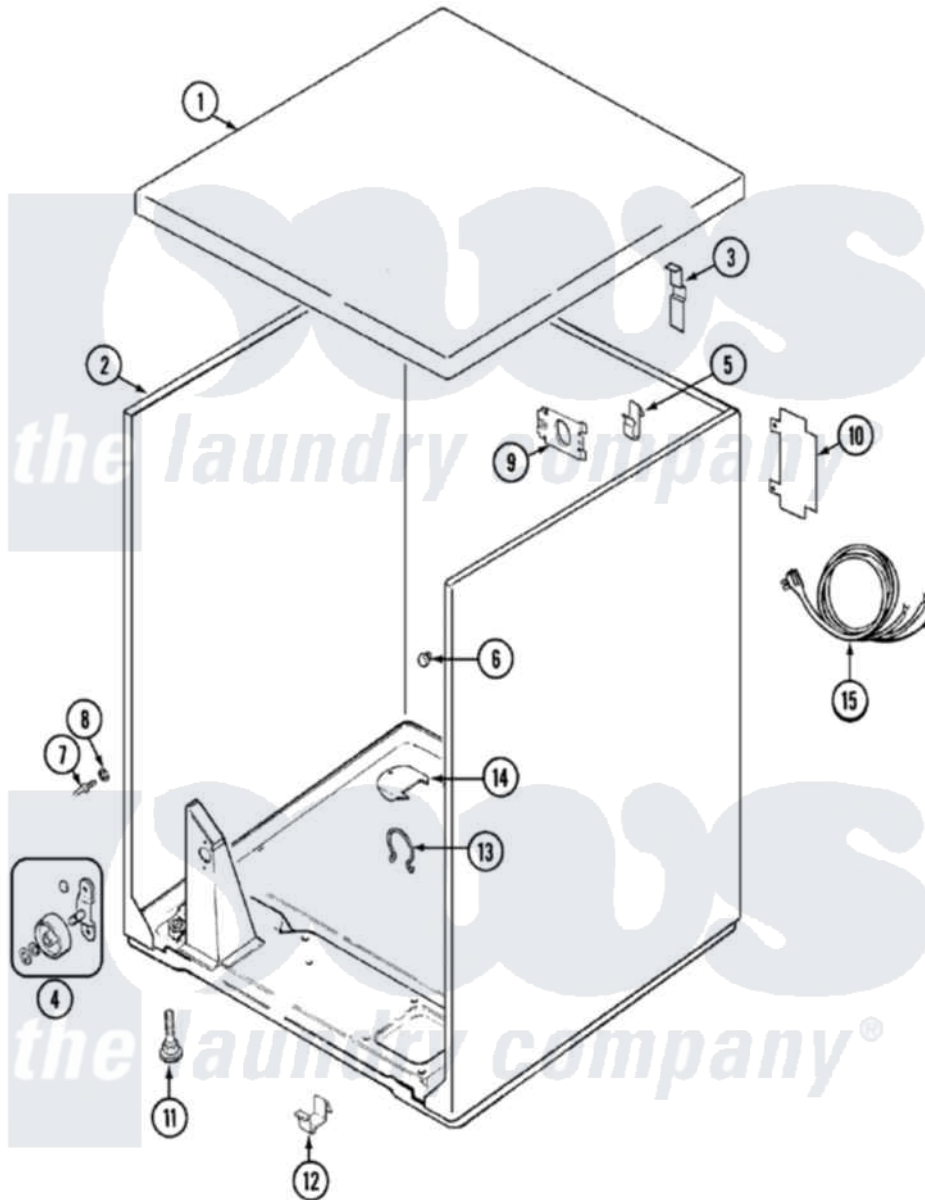

Magic Chef [Residential Magic Chef CYG4000AWW Dryer Parts](#) Parts Diagram 01 - CABINET
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001423			Top, Cabinet
2	53-2559	31001714		Cabinet And Base Assembly
"	31001714			Cabinet And Base Assembly
3	63-5712			Hinge, Cabinet Top
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	LA-1008			Rr Roller Kit
"	LA-1007	12002126		Reinforcement Brace/Glide Kit
5	25-3034			Clip, Wiring
6	33-2653			Bumper, Cabinet
7	53-0643			Pin, Locator
8	53-0200			Sleeve, Locator Pin
"	25-0224	3400029		Nut, Adapter Plate
9	25-7828	489483		Screw 10-32 X 1/2
"	53-0135		Not Available	SUPPORT, POWER CORD
10	53-0284			Cover, Terminal
				Screw, 8A X 3/8 HeX Washer

"	25-7857	90767	Screw, on a 3/8 inch washer Head Tapping
11	63-5519	Not Available	LEG, LEVELING
12	53-0120		Clip, Front Panel
13	25-7027	16515	Clip
14	53-1921		Shield, Wiring
"	25-7741	W10116760	Screw
15	63-6259	31001547	Cord, Power

