


Magic Chef CYG4000AWW 02 - CONTROL PANEL

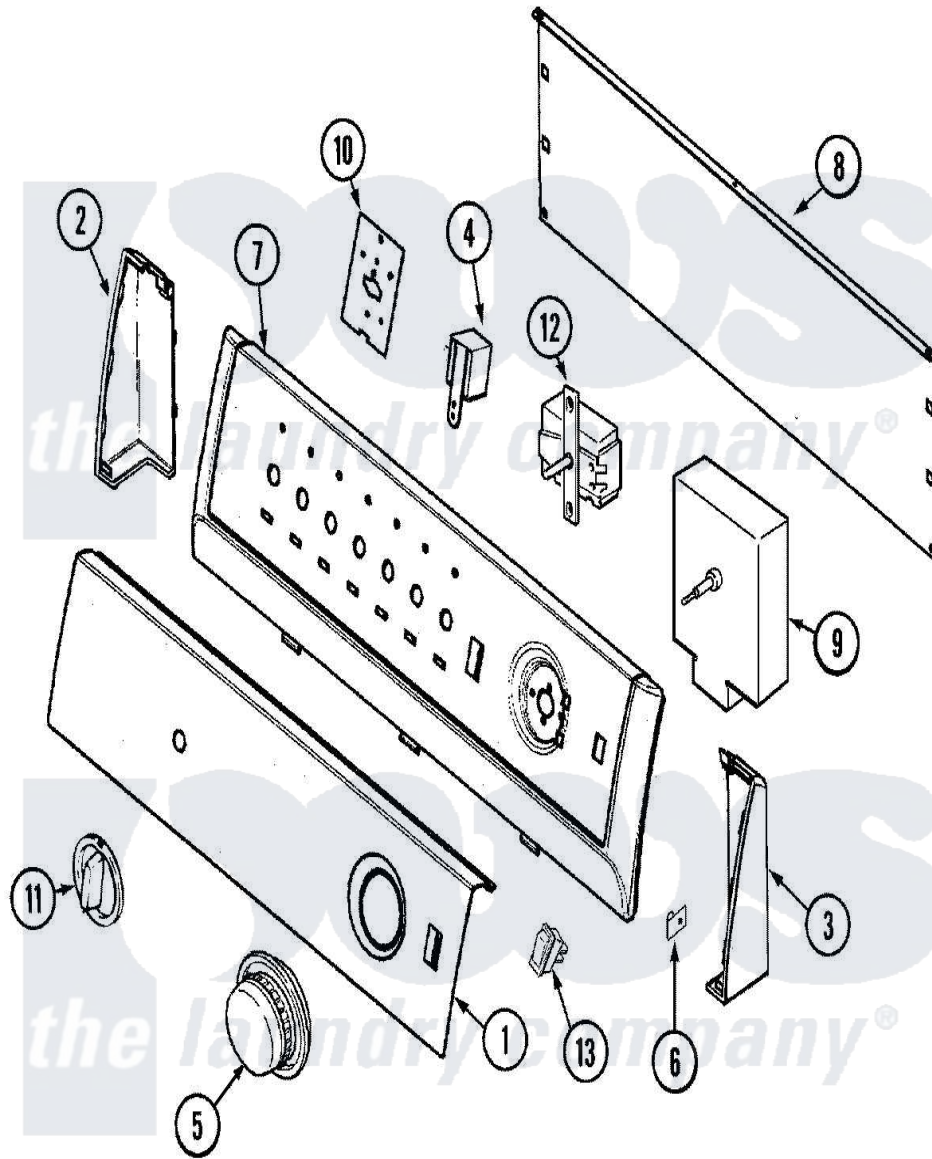

Magic Chef [Residential Magic Chef CYG4000AWW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001384			Panel, Control
2	21001546			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001547			Endcap, Panel
4	53-1639			Buzzer Assembly
5	31001388			Knob/Skirt, Timer
6	25-7851			Speedclip, End Cap To Top
7	21001553			Frame
8	21001527			Shield, Rear
"	25-3457			Screw, Sems
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1815	31001513		Timer
10	21001517			Shield, Control

11	21001544		Knob, Selector	
12	31001348	31001449	Switch, Selector	
13	21001902		Switch, Rocker	
NI	21001419		Not Available	MANUAL, LAUNDERING TIPS
"	31001414		Not Available	MANUAL, USE & CARE
"	31001459		Not Available	MANUAL, USE & CARE (SPAN)

