


Magic Chef DG20F5AM 01 - CONTROL PANEL (REV. A-H)

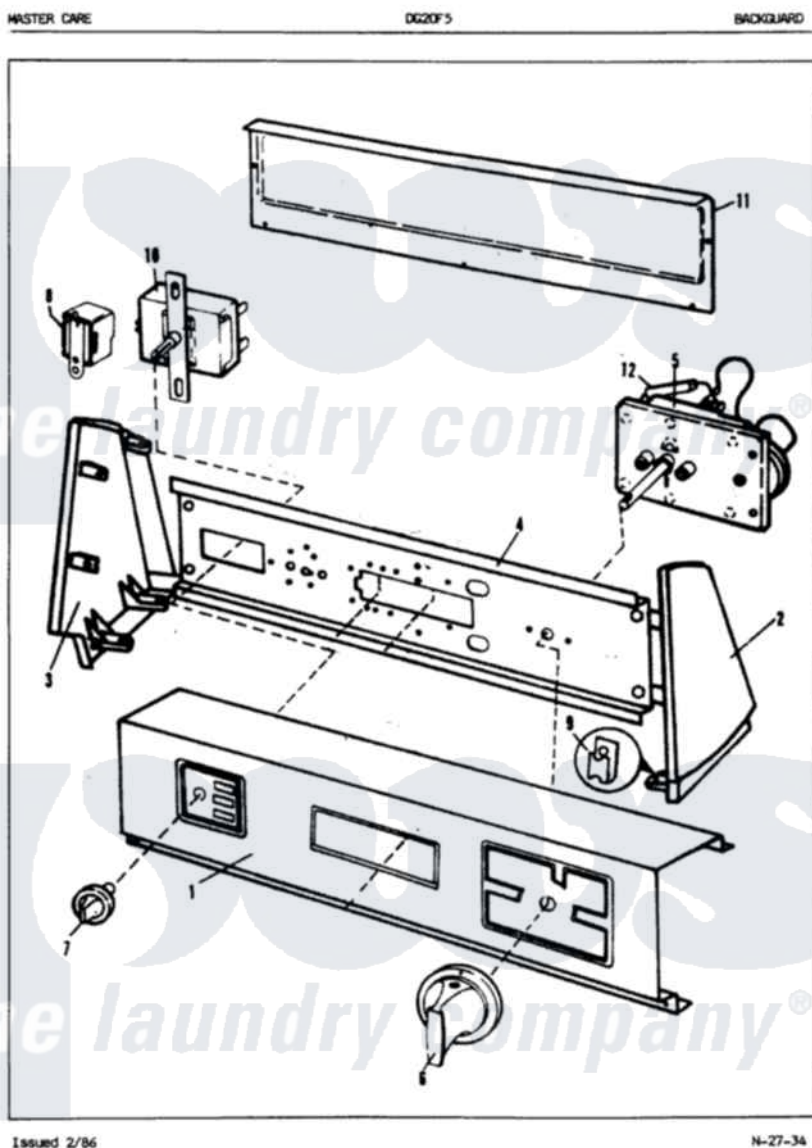

Issued 2/86

N-27-34

Magic Chef [Residential Magic Chef DG20F5AM Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (REV. A-H)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	53-1016		Not Available	CONTROL PANEL
"	53-0825		Not Available	CONTROL PANEL
"	25-7793			Screw
2	53-0265			LH Endcap
3	25-7760			Screw
"	53-0236		Not Available	RH ENDCAP TRIM
"	53-0237		Not Available	LH ENDCAP TRIM
"	53-0264			RH Endcap
4	25-7702			Speedclip, End Cap To Control Panel
"	53-0365	53-1676		Shield, Control
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	53-0545		Not Available	TIMER
"	63-6752		Not Available	TIMER MOTOR

"	53-0656		Not Available	TIMER
"	25-0088	489483		Screw 10-32 X 1/2
6	53-0470		Not Available	TIMER KNOB
"	53-0653	31001219		Knob Ski
"	53-0654	31001219		Knob Ski
"	25-6044			Set Screw
7	35-0281		Not Available	SELECTOR KNOB
"	35-0168		Not Available	SELECTOR KNOB
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6731	53-1639		Buzzer Assembly
9	25-7702			Speedclip, End Cap To Control Panel
10	53-0394	53-1264		Rotary Switch
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
11	25-7851			Speedclip, End Cap To Top
"	25-7852			Speedclip, Rr Shld To End Cap
"	53-0268	21001460		Shield, Rear
"	25-7697	25-2219		Screw
"	25-7435	33002917		Screw, No.10-16
"	25-3457			Screw, Sems
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	34-9487		Not Available	PLATE, REINFORCEMENT

the laundry company[®]

the laundry company[®]