


Magic Chef DG20F5AM 02 - CONTROL PANEL (REV. J)

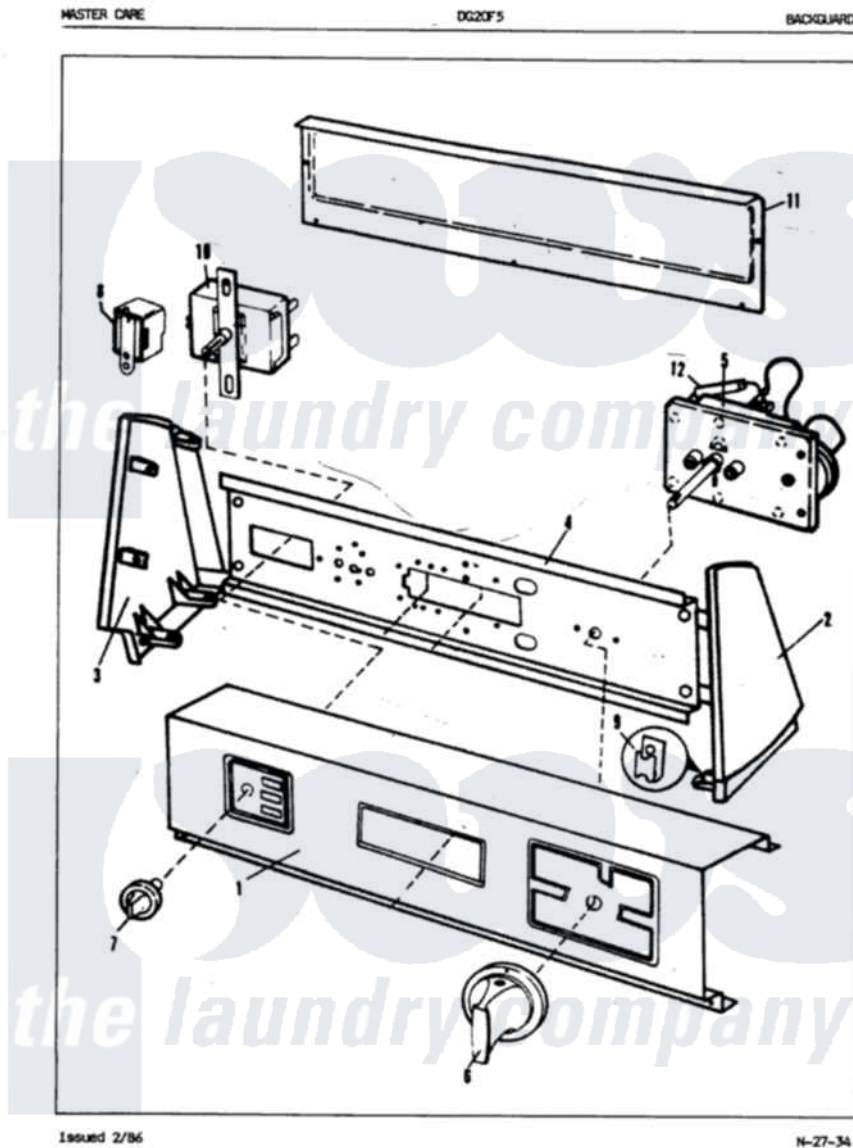

Magic Chef [Residential Magic Chef DG20F5AM Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. J)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	53-0825		Not Available	CONTROL PANEL
"	25-7793			Screw
2	53-0265			LH Endcap
3	25-7760			Screw
"	53-0237		Not Available	LH ENDCAP TRIM
"	53-0264			RH Endcap
"	53-0236		Not Available	RH ENDCAP TRIM
4	53-0365	53-1676		Shield, Control
"	25-7702			Speedclip, End Cap To Control Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	25-0088	489483		Screw 10-32 X 1/2
"	53-0545		Not Available	TIMER
"	63-6752		Not Available	TIMER MOTOR

6	53-0470	Not Available	TIMER KNOB
"	25-6044		Set Screw
7	35-0281	Not Available	SELECTOR KNOB
"	35-0168	Not Available	SELECTOR KNOB
8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6731	53-1639	Buzzer Assembly
9	25-7702		Speedclip, End Cap To Control Panel
10	53-0394	53-1264	Rotary Switch
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
11	34-9487	Not Available	PLATE, REINFORCEMENT
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
"	25-7435	33002917	Screw, No.10-16
"	25-7697	25-2219	Screw
"	25-7852		Speedclip, Rr Shld To End Cap
"	53-0268	21001460	Shield, Rear
"	25-7851		Speedclip, End Cap To Top

