


Magic Chef MDCP1085-A 02 - CABINET & CONTROL PANEL

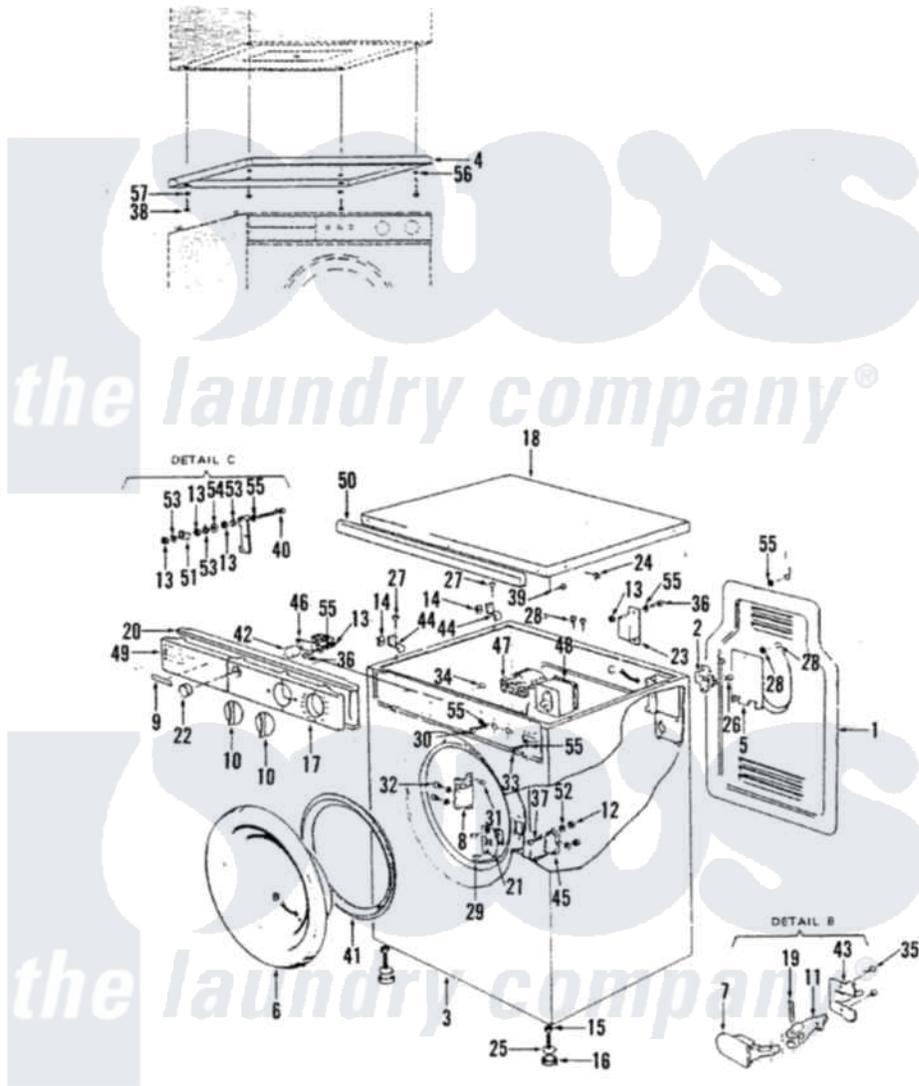

02

Magic Chef [Residential Magic Chef MDCP1085-A Dryer Parts](#) Parts Diagram 02 - CABINET & CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	181750012		Not Available	BACK PANEL
2	116990419		Not Available	TERMINAL BLOCK
3	189500038		Not Available	WH CABINET ASM
4	111100740		Not Available	COVER
5	111100679		Not Available	COVER
6	112990010		Not Available	DOOR ASSEMBLY
7	119802497			Handle Assembly
8	113190122		Not Available	HINGE ASM
9	33-9845		Not Available	NAMEPLATE
10	189990081		Not Available	KNOB
11	182990079		Not Available	DOOR LATCH
12	920134133		Not Available	NUT
13	920113418		Not Available	NUT
14	940073430		Not Available	NUT
15	920115235		Not Available	NUT
16	114400056		Not Available	PAD

17	182990144	Not Available	CONTROL PANEL
18	111100734	Not Available	TOP PANEL
19	113900056		Latch Pin
20	112400396	Not Available	CNTRL MTG PLATE
21	182990097	Not Available	LATCH PLATE
22	112902035	Not Available	PUSHBUTTON
23	186990026	Not Available	RELAY
24	912344102	Not Available	SCREW
25	991170135	Not Available	LEVELER
26	912500100	Not Available	SCREW
27	912353335	Not Available	SCREW
28	995500001	Not Available	SCREW
29	991350557	7101P126-60	Screw, Frame
30	912131137	488234	Screw 8-32 X 1/4
31	912200001	Not Available	SCREW
32	912153130	Not Available	SCREW
33	912131138	Not Available	SCREW
34	911354239	Not Available	SCREW
35	912121136	Not Available	SCREW
36	912133410	Not Available	SCREW
37	912125109	3400409	Screw
38	917143112	Not Available	SCREW
39	912362330	Not Available	SCREW
40	911149414	Not Available	SCREW
41	184410107	Not Available	DOOR SEAL
42	182990081	Not Available	SPACER
43	113800428		Spring
44	181770084	Not Available	SUPPORT
45	186240098	Not Available	DOOR SWITCH
46	186990020		Switch
47	186240097	Not Available	TEMP SEL SWITCH
48	186810022	Not Available	TIMER
49	182990142	Not Available	PANEL TRIM
50	112902354	Not Available	TOP PANEL TRIM
51	111901103	Not Available	WASHER
52	933003511	Not Available	WASHER
53	930024322	Not Available	WASHER
54	930021415	Not Available	WASHER, GROUNDING PLATE
55	930036328	Not Available	WASHER
56	993210561	Not Available	WASHER
57	993041134	Not Available	WASHER

the laundry company[®]