


# Magic Chef W10AA1 01 - CABINET & DOOR

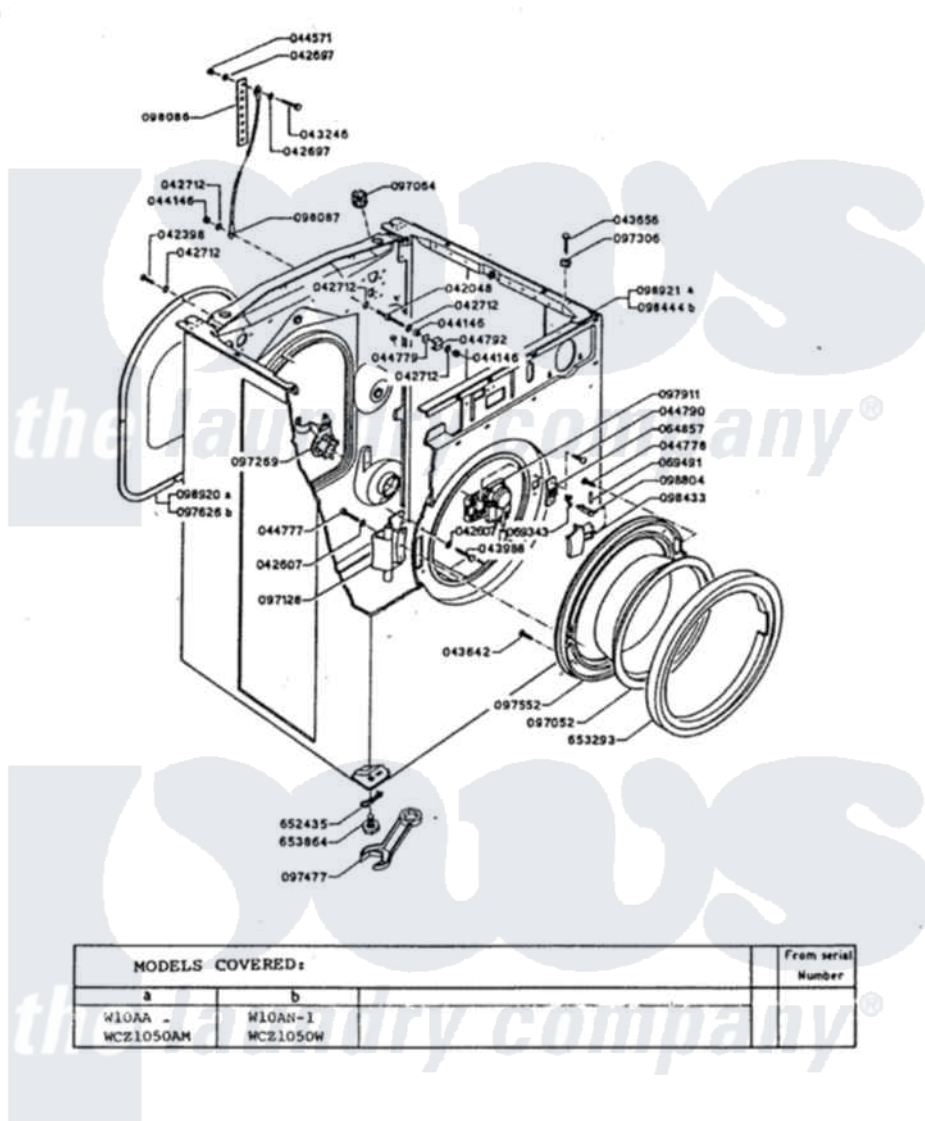

MODELS COVERED:		From serial Number
a	b	
W10AA -	W10AN-1	
WCZ1050AM	WCZ1050W	

FIRST PUBLICATION (4-84)

PM-1526-00

REVISION SHEET 0 (4-84)

B-1

Magic Chef [Residential Magic Chef W10AA1 Washer Parts](#) Parts Diagram 01 - CABINET & DOOR  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	042048		Not Available	SCREW
2	042398		Not Available	SCREW
3	042607		Not Available	WASHER
4	042697		Not Available	LOCKWASHER
5	042712		Not Available	LOCKWASHER
6	043246		Not Available	BOLT
7	Y043642	<a href="#">414004-35</a>		Screw
8	043656		Not Available	SCREW
9	043988		Not Available	SCREW
10	044146		Not Available	NUT
11	044571		Not Available	NUT
12	044777		Not Available	SCREW
13	Y044778	<a href="#">74002481</a>		Screw
14	044779		Not Available	NUT
15	Y044790	<a href="#">99002757</a>		Screw
16	044792		Not Available	CLAMP

17	064857	Not Available	FLANGE
18	069343	Not Available	SPRING
19	069491	Not Available	CATCH PIN
20	097052	Not Available	DOOR GLASS
21	097064	Not Available	OUTLT HOSE SUPT
22	<a href="#">097128</a>		Door Hinge Assembly
23	097269	Not Available	HOSE CLAMP
24	097306	Not Available	LID FRONT PIECE
25	097477	Not Available	LEVELER WRENCH
26	097552	Not Available	DOOR FLANGE
28	Y097911	Not Available	MICROSWITCH
29	098086	Not Available	PLATE
30	098087	Not Available	GROUND WIRE
31	<a href="#">098433</a>		Door Handle
33	098804	Not Available	DOOR CATCH
34	098920	Not Available	BACK PANEL
35	098921	Not Available	CABINET
36	652435	Not Available	LEVELER CLIP
37	653293	Not Available	DOOR FRAME
38	653864	Not Available	LEVELER

