


# Magic Chef W10AA1 06 - PULLEY

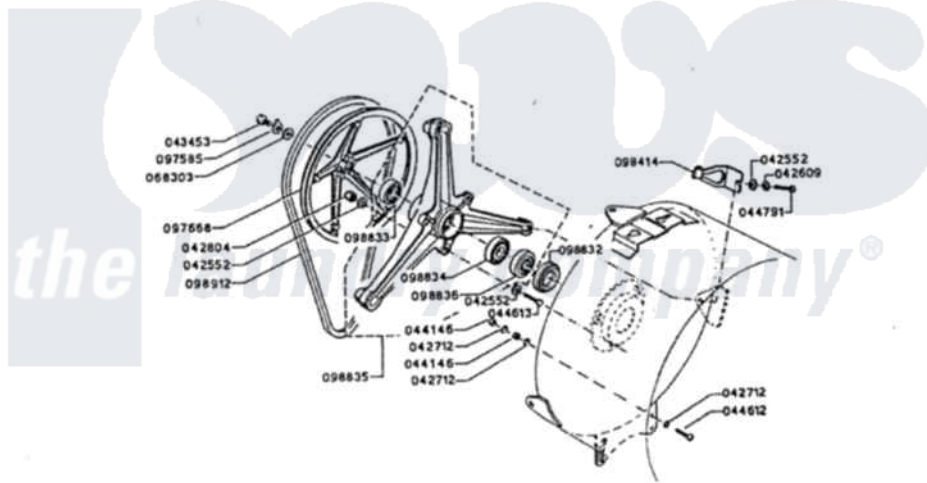

MODELS COVERED:		From serial Number
a	b	
W10AA-1	W10AN-1	
WC21050AH	WC21050W	

FIRST PUBLICATION (4-84)

PM-1526-00

REVISION SHEET 0 (4-84)

A-8

Magic Chef [Residential Magic Chef W10AA1 Washer Parts](#) Parts Diagram 06 - PULLEY

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	042552		Not Available	FLAT WASHER
2	042609		Not Available	WASHER
3	042712		Not Available	LOCKWASHER
4	042804		Not Available	NUT
5	043453		Not Available	SET SCREW
6	044146		Not Available	NUT
7	044612		Not Available	SCREW
8	044613		Not Available	SCREW
9	044791		Not Available	SCREW
10	068303		Not Available	END
11	097585		Not Available	SAFETY RING
12	097668		Not Available	PULLEY
13	098414		Not Available	HOSE SUPPORT
14	098832		Not Available	GASKET TRIM
15	098833		Not Available	BEARING
16	098834		Not Available	BEARING

17	098835	Not Available	TUB CROSSPIECE
18	098836	Not Available	GASKET
19	098912	Not Available	BELT

