


Magic Chef W14EN1 02 - CONTROL PANEL

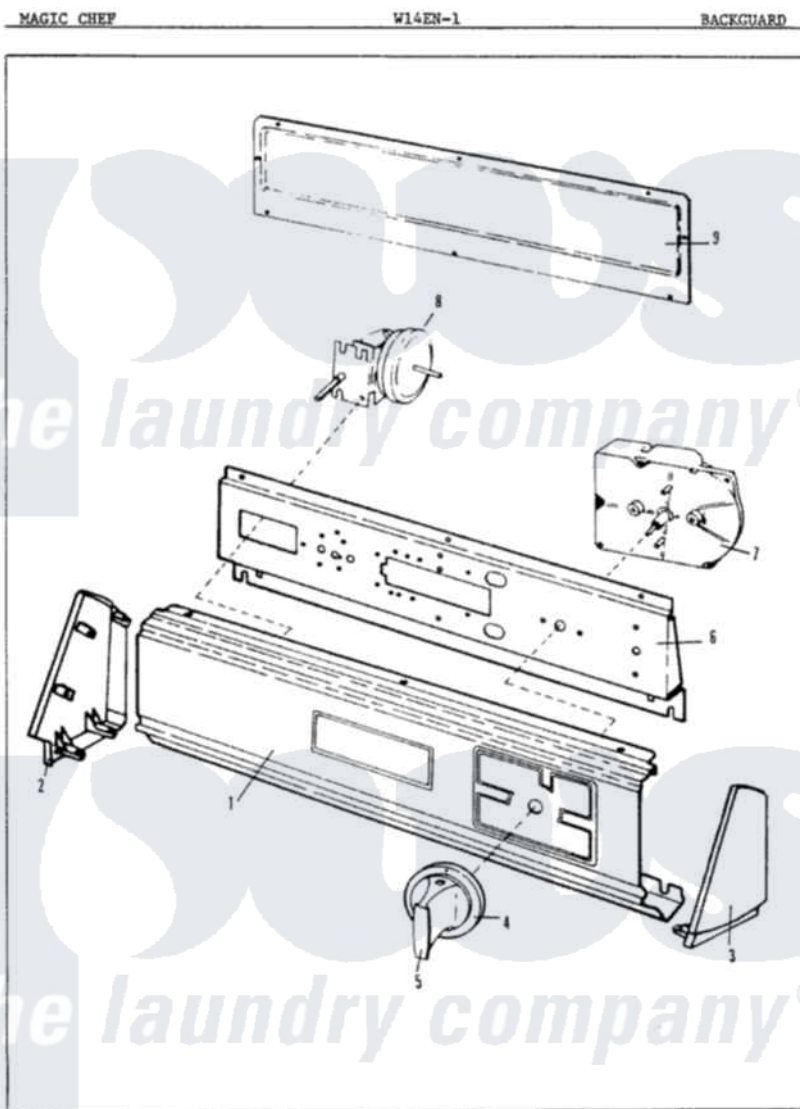

Magic Chef [Residential Magic Chef W14EN1 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|--------------------------|---------------|---|
| 1 | 35-0261 | | Not Available | CONTROL PANEL |
| " | 25-7793 | | | Screw |
| 2 | 53-0265 | | | LH Endcap |
| 3 | 53-0278 | | Not Available | TRIM, END CAP (LT) |
| " | 53-0277 | | Not Available | TRIM, END CAP (RT) |
| " | 25-7760 | | | Screw |
| " | 53-0264 | | | RH Endcap |
| " | 25-7702 | | | Speedclip, End Cap To Control Panel |
| 4 | 35-0379 | 12500057 | | Knob Ski |
| 5 | 35-0496 | 12500057 | | Knob Ski |
| " | 35-0148 | | Not Available | KNOB |
| " | 25-6044 | | | Set Screw |
| 6 | 53-0365 | 53-1676 | | Shield, Control |
| " | 25-3092 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 7 | 35-0033 | | | Timer |

| | | | |
|---|-------------------------|--------------------------|--|
| " | 35-0115 | | Timer Motor 1 RPM |
| " | 25-0088 | 489483 | Screw 10-32 X 1/2 |
| " | 35-0484 | | Not Available TIMER |
| 8 | 25-3092 | 90767 | Screw, 8A X 3/8 HeX Washer Head Tapping |
| " | 35-0110 | | Not Available PRESSURE SWITCH |
| " | 35-0781 | | Not Available PRESSURE SWITCH |
| 9 | 25-7851 | | Speedclip, End Cap To Top |
| " | 25-7852 | | Speedclip, Rr Shld To End Cap |
| " | 25-7697 | 25-2219 | Screw |
| " | 25-7592 | | Not Available SCREW |
| " | 25-3092 | 90767 | Screw, 8A X 3/8 HeX Washer Head Tapping |
| " | 53-0268 | 21001460 | Shield, Rear |
| " | 34-9487 | | Not Available PLATE, REINFORCEMENT |

