


Magic Chef W14EN1 03 - EXTERIOR

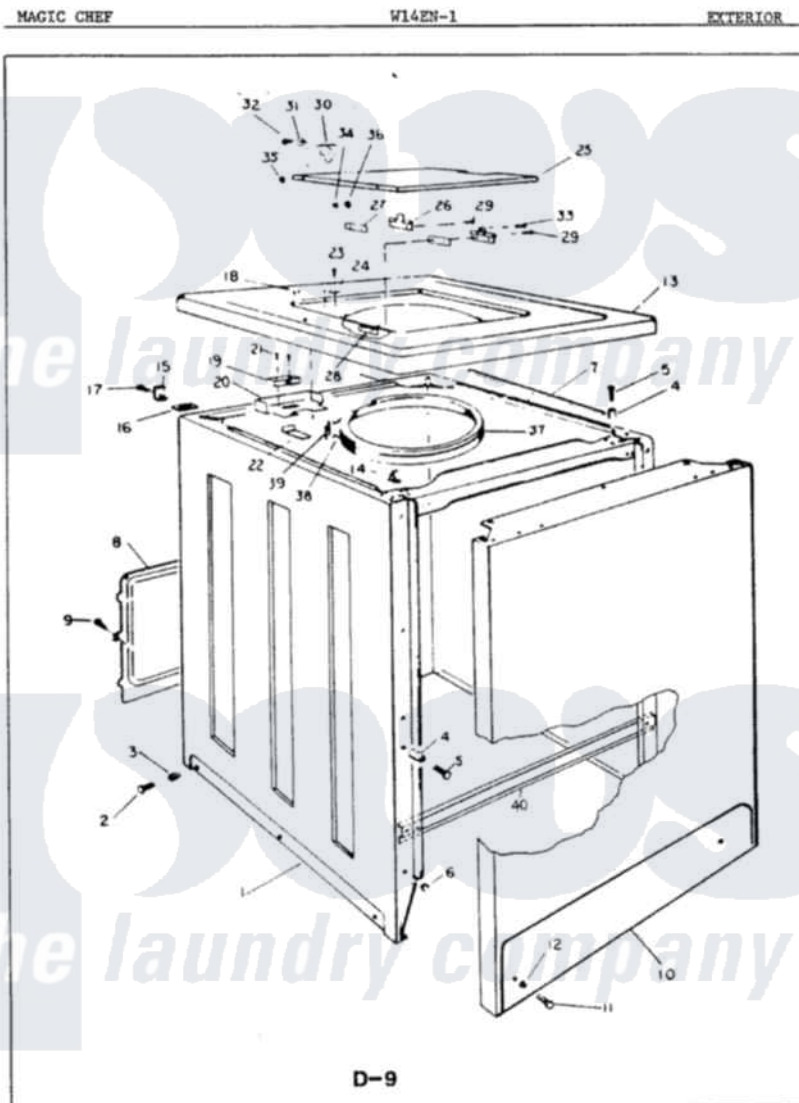

Magic Chef [Residential Magic Chef W14EN1 Washer Parts](#) Parts Diagram 03 - EXTERIOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0061		Not Available	CABINET BODY
2	25-7001	308685		Side Trim)
3	33-2088		Not Available	SLEEVE
"	25-7458	308685		Side Trim)
4	34-9701			Guide, Cabinet
5	25-6109			Screw
6	33-2653			Bumper, Cabinet
7	33-9948		Not Available	CUSHION STRIP
8	33-8687		Not Available	REAR SHIELD
9	Y00000000		Not Available	SEE NOTE SCREW (PURCHASE LOCALLY)
10	35-0056		Not Available	FRONT PANEL
11	25-7001	308685		Side Trim)
12	Y00000000		Not Available	SEE NOTE WASHER (PURCHASE LOCALLY)
13	35-0291		Not Available	CABINET TOP
14	25-7285			Clip

15	33-7460	35-2846	Hinge, Cabinet Top
16	33-0930		Pad, Top Hinge
17	25-7732	681414	Screw, 10AB X 1/2
18	33-8911	12001187	Kit, Lid Switch Assembly
19	33-8289	12001187	Kit, Lid Switch Assembly
20	Y00000000		Not Available SEE NOTE SCREW (PURCHASE LOCALLY)
21	33-9063	12001187	Kit, Lid Switch Assembly
22	25-7463	7101P012-60	Screw
23	25-7436		Nylite Washer
24	33-9278		Not Available CLOTHES DOOR
25	43-0077		Not Available BUSHING
26	43-0059		Not Available RH DOOR HINGE
27	43-0306		Not Available HINGE PAD
28	25-7614		Screw
29	25-7436		Nylite Washer
30	33-7453	35-0581	Bumper, Door
31	43-0057		Actuator, Door Switch
32	25-7436		Nylite Washer
33	25-7438		Screw
34	25-7772		Not Available BUSHING
35	33-6093		Not Available RETAINING RING
36	33-0767		Spring
37	33-9399		Not Available SPLASH GUARD
"	33-9948		Not Available CUSHION STRIP
38	35-0445		Not Available CABT BRACE
"	25-7752	3196169	Screw, Element

the laundry company[®]

the laundry company[®]