


# Magic Chef W14EN1 05 - TUB

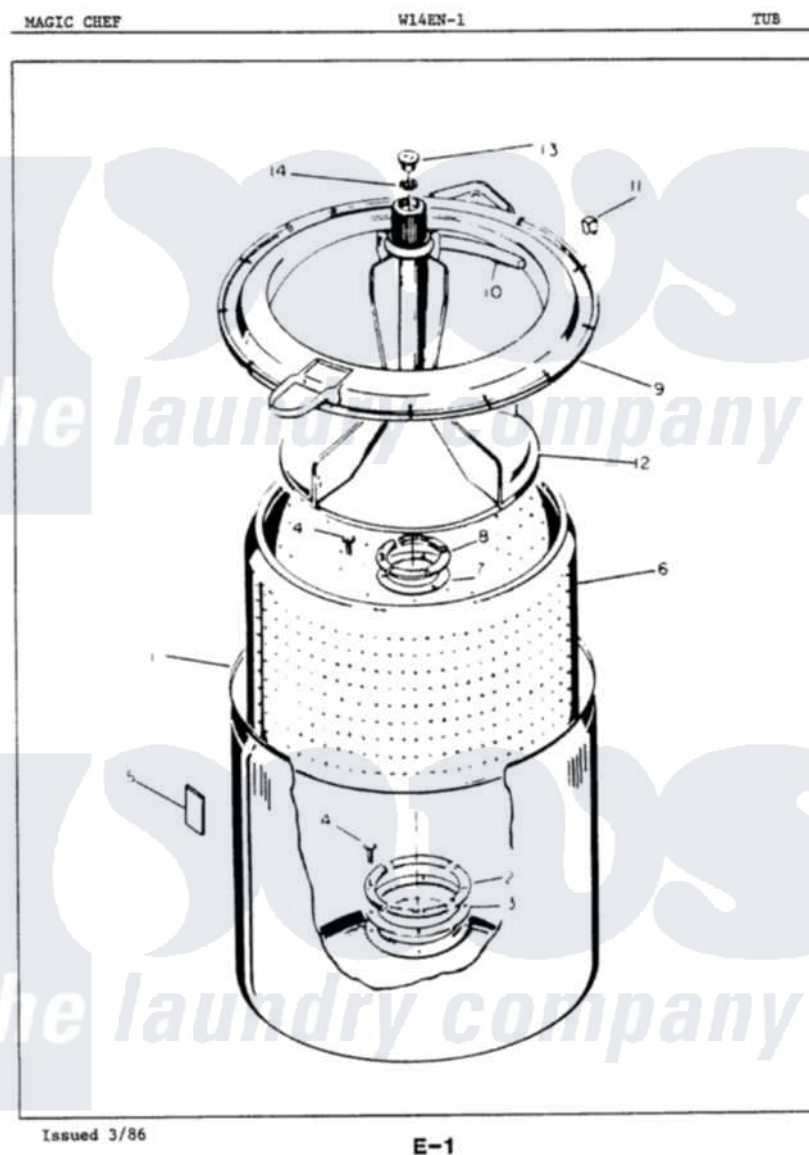

Magic Chef [Residential Magic Chef W14EN1 Washer Parts](#) Parts Diagram 05 - TUB  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-9392		Not Available	TUB ASSEMBLY
2	33-8800	<a href="#">33-8800K</a>		Plate
3	<a href="#">33-6905</a>			Gasket
4	25-7783	<a href="#">4356852</a>		Screw
5	33-3232	<a href="#">35-0538</a>		Pad
6	35-0003		Not Available	BASKET ASM
"	33-9567	<a href="#">33-9500N</a>		Basket Kit
7	<a href="#">33-6902</a>			Gasket
"	<a href="#">33-8959</a>			Gasket
8	33-8799		Not Available	REINF PLATE
9	<a href="#">33-6046</a>			Tub Top
10	<a href="#">33-3055</a>			Gasket
11	<a href="#">25-7748</a>			Clip
12	35-0093	<a href="#">33-4352</a>		Agitator
13	<a href="#">33-6241</a>			Cap
14	<a href="#">25-7330</a>			Rubber Washer