


Magic Chef W14JN1 05 - CONTROL PANEL (REV. E-J)

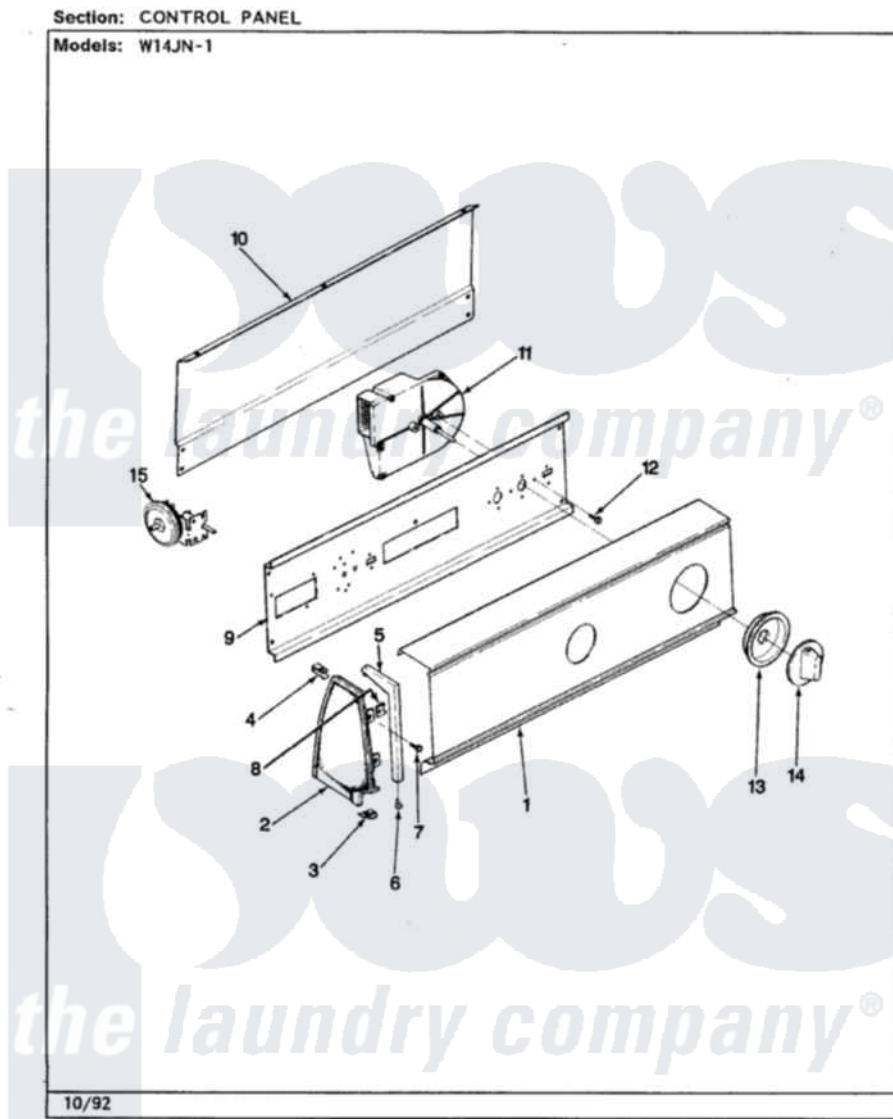

Magic Chef [Residential Magic Chef W14JN1 Washer Parts](#) Parts Diagram 05 - CONTROL PANEL (REV. E-J)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
"	35-2171		Not Available	CONTROL PANEL
2	35-2488	21001452		Cap- End
"	35-2487	21001451		Cap- End
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	25-7702		Speedclip, End Cap To Control Panel
9	53-1676		Shield, Control
10	35-2688	21001460	Shield, Rear
"	25-7853	25-7933	Ring, Retaining
"	25-3457		Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
11	35-2208	Not Available	TIMER
12	25-0205	216412	Screw, Bracket To Timer
13	35-2254	12500058	Knob Ski
14	35-2486	12500058	Knob Ski
15	35-2251	Not Available	PRESSURE SWITCH
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-3284	Not Available	PRESSURE SWITCH (FIXED)
16	35-2518	Not Available	MANUAL, USE & CARE

