


Magic Chef W14JN1 07 - EXTERIOR (REV. A-D)

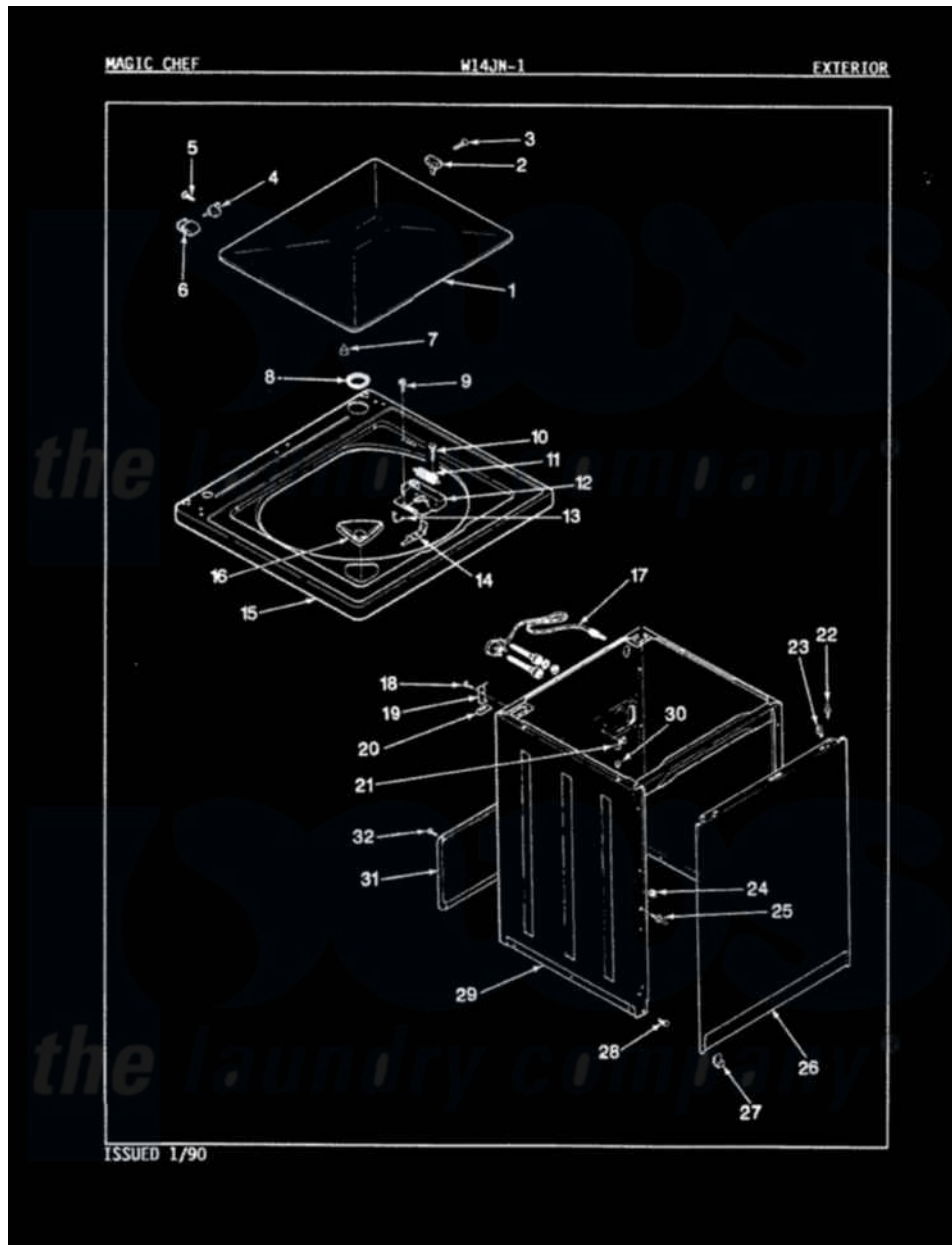

Magic Chef Residential Magic Chef W14JN1 Washer Parts Parts Diagram 07 - EXTERIOR (REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2103			Clother Door
2	25-7436			Nylite Washer
"	43-0057			Actuator, Door Switch
3	25-7438			Screw
4	25-7086	Y0308025		Washer, Stainless Steel
"	35-2045			Pin, Hinge
5	25-7455	99002757		Screw
6	33-6956			Hinge
"	25-7455	99002757		Screw
"	33-6957			Hinge Pad
7	35-0581			Bumper, Door
8	35-2063			Bushing, Insulator
9	25-7463	7101P012-60		Screw
10	25-7437	40040701		Screw, Tapping No.6b-20
11	33-8911	12001187		Kit, Lid Switch Assembly
"	33-9064	12001187		Kit, Lid Switch Assembly

12	33-8289	12001187	Kit, Lid Switch Assembly
13	25-7878		Clip
14	34-9701		Guide, Cabinet
"	33-9063	12001187	Kit, Lid Switch Assembly
15	35-2737		Not Available
			CABINET TOP (S.O. W/O BL. DISP
16	W10124350		Not Available
			NOT REQUIRED PART OR SEE NOTE
17	35-0680		Not Available
			CORD, POWER
18	25-7893		Screw
19	33-7450	35-2846	Hinge, Cabinet Top
20	33-0930		Pad, Top Hinge
21	33-6099		Clamp
22	53-0643		Pin, Locator
23	34-9701		Guide, Cabinet
24	25-0224	3400029	Nut, Adapter Plate
25	53-0643		Pin, Locator
26	35-2084		Panel, Front
27	53-0120		Clip, Front Panel
"	25-7732	681414	Screw, 10AB X 1/2
28	33-2653		Bumper, Cabinet
29	35-2106	21001871	Cabinet
30	33-2653		Bumper, Cabinet
31	35-2108	21001871	Cabinet
32	25-7733	681414	Screw, 10AB X 1/2

the laundry company[®]

the laundry company[®]