


# Magic Chef W18DA2 05 - TUB

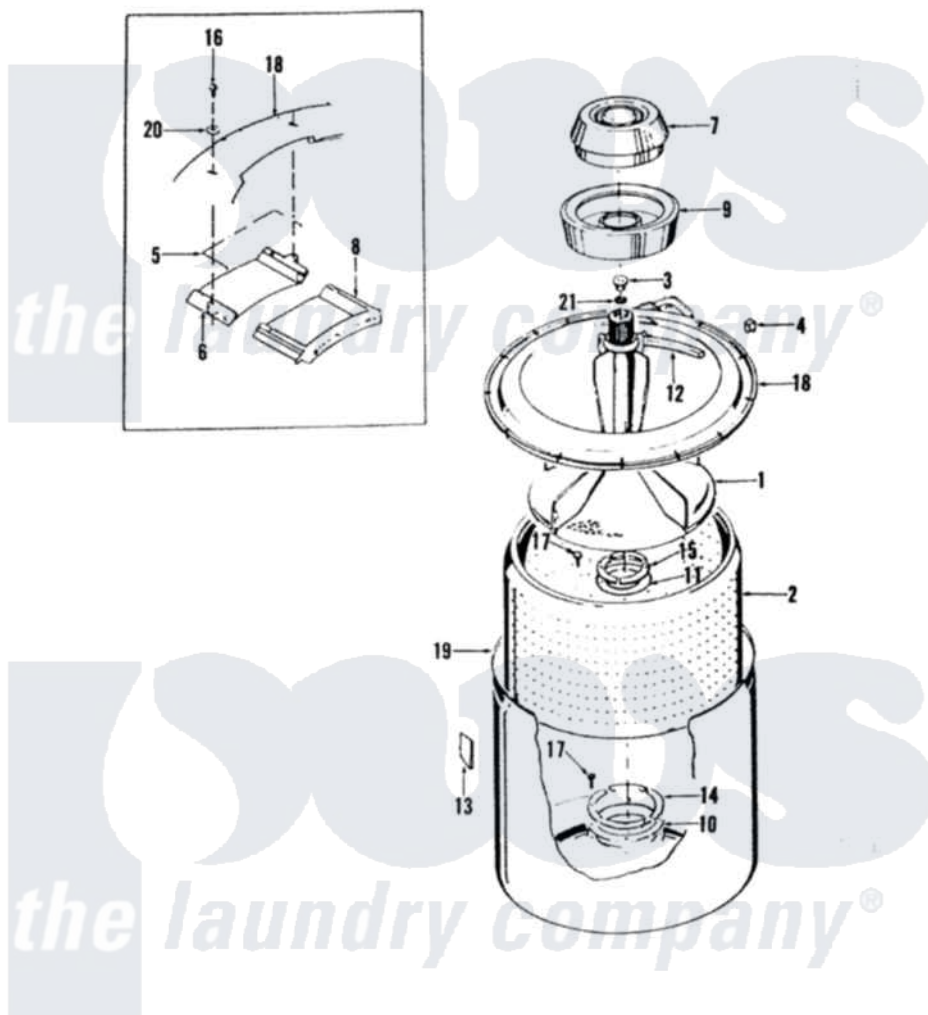

FIRST PUBLICATION (11-84)

PM-1522-00

REVISION SHEET 0 (11-84)

C-9

Magic Chef [Residential Magic Chef W18DA2 Washer Parts](#) Parts Diagram 05 - TUB  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-5983		Not Available	AGITATOR
2	33-9566	<a href="#">33-9500N</a>		Basket Kit
3	<a href="#">33-6241</a>			Cap
4	<a href="#">25-7748</a>			Clip
5	33-6521		Not Available	CLIP
6	33-8265		Not Available	DISPENSER BASE
8	33-8264		Not Available	DISPENSER ASSEMB
9	33-6107	<a href="#">LA-1012</a>		Lint Filter Kit
10	<a href="#">33-6905</a>			Gasket
11	<a href="#">33-8959</a>			Gasket
12	<a href="#">33-3055</a>			Gasket
13	33-3232	<a href="#">35-0538</a>		Pad
14	33-8800	<a href="#">33-8800K</a>		Plate
15	33-8799		Not Available	REINF PLATE
16	25-7082	<a href="#">400022-1</a>		Screw
17	25-7783	<a href="#">4356852</a>		Screw

18

[33-6524](#)

Tub Top

19

33-9392

Not Available

TUB ASSEMBLY

20

25-7224

Not Available

FLAT WASHER

21

[25-7330](#)

Rubber Washer

