


Magic Chef W18DY2 02 - CONTROL PANEL

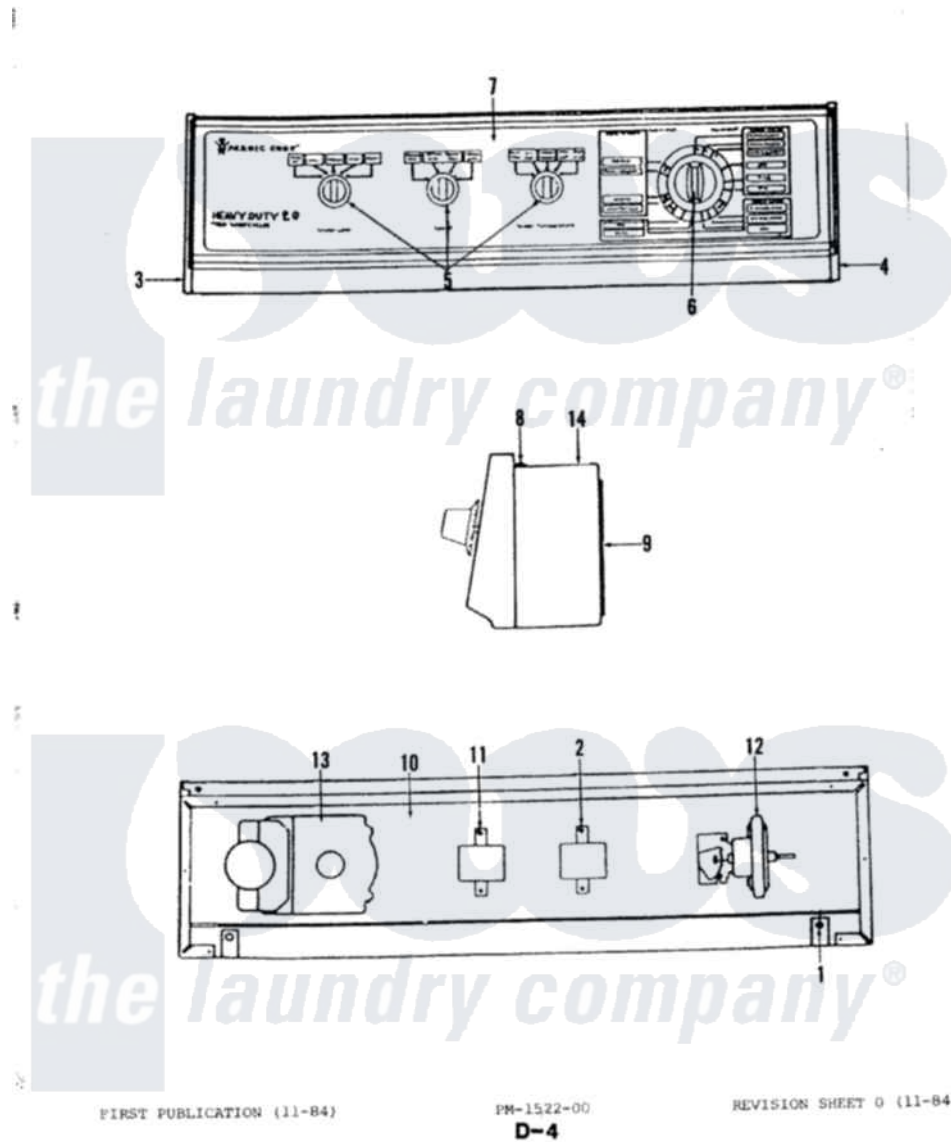

FIRST PUBLICATION (11-84)

PM-1522-00

REVISION SHEET 0 (11-84)

D-4

Magic Chef [Residential Magic Chef W18DY2 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7461		Not Available	CLIP
3	33-6765			LH End Cap
4	33-6766			RH End Cap
5	33-9618		Not Available	SELECTOR KNOB
6	33-9703		Not Available	KNOB ASM
"	33-8437	RA43882-1		Timer
7	33-9958		Not Available	CONTROL PANEL
"	25-7496	25-7760		Screw
8	25-0205	216412		Screw, Bracket To Timer
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-6044			Set Screw
"	25-7649	910187		Screw
9	33-8909		Not Available	SHIELD
10	33-9367		Not Available	SHIELD
12	33-6937			Selector Switch
"	33-9732			Pressure Switch

13	25-0129	Not Available	CODE H
"	33-8423	Not Available	TIMER
14	33-9668-25	Not Available	WRAPPER

