


Magic Chef W18DY2 03 - EXTERIOR

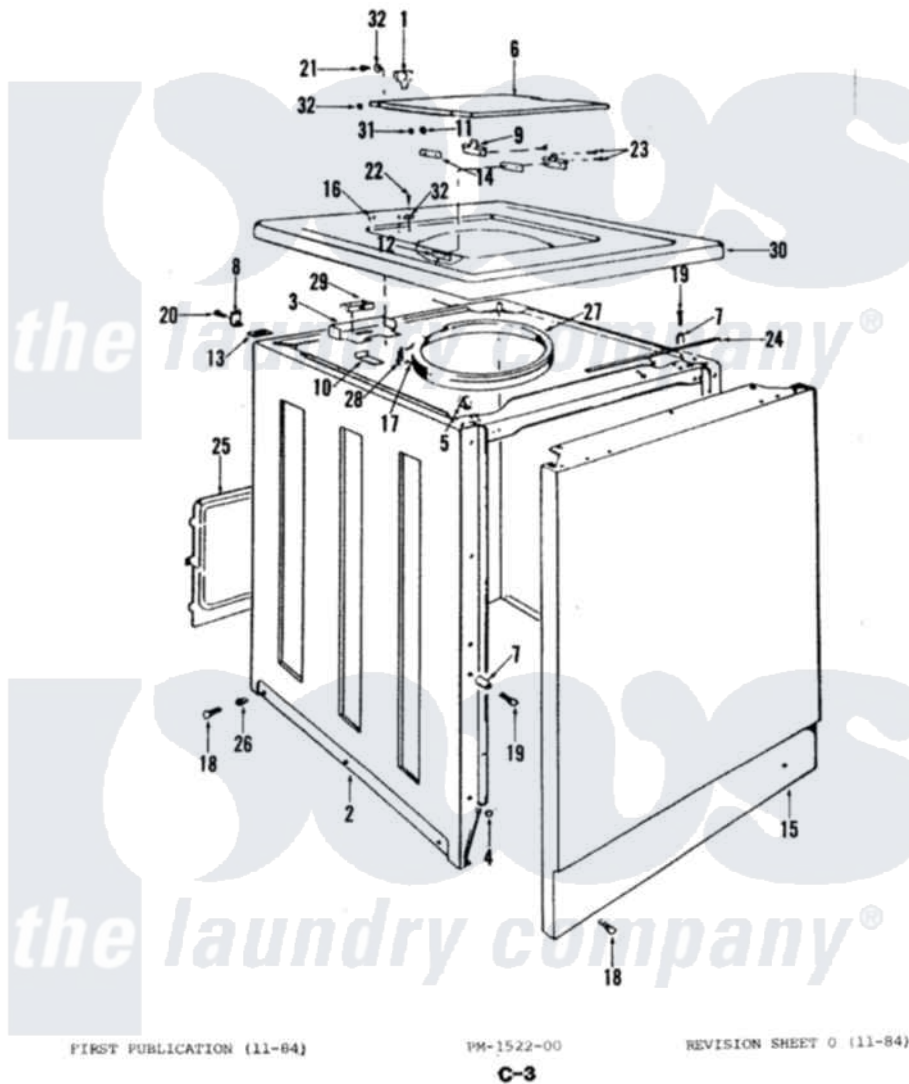

Magic Chef [Residential Magic Chef W18DY2 Washer Parts](#) Parts Diagram 03 - EXTERIOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	43-0057			Actuator, Door Switch
2	33-6068-25		Not Available	CABINET BODY
3	33-8289	12001187		Kit, Lid Switch Assembly
4	33-2653			Bumper, Cabinet
5	25-7285			Clip
6	33-7929-25		Not Available	CLOTHES DOOR
7	34-9701			Guide, Cabinet
8	33-7450	35-2846		Hinge, Cabinet Top
9	33-6956			Hinge
10	33-8828	12001187		Kit, Lid Switch Assembly
11	25-8057		Not Available	PLASTIC NUT
12	33-8058		Not Available	SPEEDNUT
13	33-0930			Pad, Top Hinge
14	33-6957			Hinge Pad
15	33-9255-25		Not Available	FRONT PANEL
16	33-2653			Bumper, Cabinet

17	33-6093		Not Available	RETAINING RING
18	25-7001	308685		Side Trim)
19	25-6109			Screw
20	25-7732	681414		Screw, 10AB X 1/2
21	25-7438			Screw
22	25-7463	7101P012-60		Screw
"	25-7458	308685		Side Trim)
23	25-7455	99002757		Screw
24	33-9948		Not Available	CUSHION STRIP
25	33-8687		Not Available	REAR SHIELD
26	33-2088		Not Available	SLEEVE
27	33-6092		Not Available	SPLASH GUARD
28	33-0767			Spring
29	33-9064	12001187		Kit, Lid Switch Assembly
30	33-9362-25		Not Available	CABINET TOP
31	25-7086	Y0308025		Washer, Stainless Steel
32	25-7436			Nylite Washer

