


Magic Chef W18DY2 05 - TUB

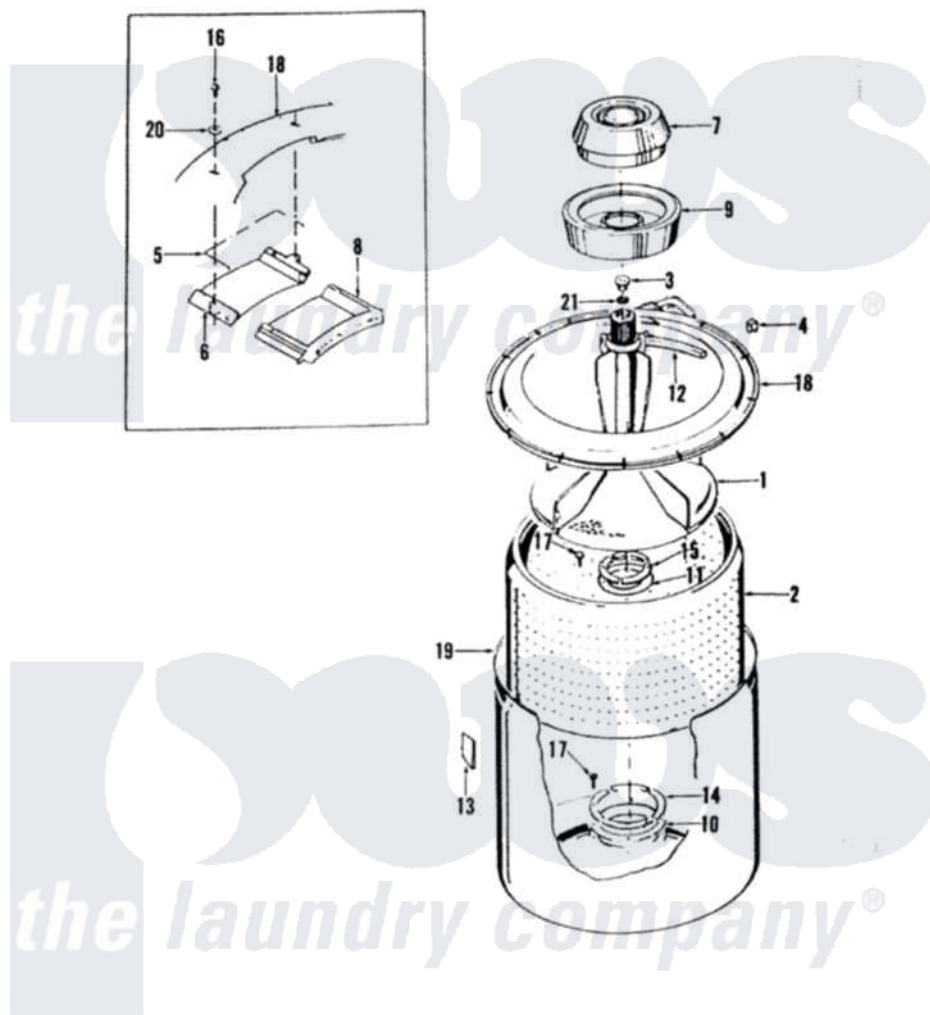

FIRST PUBLICATION (11-84)

PM-1522-00

REVISION SHEET 0 (11-84)

C-9

Magic Chef [Residential Magic Chef W18DY2 Washer Parts](#) Parts Diagram 05 - TUB
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-5983		Not Available	AGITATOR
2	33-9566	33-9500N		Basket Kit
3	33-6241			Cap
4	25-7748			Clip
5	33-6521		Not Available	CLIP
6	33-8265		Not Available	DISPENSER BASE
8	33-8264		Not Available	DISPENSER ASSEMB
9	33-6107	LA-1012		Lint Filter Kit
10	33-6905			Gasket
11	33-8959			Gasket
12	33-3055			Gasket
13	33-3232	35-0538		Pad
14	33-8800	33-8800K		Plate
15	33-8799		Not Available	REINF PLATE
16	25-7082	400022-1		Screw
17	25-7783	4356852		Screw

18

[33-6524](#)

Tub Top

19

33-9392

Not Available

TUB ASSEMBLY

20

25-7224

Not Available

FLAT WASHER

21

[25-7330](#)

Rubber Washer

