


Magic Chef W18EN2 02 - CONTROL PANEL

MAGIC CHEF W18EN-2 BACKGUARD

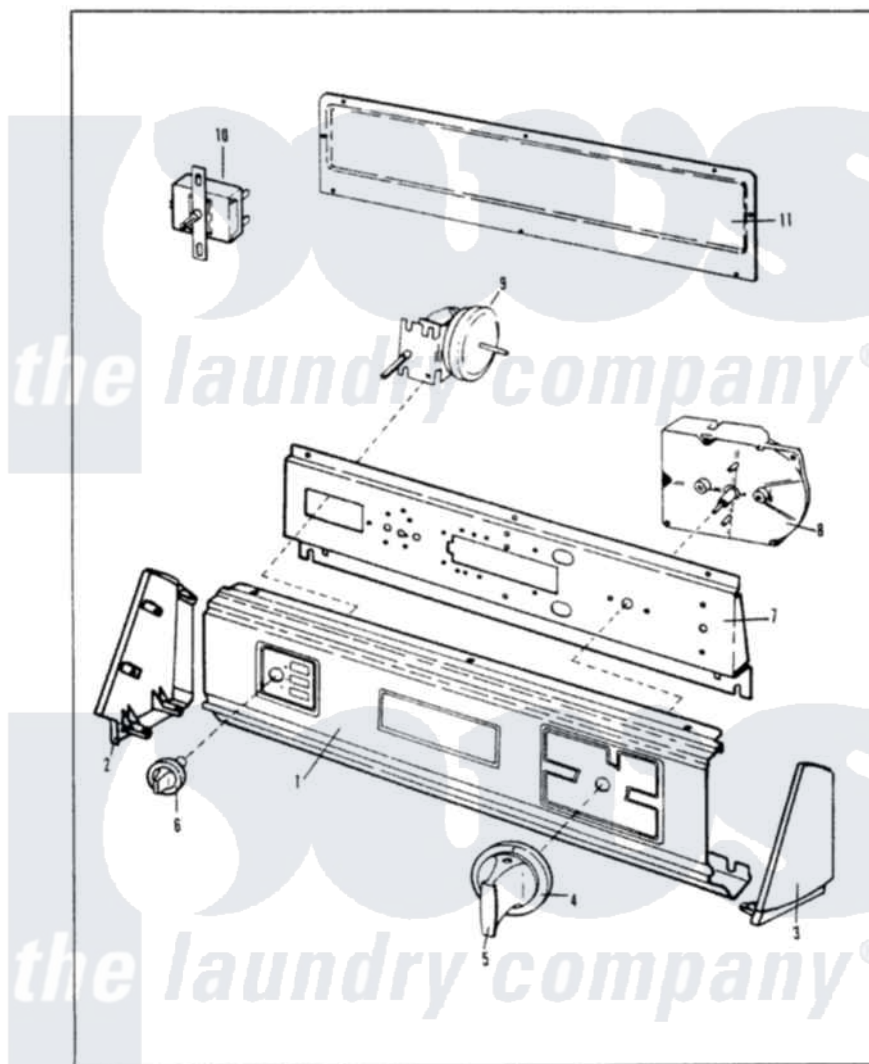

Issued 4/86

G-8

Magic Chef [Residential Magic Chef W18EN2 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0263		Not Available	CONTROL PANEL
"	25-7793			Screw
2	53-0265			LH Endcap
3	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
"	25-7760			Screw
"	53-0264			RH Endcap
"	25-7702			Speedclip, End Cap To Control Panel
4	35-0318		Not Available	HUB/SKIRT ASM
5	25-6044			Set Screw
"	35-0498	12500058		Knob Ski
"	35-0149		Not Available	TIMER KNOB
6	35-0452		Not Available	SELECTOR KNOB
7	53-0365	53-1676		Shield, Control
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	33-9803		Timer
"	35-0491		Timer
"	35-0117		Timer Motor 1/2rpm
"	25-0088	489483	Screw 10-32 X 1/2
9	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0112	35-0782	Pressure Switch
10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0119		Rotary Switch
11	25-7851		Speedclip, End Cap To Top
"	25-7852		Speedclip, Rr Shld To End Cap
"	25-7697	25-2219	Screw
"	25-7592	Not Available	SCREW
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0268	21001460	Shield, Rear
"	34-9487	Not Available	PLATE, REINFORCEMENT

