


Magic Chef W18EN2 03 - EXTERIOR

MAGIC CHEF W18EN-2 EXTERIOR

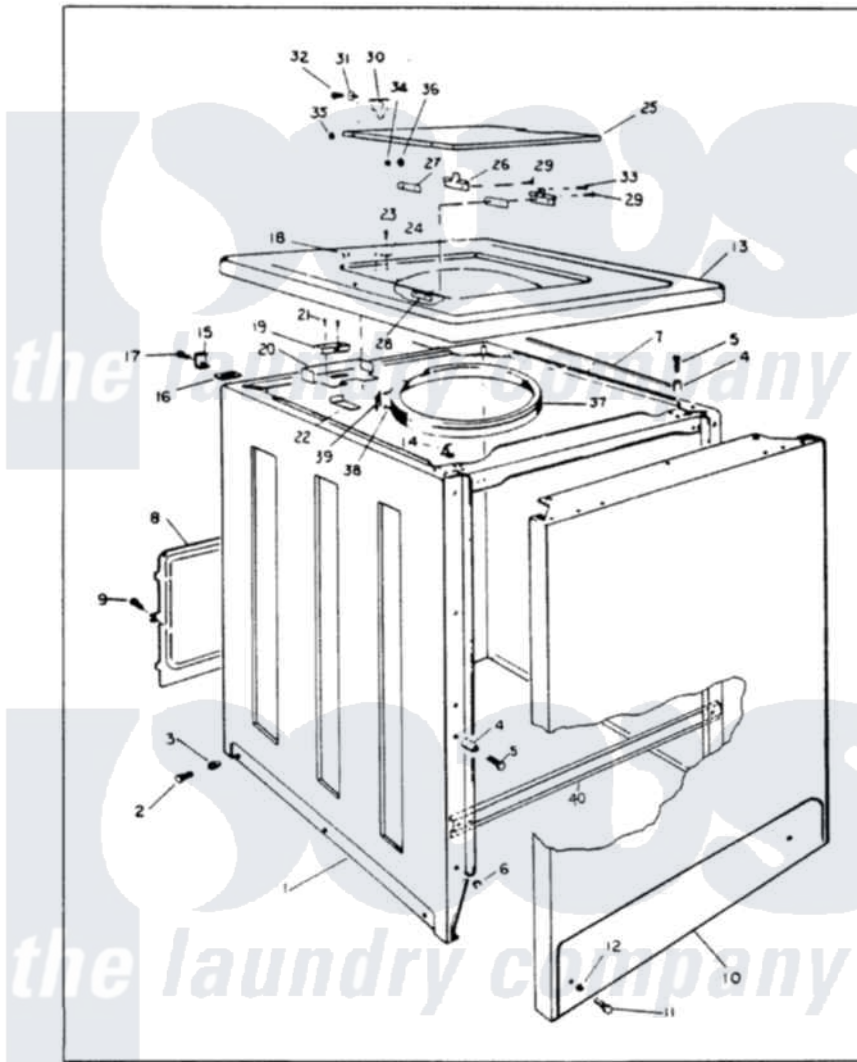

Issued 4/86

F-10

Magic Chef [Residential Magic Chef W18EN2 Washer Parts](#) Parts Diagram 03 - EXTERIOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0061		Not Available	CABINET BODY
2	25-7001	308685		Side Trim)
3	33-2088		Not Available	SLEEVE
"	25-7458	308685		Side Trim)
4	34-9701			Guide, Cabinet
5	25-6109			Screw
6	33-2653			Bumper, Cabinet
7	33-9948		Not Available	CUSHION STRIP
8	33-8687		Not Available	REAR SHIELD
9	Y00000000		Not Available	SEE NOTE SCREW (PURCHASE LOCALLY)
10	35-0056		Not Available	FRONT PANEL
11	25-7001	308685		Side Trim)
12	Y00000000		Not Available	SEE NOTE WASHER (PURCHASE LOCALLY)
13	35-0065		Not Available	TOP PANEL
14	25-7285			Clip

15	33-7450	35-2846	Hinge, Cabinet Top
16	33-0930		Pad, Top Hinge
17	25-7732	681414	Screw, 10AB X 1/2
18	33-2653		Bumper, Cabinet
19	33-9064	12001187	Kit, Lid Switch Assembly
20	33-8289	12001187	Kit, Lid Switch Assembly
21	Y00000000		Not Available SEE NOTE SCREW (PURCHASE LOCALLY)
22	33-8828	12001187	Kit, Lid Switch Assembly
23	25-7463	7101P012-60	Screw
24	25-7436		Nylite Washer
25	33-7929	35-2103	Clother Door
26	33-6956		Hinge
27	33-6957		Hinge Pad
28	33-8058		Not Available SPEEDNUT
29	25-7455	99002757	Screw
30	43-0057		Actuator, Door Switch
31	25-7436		Nylite Washer
32	25-7438		Screw
33	25-7455	99002757	Screw
34	25-7086	Y0308025	Washer, Stainless Steel
35	25-7436		Nylite Washer
36	25-8057		Not Available PLASTIC NUT
37	33-9399		Not Available SPLASH GUARD
38	33-6093		Not Available RETAINING RING
39	33-0767		Spring
40	35-0445		Not Available CABT BRACE
"	33-2653		Bumper, Cabinet
"	25-7752	3196169	Screw, Element

