


# Magic Chef W18EY2 02 - CONTROL PANEL

MAGIC CHEF W18EN-2 BACKGUARD

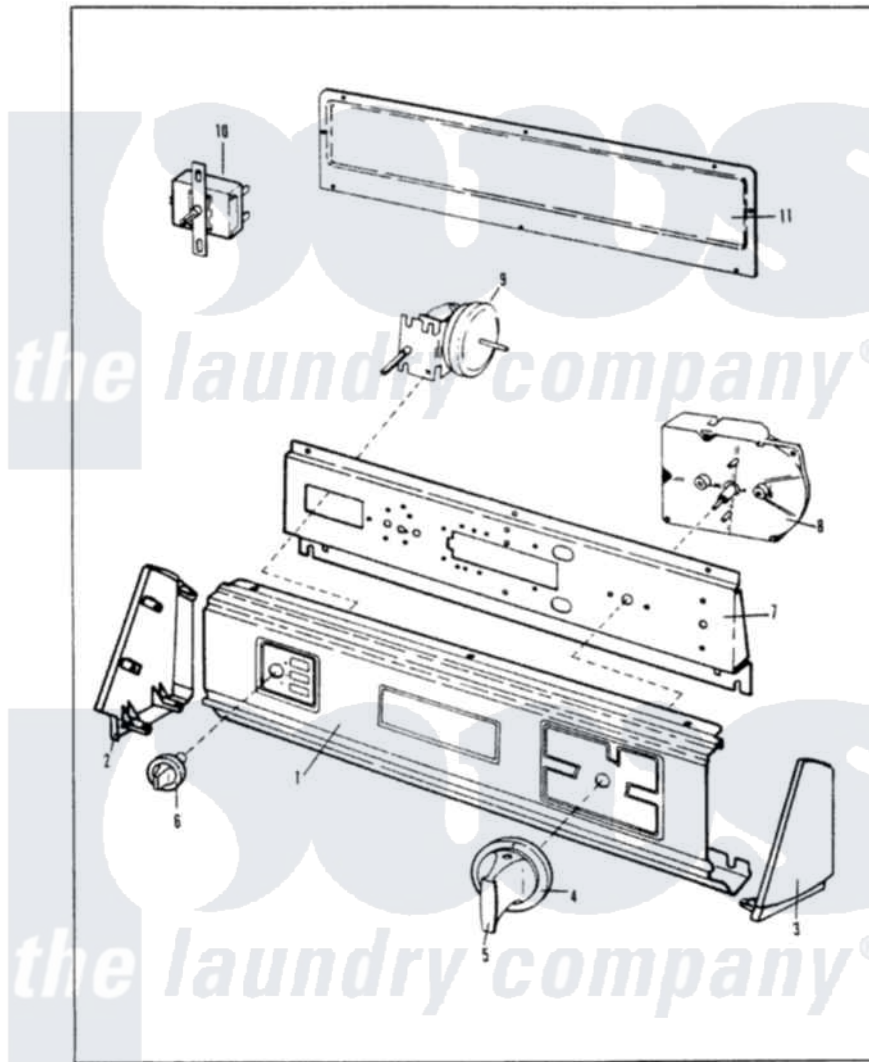

Issued 4/86

G-8

Magic Chef [Residential Magic Chef W18EY2 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0263		Not Available	CONTROL PANEL
"	<a href="#">25-7793</a>			Screw
2	<a href="#">53-0265</a>			LH Endcap
3	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
"	<a href="#">25-7760</a>			Screw
"	<a href="#">53-0264</a>			RH Endcap
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
4	35-0318		Not Available	HUB/SKIRT ASM
5	<a href="#">25-6044</a>			Set Screw
"	35-0498	<a href="#">12500058</a>		Knob Ski
"	35-0149		Not Available	TIMER KNOB
6	35-0452		Not Available	SELECTOR KNOB
7	53-0365	<a href="#">53-1676</a>		Shield, Control
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping

8	<a href="#">33-9803</a>		Timer
"	<a href="#">35-0491</a>		Timer
"	<a href="#">35-0117</a>		Timer Motor 1/2rpm
"	25-0088	<a href="#">489483</a>	Screw 10-32 X 1/2
9	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0112	<a href="#">35-0782</a>	Pressure Switch
10	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">35-0119</a>		Rotary Switch
11	<a href="#">25-7851</a>		Speedclip, End Cap To Top
"	<a href="#">25-7852</a>		Speedclip, Rr Shld To End Cap
"	25-7697	<a href="#">25-2219</a>	Screw
"	25-7592	Not Available	SCREW
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0268	<a href="#">21001460</a>	Shield, Rear
"	34-9487	Not Available	PLATE, REINFORCEMENT

