



Issued 11/87

Magic Chef Residential Magic Chef W18FA2 Washer Parts Parts Diagram 04 - TUB  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-9392		Not Available	TUB ASSEMBLY
2	33-8800	<a href="#">33-8800K</a>		Plate
3	<a href="#">33-6905</a>			Gasket
4	25-7783	<a href="#">4356852</a>		Screw
5	<a href="#">35-0538</a>			Pad
6	35-0004		Not Available	BASKET ASM
7	<a href="#">33-8959</a>			Gasket
8	33-8799		Not Available	REINF PLATE
9	35-0537	<a href="#">35-0993</a>		Tub Top
10	<a href="#">33-3055</a>			Gasket
11	<a href="#">25-7748</a>			Clip
12	35-0049		Not Available	AGITATOR
13	<a href="#">33-6241</a>			Cap
14	<a href="#">25-7330</a>			Rubber Washer
15	33-9888		Not Available	LINT FILTER
16	33-9906	<a href="#">21001167</a>		Dispenser, Bleach