


Magic Chef W18GA1 05 - WATER CARRYING

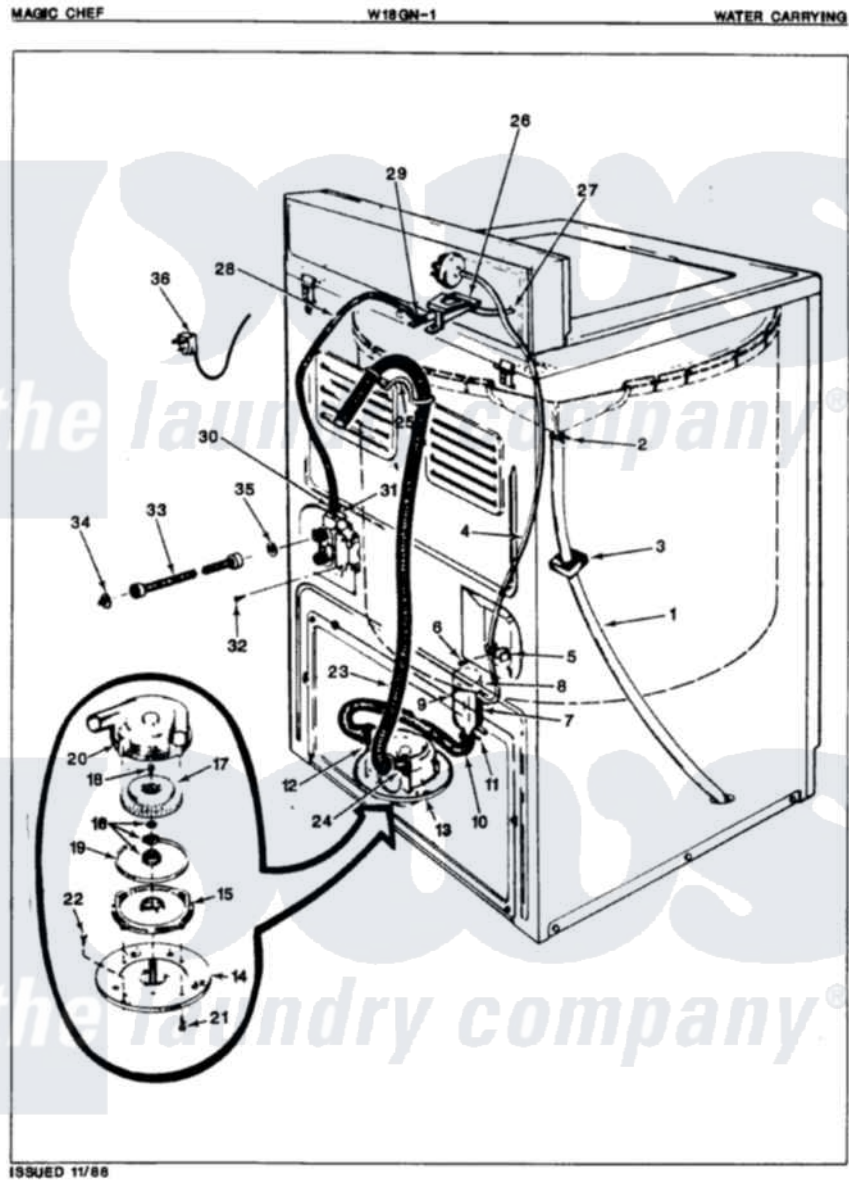

Magic Chef [Residential Magic Chef W18GA1 Washer Parts](#) Parts Diagram 05 - WATER CARRYING
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0059		Not Available	OVERFLOW HOSE
2	25-6057		Not Available	HOSE CLAMP
3	35-0706		Not Available	PAD, FOAM
4	25-7796	596669		Clamp, Manifold
"	33-6714		Not Available	PRES SW HOSE
5	33-6099			Clamp
7	33-7314			Sump Assembly
8	33-3633		Not Available	HOSE
9	25-7003			Clamp
10	33-6091			Hose
11	25-6066		Not Available	HOSE CLAMP
12	25-6055		Not Available	HOSE CLAMP
13	35-0008	35-6467		Pump Assem
"	35-1069	35-6467		Pump Assem
14	33-6035		Not Available	PLATE & PULLEY ASSY.
15	33-6029	35-6467		Pump Assem

16	35-0707		Seal, Seat And "O" Ring
17	35-0010		Impeller
18	25-7418	33001178	Back, Tumbler
19	33-6032		Gasket
20	35-0009		Pump Housing
21	25-7405	3196164	Screw
22	25-7419		Not Available
			SCREW
23	25-7048		Washer
"	33-9535	211704	Hose, Drain
24	25-7881	285655	Clamp, Hose
"	33-9536		Hose Adapter
25	25-7797	285655	Clamp, Hose
"	33-9537	22003814	Retainer, Drain Hose
26	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-9830		Not Available
			INLET FLUME
"	33-8057		Not Available
			PLASTIC NUT
"	25-7086	Y0308025	Washer, Stainless Steel
27	33-6038		Not Available
			FLUME EXT
28	35-0541		Not Available
			WATR INLET HOSE
29	25-7867	596669	Clamp, Manifold
30	25-7866	489503	Clamp
31	35-0085	35-2374N	Valve, Water
"	33-7058		Not Available
			SUB 36-1456
32	25-7851		Speedclip, End Cap To Top
33	33-7891	89503	Hose-Inlet
34	33-7313	33-4264N	Strainer And Washer Kit
35	25-7048		Washer
36	35-0680		Not Available
			CORD, POWER

