


Magic Chef W18HY1 05 - EXTERIOR (REV. A-C)

SECTION: EXTERIOR
MODEL: W18HN-1

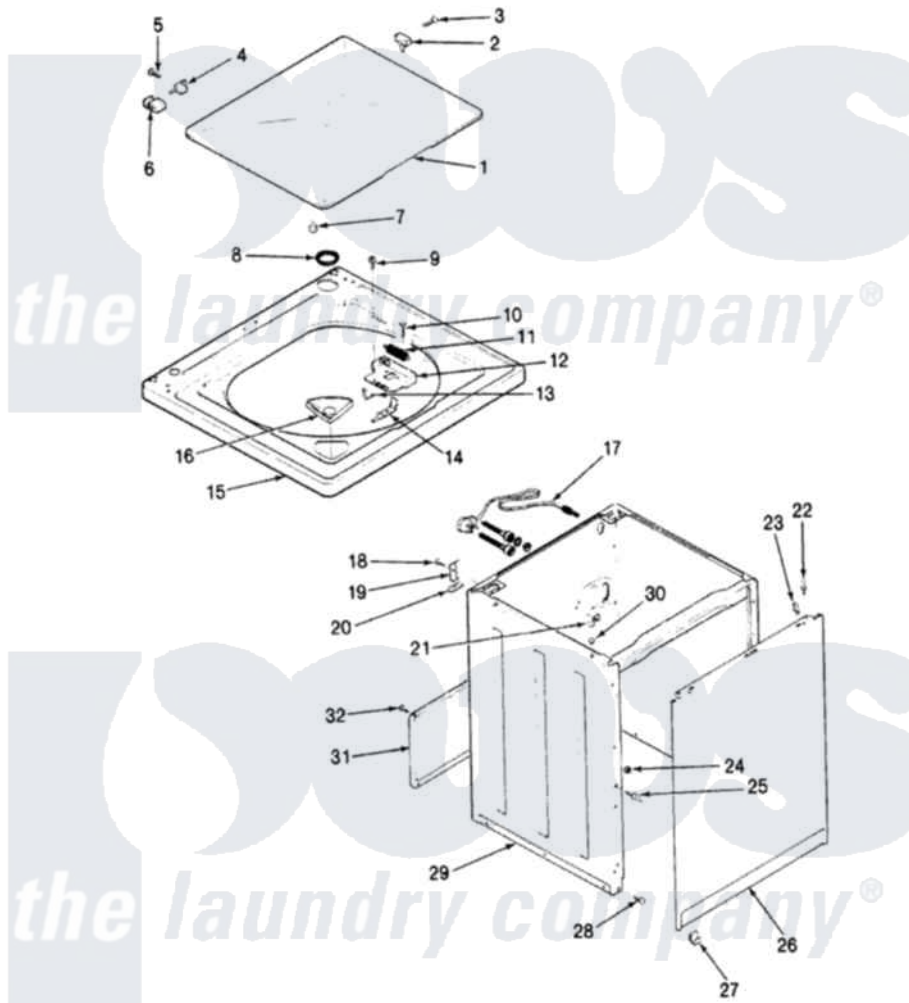

Issue Date: 4/98

Magic Chef [Residential Magic Chef W18HY1 Washer Parts](#) Parts Diagram 05 - EXTERIOR (REV. A-C)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2341-25		Not Available	CLOTHES DOOR
"	35-2103-25		Not Available	CLOTHES DOOR
2	25-7436			Nylite Washer
"	43-0057			Actuator, Door Switch
3	25-7438			Screw
4	33-6957			Hinge Pad
"	25-7086	Y0308025		Washer, Stainless Steel
5	25-7455	99002757		Screw
6	33-6956			Hinge
7	25-7455	99002757		Screw
8	35-2064			Bushing, Insulating
"	35-2063			Bushing, Insulator
9	25-7463	7101P012-60		Screw
10	25-7437	40040701		Screw, Tapping No.6b-20
11	33-9064	12001187		Kit, Lid Switch Assembly
"	33-8911	12001187		Kit, Lid Switch Assembly

12	33-8289	12001187		Kit, Lid Switch Assembly
"	25-7463	7101P012-60		Screw
"	25-7436			Nylite Washer
13	25-7878			Clip
14	33-9063	12001187		Kit, Lid Switch Assembly
15	35-2195-25		Not Available	CABINET TOP
"	35-2080-25		Not Available	CABINET TOP
16	25-7733	681414		Screw, 10AB X 1/2
"	33-9906	21001167		Dispenser, Bleach
17	35-0680		Not Available	CORD, POWER
18	25-7893			Screw
19	33-7450	35-2846		Hinge, Cabinet Top
20	33-0930			Pad, Top Hinge
21	33-6099			Clamp
22	53-0643			Pin, Locator
23	34-9701			Guide, Cabinet
24	25-0224	3400029		Nut, Adapter Plate
25	53-0643			Pin, Locator
26	25-7732	681414		Screw, 10AB X 1/2
"	35-2084			Panel, Front
"	35-2084-25		Not Available	PANEL, FRONT
"	35-2084-24			Panel, Front
27	53-0120			Clip, Front Panel
28	33-2653			Bumper, Cabinet
29	35-2106-25		Not Available	CABINET ASSY. (HW)
"	35-2106-24	12001802		Kit, Cabinet/Rear Shield
"	35-2106	21001871		Cabinet
30	33-2653			Bumper, Cabinet
31	35-2108	21001871		Cabinet
32	25-7086	Y0308025		Washer, Stainless Steel
33	33-8057		Not Available	PLASTIC NUT
34	33-8058		Not Available	SPEEDNUT
35	25-6109			Screw
36	34-9701			Guide, Cabinet
37	25-7285			Clip

