


# Magic Chef W18JA1 04 - TUB

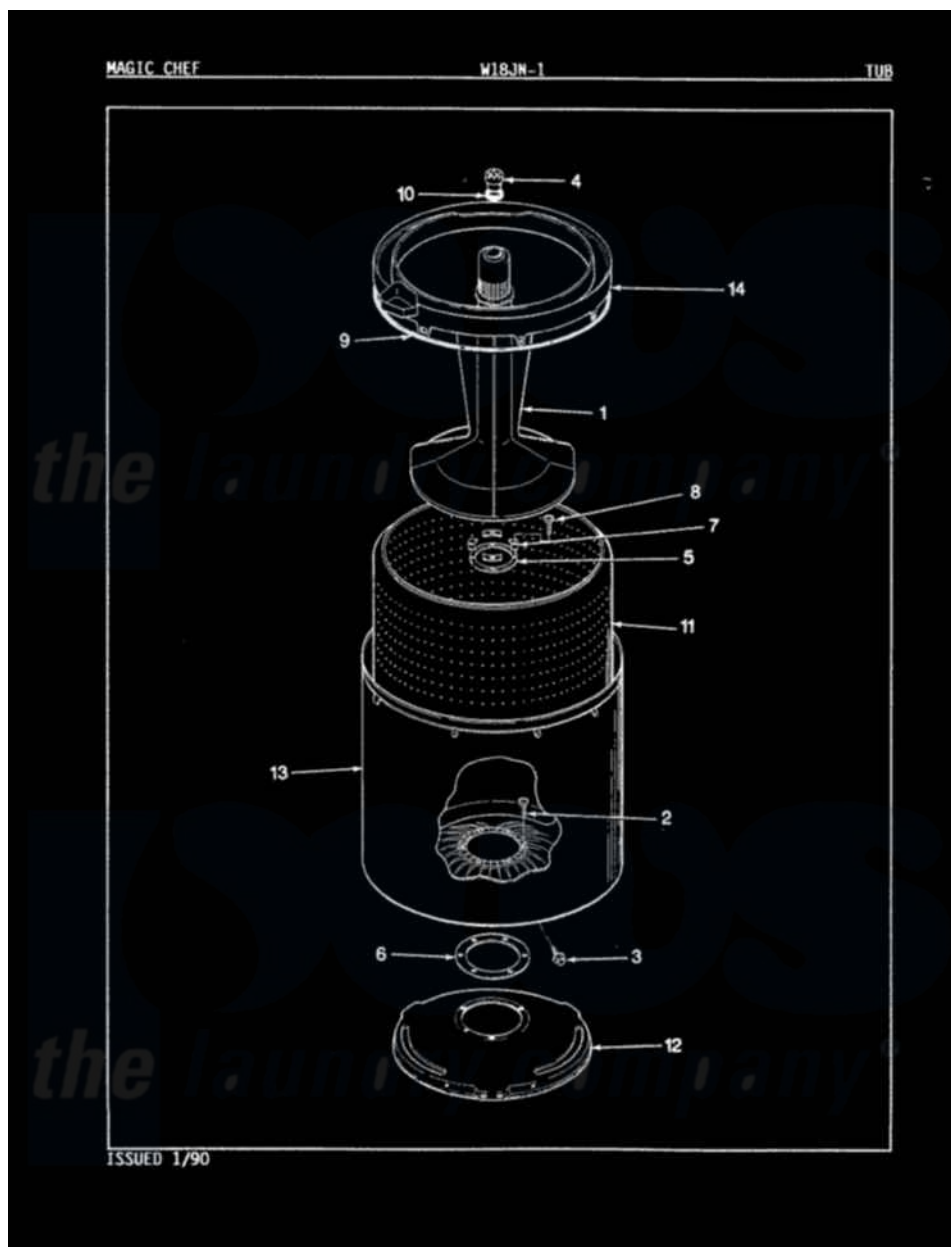

Magic Chef [Residential Magic Chef W18JA1 Washer Parts](#) Parts Diagram 04 - TUB  
 Click on the part number to view part

| Item | Original Part Number    | Replaced By              | Status        | Part Description       |
|------|-------------------------|--------------------------|---------------|------------------------|
| 1    | 35-2371                 | <a href="#">33-4352</a>  |               | Agitator               |
| 2    | 35-2062                 | <a href="#">21001063</a> |               | Screw, Shoulder        |
| 3    | 25-7914                 | <a href="#">22002933</a> |               | Screw                  |
| 4    | <a href="#">33-6241</a> |                          |               | Cap                    |
| 5    | <a href="#">33-8959</a> |                          |               | Gasket                 |
| 6    | <a href="#">35-2061</a> |                          |               | Gasket, Tub To Housing |
| 7    | 33-8799                 |                          | Not Available | REINF PLATE            |
| 8    | 25-7783                 | <a href="#">4356852</a>  |               | Screw                  |
| 9    | <a href="#">35-2328</a> |                          |               | Seal, Tub Top          |
| 10   | <a href="#">25-7330</a> |                          |               | Rubber Washer          |
| 11   | 35-2508                 |                          | Not Available | BASKET WHITE           |
| 12   | <a href="#">35-2023</a> |                          |               | Tub Support            |
| 13   | 35-2262                 |                          | Not Available | SHIELD, TUB TOP        |
| "    | <a href="#">35-2038</a> |                          |               | Tub                    |
| 14   | <a href="#">35-2035</a> |                          |               | Top, Tub               |