


# Magic Chef W205KA 02 - CONTROL PANEL

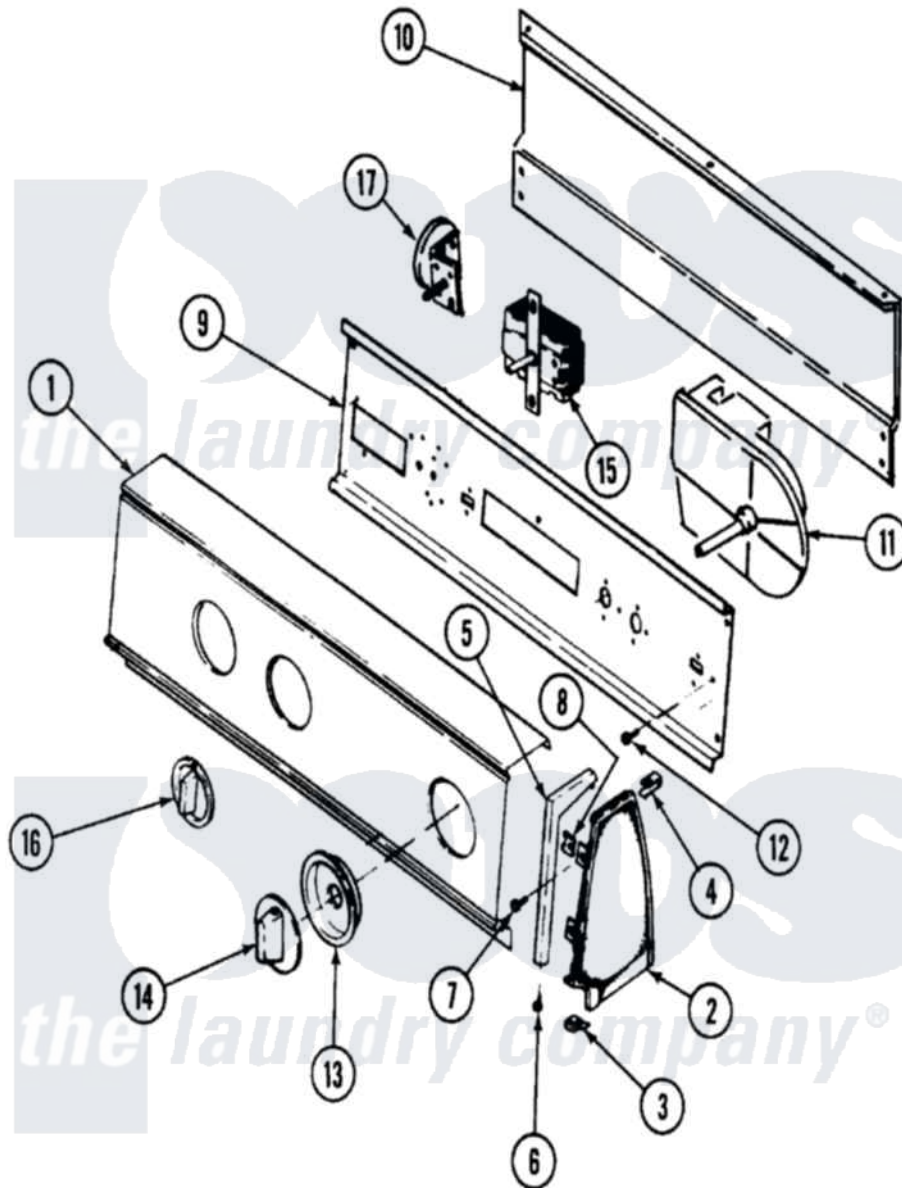

Magic Chef [Residential Magic Chef W205KA Washer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-3920		Not Available	PANEL, CONTROL
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	<a href="#">25-7793</a>			Screw
2	35-2487	<a href="#">21001451</a>		Cap- End
"	35-2488	<a href="#">21001452</a>		Cap- End
3	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	<a href="#">53-2413</a>			End Trim L.H.
"	<a href="#">53-2412</a>			End Trim RH
6	<a href="#">25-7760</a>			Screw
7	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
8	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel

9	53-2504	<a href="#">31001193</a>		Pad, Shield
"	31001128		Not Available	SHIELD, CONTROL
"	<a href="#">53-1676</a>			Shield, Control
"	31001146	<a href="#">31001193</a>		Pad, Shield
10	<a href="#">25-3457</a>			Screw, Sems
"	35-2688	<a href="#">21001460</a>		Shield, Rear
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7853	<a href="#">25-7933</a>		Ring, Retaining
11	<a href="#">35-3840</a>			Timer
12	25-0205	<a href="#">216412</a>		Screw, Bracket To Timer
13	35-3964	<a href="#">21001497</a>		Skirt Ri
14	35-3962	<a href="#">21001282</a>		Knob, Timer
15	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0124		Not Available	SWITCH, WATER TEMPERATURE
"	<a href="#">21001139</a>			Switch, Water Temp. 3 Position
16	35-3960	<a href="#">21001283</a>		Knob, Selector---Piq
17	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-3691	<a href="#">21001554</a>		Switch, Water Level
18	35-3938		Not Available	MANUAL, USE & CARE
"	21001053		Not Available	MANUAL, USE & CARE

