


Magic Chef W205KA 04 - TOP

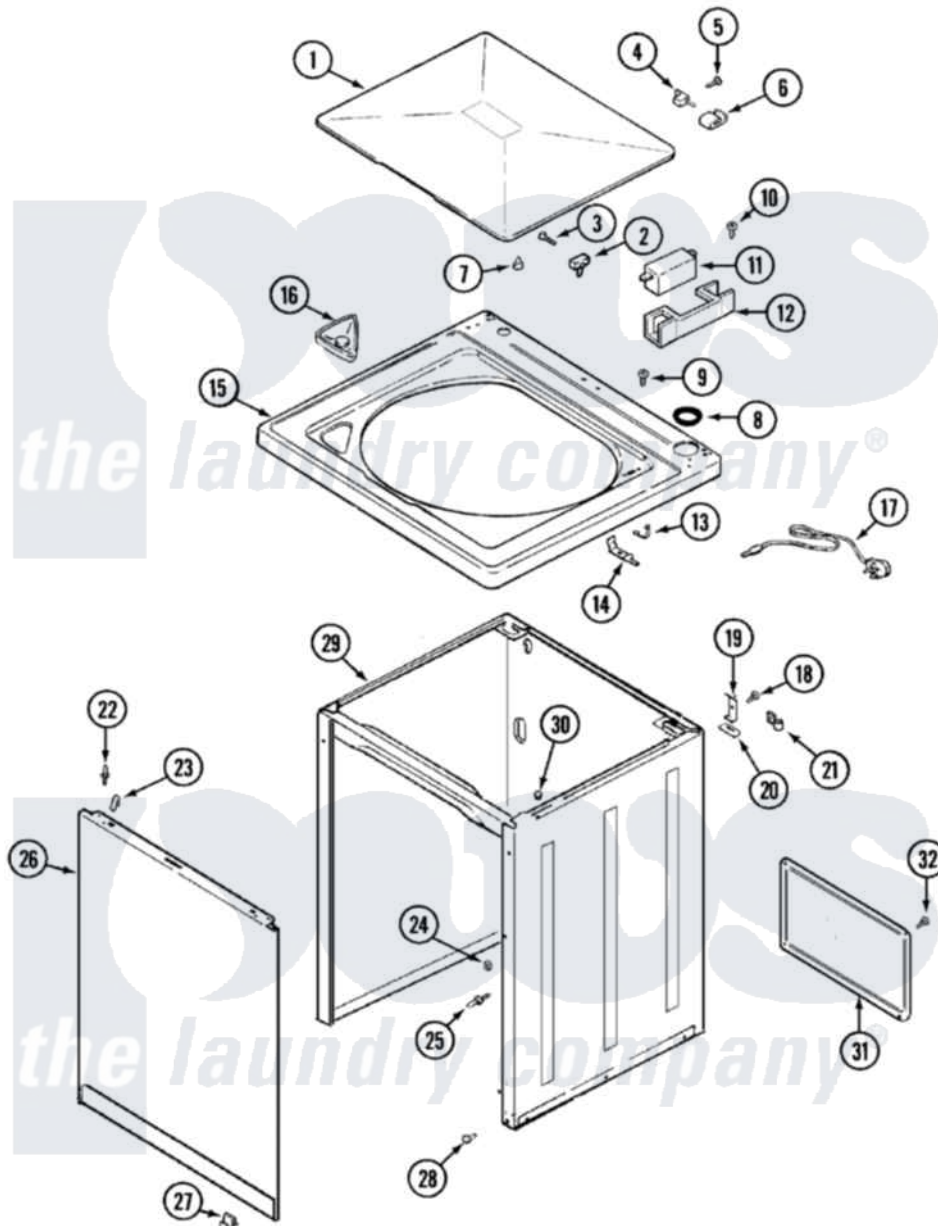

Magic Chef [Residential Magic Chef W205KA Washer Parts](#) Parts Diagram 04 - TOP
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2026-24		Not Available	LID (ALM)
2	25-7436			Nylite Washer
"	43-0057			Actuator, Door Switch
3	25-7438			Screw
4	35-2045			Pin, Hinge
5	25-7893			Screw
6	35-2044			Hinge, Lid
7	35-0581			Bumper, Door
8	35-2063			Bushing, Insulator
"	35-2064			Bushing, Insulating
9	25-7463	7101P012-60		Screw
10	25-7437	40040701		Screw, Tapping No.6b-20
"	21001136	3400872		Screw, 8-18 X 3/8
11	35-2904		Not Available	PAD, LID SWITCH
"	35-3382	12001187		Kit, Lid Switch Assembly
"	21001137	12001187		Kit, Lid Switch Assembly

"	21001148	12001187	Kit, Lid Switch Assembly
12	35-2795	12001187	Kit, Lid Switch Assembly
"	21001135		Housing, Lid Switch
13	25-7878		Clip
14	35-3076	12001187	Kit, Lid Switch Assembly
"	21001134		Lever, Lid Switch
15	35-2739-24	Not Available	TOP, CABINET (ALM)
16	35-2731	21001167	Dispenser, Bleach
17	35-0680	Not Available	CORD, POWER
18	25-7893		Screw
19	33-7450	35-2846	Hinge, Cabinet Top
20	33-0930		Pad, Top Hinge
21	25-7796	596669	Clamp, Manifold
22	53-0643		Pin, Locator
"	35-4129		Bumper, Cabinet
23	25-7220		Clip, Cabinet Top
24	25-0224	3400029	Nut, Adapter Plate
25	53-0643		Pin, Locator
26	35-2084-24		Panel, Front
27	53-0120		Clip, Front Panel
28	33-2653		Bumper, Cabinet
29	35-2106-24	12001802	Kit, Cabinet/Rear Shield
30	33-2653		Bumper, Cabinet
31	35-2108	21001871	Cabinet
32	25-7733	681414	Screw, 10AB X 1/2

pos the laundry company®

pos the laundry company®