


Magic Chef W205KGA 02 - CONTROL PANEL

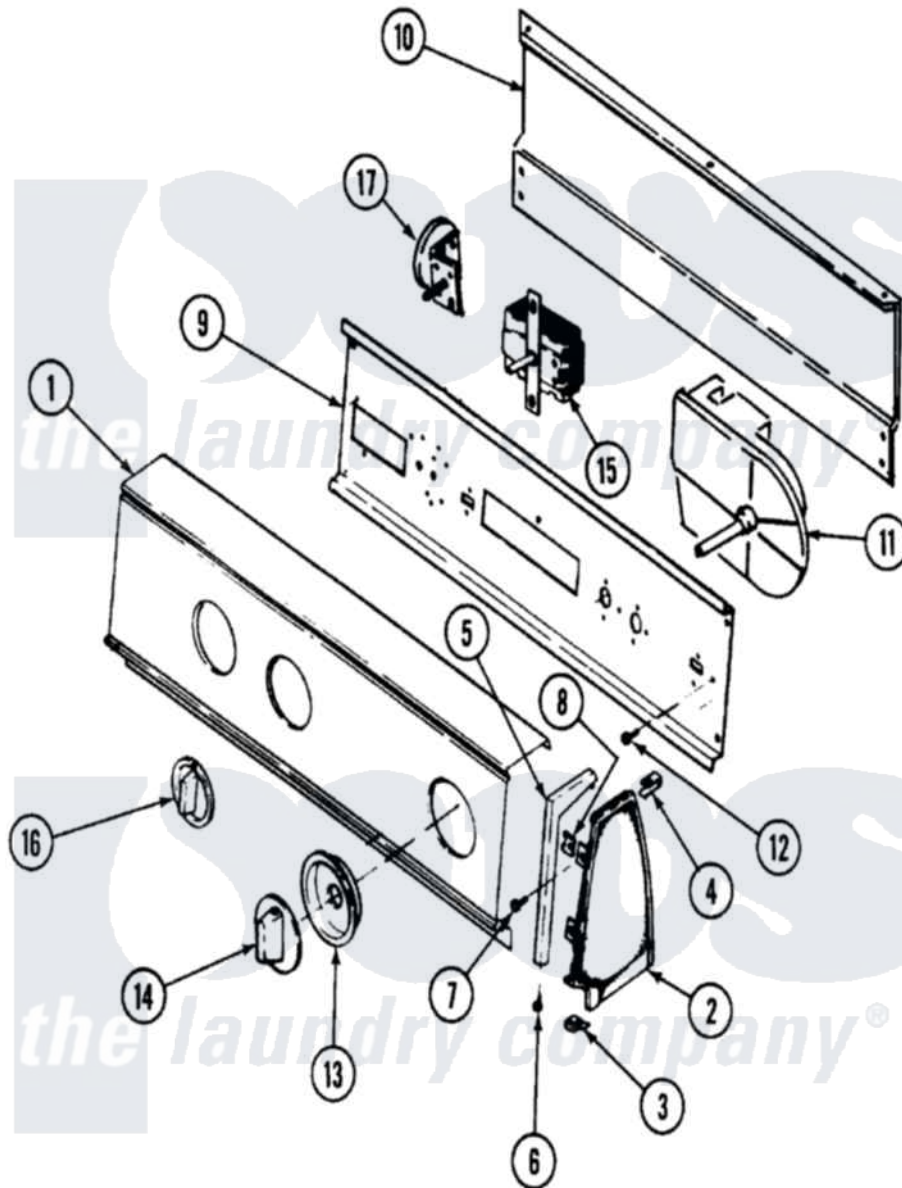

Magic Chef [Residential Magic Chef W205KGA Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001018		Not Available	PANEL, CONTROL
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
2	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0280		Not Available	TRIM, END CAP (LT)
"	53-2413			End Trim L.H.
"	53-2412			End Trim RH
"	53-0279		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-3002	00767		Screw, 8A X 3/8 HeX Washer

7	25-3092	90767		Head Tapping
8	25-7702			Speedclip, End Cap To Control Panel
9	53-1676			Shield, Control
"	53-2504	31001193		Pad, Shield
10	25-3457			Screw, Sems
"	35-2688	21001460		Shield, Rear
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7853	25-7933		Ring, Retaining
11	35-4137			Timer
12	31001029	3400094		Screw, 10-32 X 3/8
13	35-3965	21001502		Skirt Ri
14	35-3962	21001282		Knob, Timer
15	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0124		Not Available	SWITCH, WATER TEMPERATURE
"	21001139			Switch, Water Temp. 3 Position
16	35-3960	21001283		Knob, Selector---Piq
17	35-3691	21001554		Switch, Water Level
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
18	21001053		Not Available	MANUAL, USE & CARE
19	21001051		Not Available	MANUAL, USE & CARE
20	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

the laundry company[®]

the laundry company[®]