


Magic Chef W206KW 02 - CONTROL PANEL

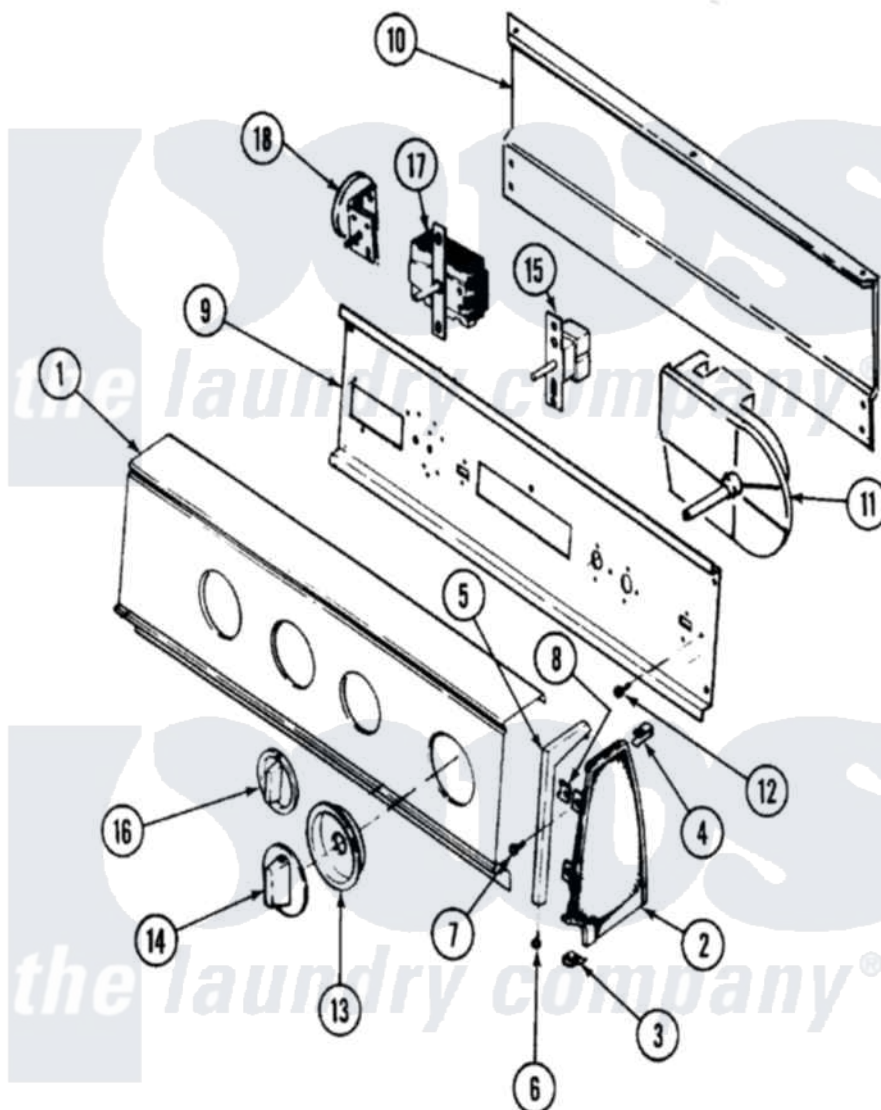

Magic Chef [Residential Magic Chef W206KW Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
"	35-3922		Not Available	PANEL, CONTROL
2	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-2412			End Trim RH
"	53-2413			End Trim L.H.
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702			Speedclip, End Cap To Control Panel

9	31001128		Not Available	SHIELD, CONTROL
"	53-2504	31001193		Pad, Shield
"	53-1676			Shield, Control
10	25-7853	25-7933		Ring, Retaining
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457			Screw, Sems
"	35-2688	21001460		Shield, Rear
11	35-3841			Timer
12	25-0205	216412		Screw, Bracket To Timer
13	35-3964	21001497		Skirt Ri
14	35-3962	21001282		Knob, Timer
15	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001139			Switch, Water Temp. 3 Position
"	35-0124		Not Available	SWITCH, WATER TEMPERATURE
16	35-3960	21001283		Knob, Selector----Piq
17	21001140	21001898		Switch, Speed
"	35-3858		Not Available	SWITCH, SPEED
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
18	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-3691	21001554		Switch, Water Level
19	35-3939		Not Available	MANUAL, USE & CARE
"	21001053		Not Available	MANUAL, USE & CARE
20	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

the laundry company[®]

the laundry company[®]