


Magic Chef W207KA 02 - CONTROL PANEL

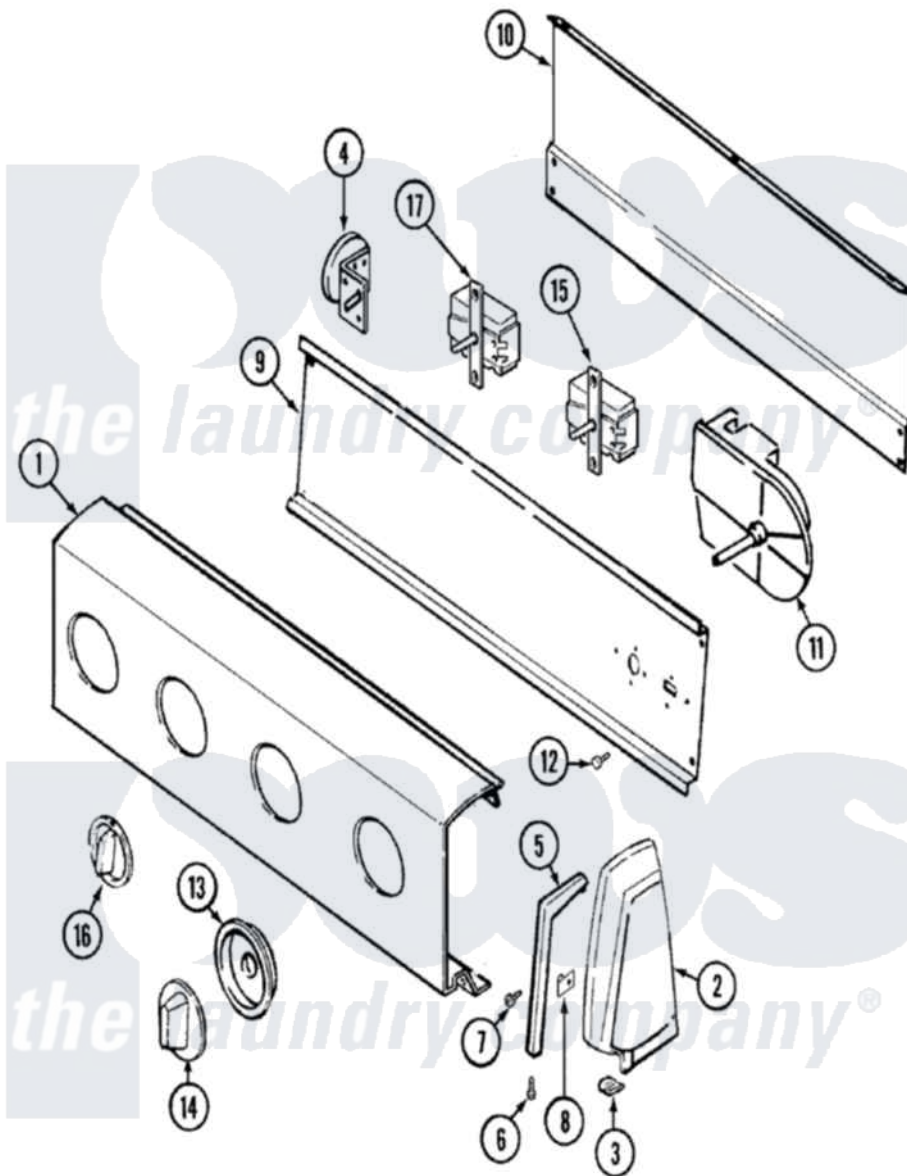

Magic Chef [Residential Magic Chef W207KA Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7496	25-7760		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-3924		Not Available	PANEL, CONTROL
2	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	35-3691	21001554		Switch, Water Level
5	53-2413			End Trim L.H.
"	53-2412			End Trim RH
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702			Speedclip, End Cap To Control Panel

9	53-1676		Shield, Control
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001128		Not Available SHIELD, CONTROL
"	31001128		Not Available SHIELD, CONTROL
"	53-2504	31001193	Pad, Shield
10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
"	35-2688	21001460	Shield, Rear
11	35-3838		Timer
12	25-0205	216412	Screw, Bracket To Timer
13	35-3964	21001497	Skirt Ri
14	35-3962	21001282	Knob, Timer
15	21001141		Switch, Water Temperature
"	21001141		Switch, Water Temperature
"	35-3856		Not Available SWITCH, TEMP
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	35-3960	21001283	Knob, Selector----Piq
17	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001142		Switch, Speed
"	21001142		Switch, Speed
"	35-3859		Switch, Speed
18	35-3941		Not Available MANUAL, USE & CARE
"	21001053		Not Available MANUAL, USE & CARE
19	16000329		Not Available GUIDE, QUICK REF. - MAGIC CHEF

the laundry company[®]

the laundry company[®]