


Magic Chef W207KAC 02 - CONTROL PANEL

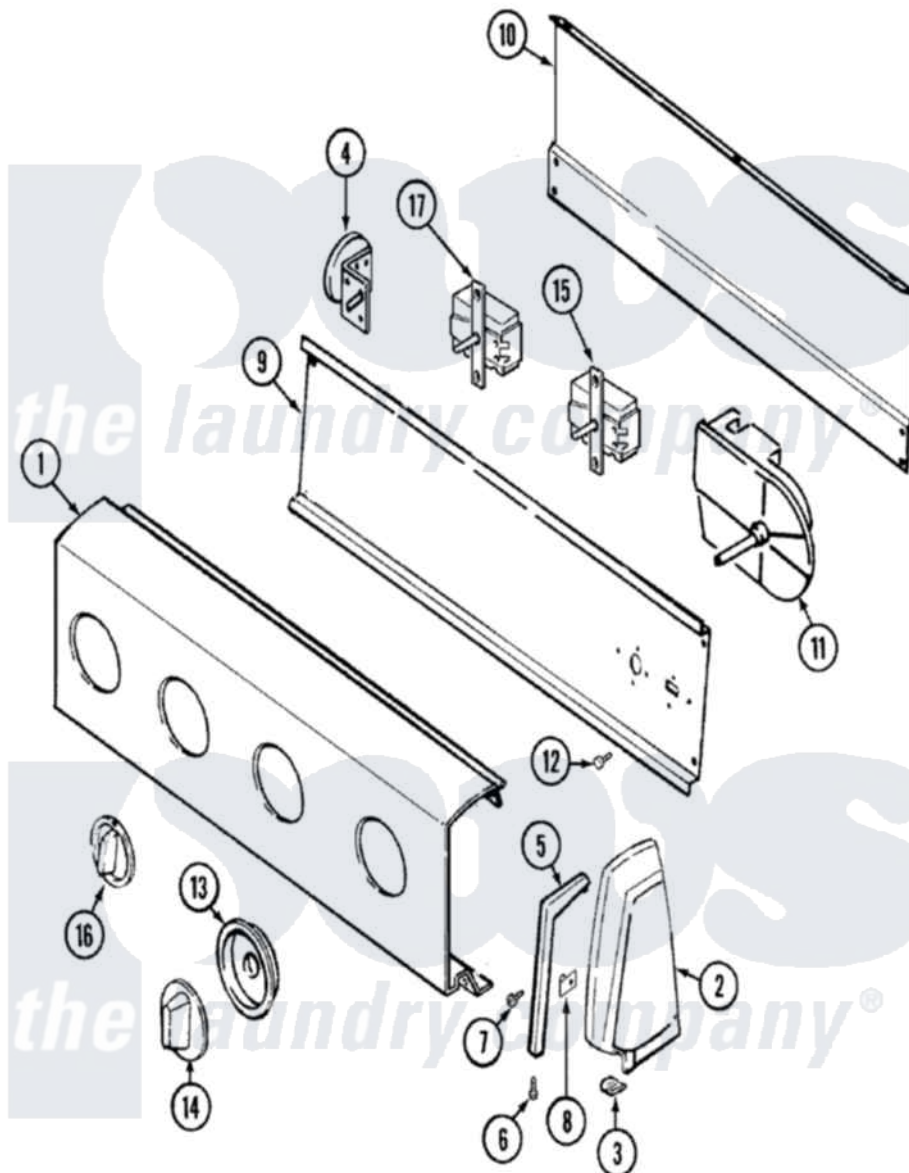

Magic Chef [Residential Magic Chef W207KAC Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7496	25-7760		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-3924		Not Available	PANEL, CONTROL
2	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	35-3691	21001554		Switch, Water Level
5	53-2412			End Trim RH
"	53-2413			End Trim L.H.
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-7702			Speedclip, End Cap To Control

8	25-1192			Panel
9	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-2504	31001193		Pad, Shield
"	53-1676			Shield, Control
10	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457			Screw, Sems
"	35-2688	21001460		Shield, Rear
11	35-3838			Timer
12	25-0205	216412		Screw, Bracket To Timer
13	35-3964	21001497		Skirt Ri
14	35-3962	21001282		Knob, Timer
15	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-3856		Not Available	SWITCH, TEMP
16	35-3960	21001283		Knob, Selector---Piq
17	35-3859			Switch, Speed
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
18	21001053		Not Available	MANUAL, USE & CARE
19	21001050		Not Available	MANUAL, USE & CARE
20	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

