


Magic Chef W207KKW 02 - CONTROL PANEL

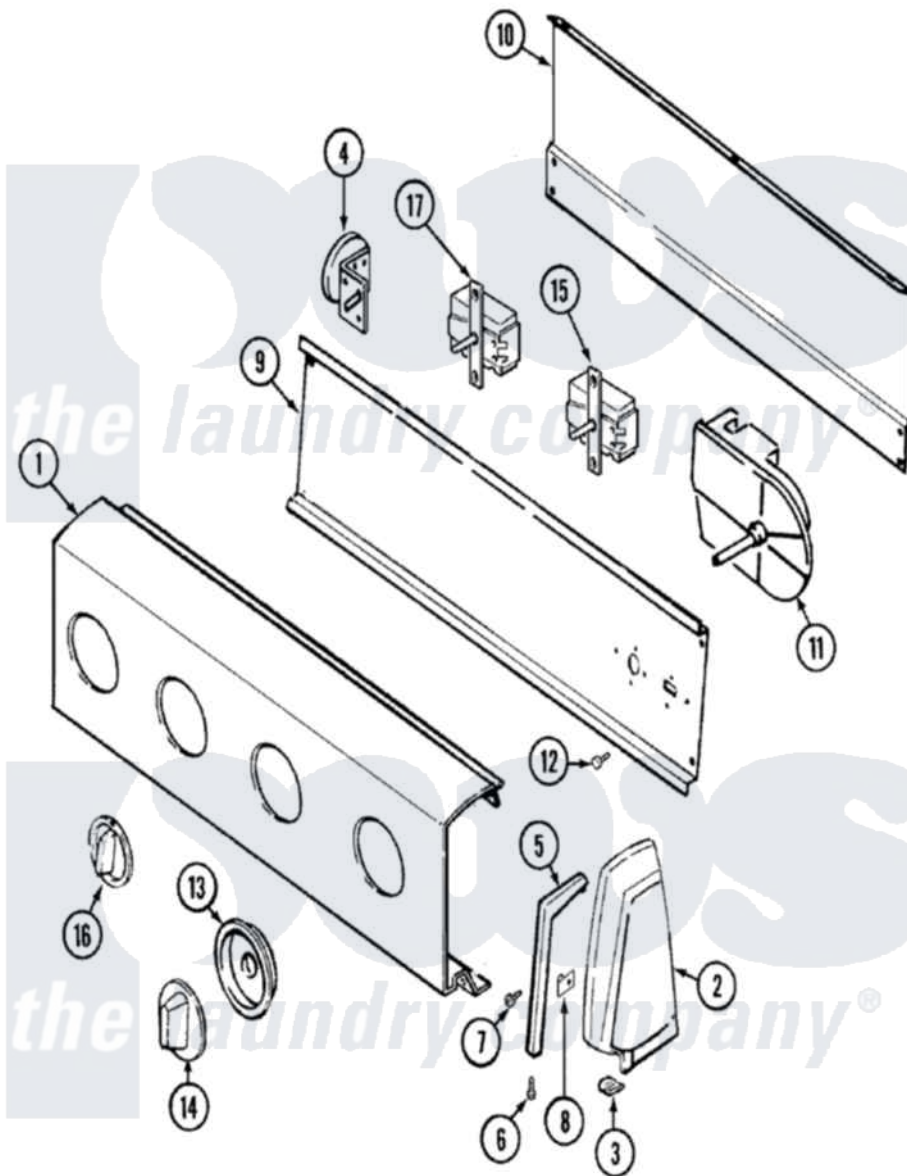

Magic Chef [Residential Magic Chef W207KKW Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001019		Not Available	PANEL, CONTROL
"	25-7496	25-7760		Screw
"	25-7702			Speedclip, End Cap To Control Panel
2	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	35-3691	21001554		Switch, Water Level
5	53-2413			End Trim L.H.
"	53-2412			End Trim RH
"	53-0280		Not Available	TRIM, END CAP (LT)
"	53-0279		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	25-7702		Speedclip, End Cap To Control Panel
9	53-1676		Shield, Control
"	31001146	31001193	Pad, Shield
"	31001128		Not Available SHIELD, CONTROL
"	53-2504	31001193	Pad, Shield
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
10	25-3457		Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460	Shield, Rear
11	21001344		Not Available TIMER, EXPORT
"	35-4130		Timer
12	31001029	3400094	Screw, 10-32 X 3/8
13	35-3964	21001497	Skirt Ri
14	35-3962	21001282	Knob, Timer
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001141		Switch, Water Temperature
"	35-3856		Not Available SWITCH, TEMP
16	35-3960	21001283	Knob, Selector----Piq
17	35-3859		Switch, Speed
"	21001142		Switch, Speed
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	21001056		Not Available MANUAL, USE & CARE
"	21001053		Not Available MANUAL, USE & CARE
19	16000329		Not Available GUIDE, QUICK REF. - MAGIC CHEF

the laundry company[®]

the laundry company[®]