


Magic Chef W207KKW 03 - MOTOR & PUMP

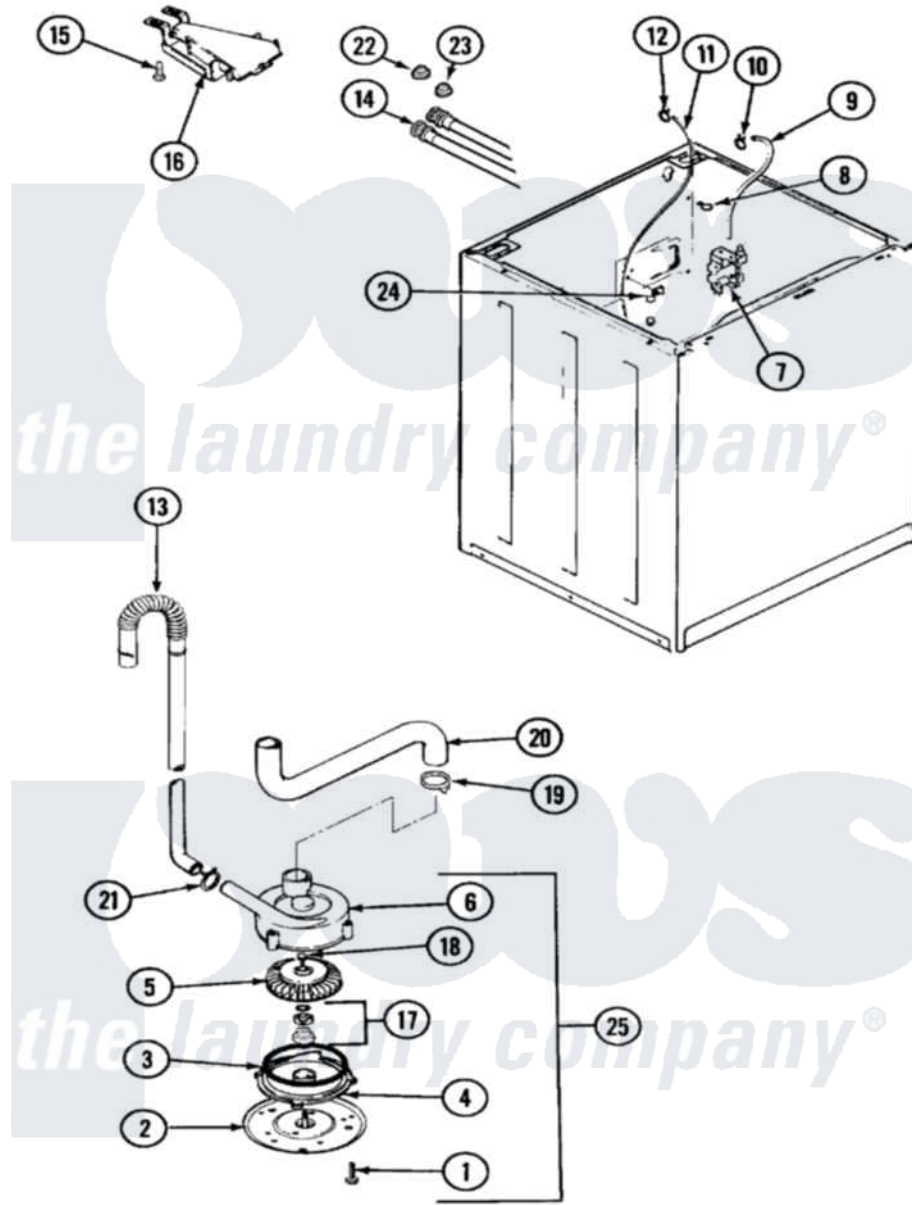

Magic Chef [Residential Magic Chef W207KKW Washer Parts](#) Parts Diagram 03 - MOTOR & PUMP
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7405	3196164		Screw
2	33-6035		Not Available	PLATE & PULLEY ASSY.
3	33-6032			Gasket
4	35-2058			Base, Pump
5	35-2057	35-6465		Pump Assem
6	35-2056		Not Available	HOUSING, PUMP
7	25-7220			Clip, Cabinet Top
"	35-2375			Valve, Water Mixing-230V
8	25-7867	596669		Clamp, Manifold
9	35-2378	12002749		Hose, Flume Kit
10	25-7867	596669		Clamp, Manifold
11	21001060	21001748		Hose, Pressure Switch
"	35-2261		Not Available	PAD, PRESSURE SWITCH HOSE
12	33-6099			Clamp
13	33-9537	22003814		Retainer, Drain Hose
"	35-3538	21001872		Hose, Drain

14	35-3400		Inlet Hose Assembly
"	35-0873	76313	Hosefill
"	33-7891	89503	Hose-Inlet
"	35-3401		Inlet Hose Assembly
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	35-2051	21001760	Flume Assembly / Water Diverter
17	35-0707		Seal, Seat And "O" Ring
18	25-7894	W10001180	Screw
19	25-6068	285655	Clamp, Hose
20	35-3584	21001915	Hose, Tub To Pump
21	25-7080	285655	Clamp, Hose
22	25-7048		Washer
23	33-7313	33-4264N	Strainer And Washer Kit
24	25-7796	596669	Clamp, Manifold
25	35-2099	35-6465	Pump Assem
"	35-2344		Restrictor, Flow

