


# Magic Chef W207KKW 04 - TOP

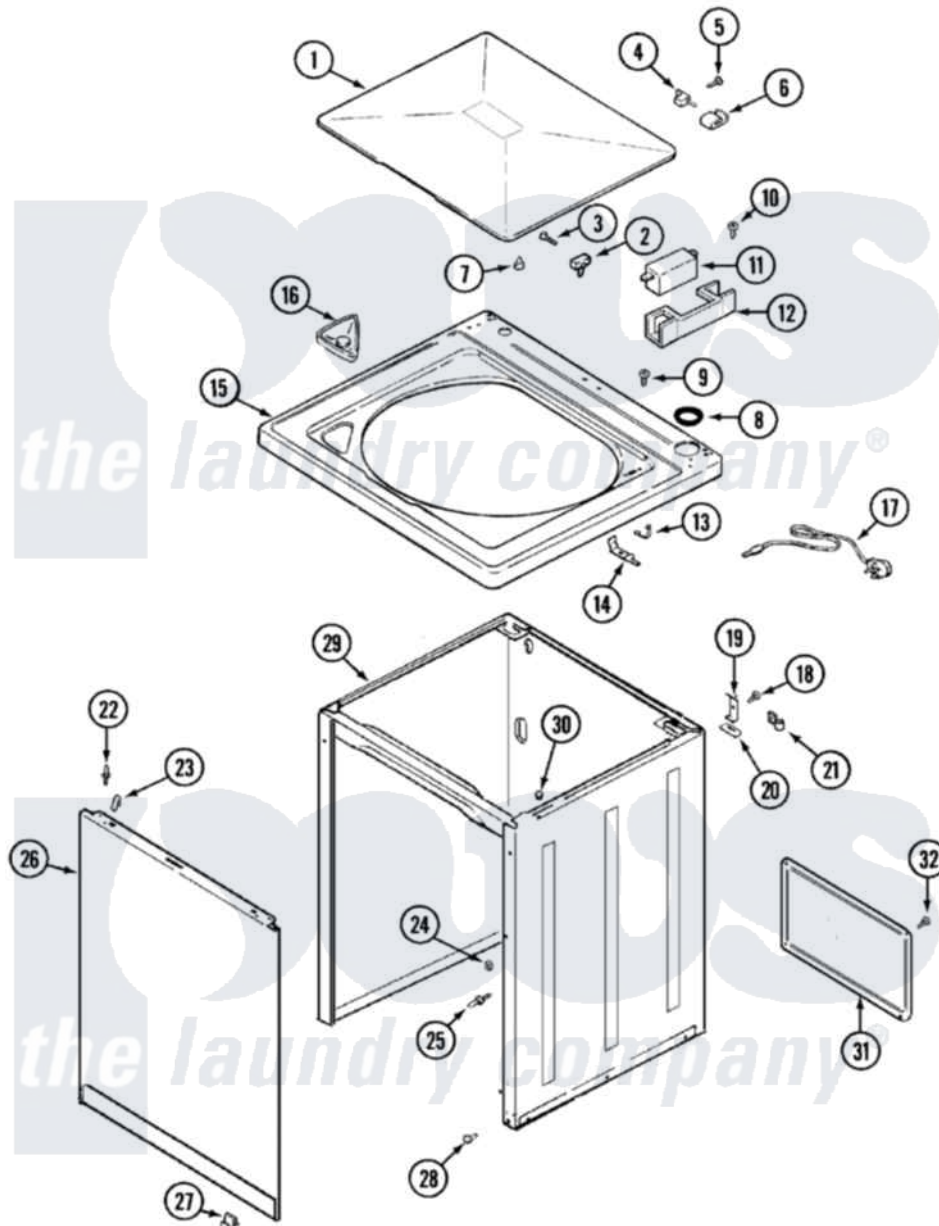

Magic Chef [Residential Magic Chef W207KKW Washer Parts](#) Parts Diagram 04 - TOP  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">35-2026</a>			Lid
2	<a href="#">25-7436</a>			Nylite Washer
"	<a href="#">43-0057</a>			Actuator, Door Switch
3	<a href="#">25-7438</a>			Screw
4	<a href="#">35-2045</a>			Pin, Hinge
5	<a href="#">25-7893</a>			Screw
6	<a href="#">35-2044</a>			Hinge, Lid
7	<a href="#">35-0581</a>			Bumper, Door
8	<a href="#">35-2063</a>			Bushing, Insulator
9	25-7463	<a href="#">7101P012-60</a>		Screw
10	25-7437	<a href="#">40040701</a>		Screw, Tapping No.6b-20
11	35-3382	<a href="#">12001187</a>		Kit, Lid Switch Assembly
"	35-2904		Not Available	PAD, LID SWITCH
12	35-2795	<a href="#">12001187</a>		Kit, Lid Switch Assembly
13	<a href="#">25-7878</a>			Clip
14	35-3076	<a href="#">12001187</a>		Kit, Lid Switch Assembly

15	<a href="#">35-2739</a>		Top, Cabinet
16	35-2731	<a href="#">21001167</a>	Dispenser, Bleach
"	<a href="#">21001167</a>		Dispenser, Bleach
17	35-1011		Not Available
"	<a href="#">35-1007</a>		SERVICE CORD
18	25-7732	<a href="#">681414</a>	Strain Relief
19	<a href="#">35-2846</a>		Screw, 10AB X 1/2
20	<a href="#">35-4128</a>		Hinge, Cabinet Top
21	25-7796	<a href="#">596669</a>	Pad, Hinge
22	<a href="#">35-4129</a>		Clamp, Manifold
"	<a href="#">53-0643</a>		Bumper, Cabinet
23	<a href="#">25-7220</a>		Pin, Locator
24	25-0224	<a href="#">3400029</a>	Clip, Cabinet Top
"	<a href="#">53-0200</a>		Nut, Adapter Plate
25	<a href="#">53-0643</a>		Sleeve, Locator Pin
26	35-4200	<a href="#">21001281</a>	Pin, Locator
"	<a href="#">35-2084</a>		Damper, Sound Pad
27	<a href="#">53-0120</a>		Panel, Front
28	<a href="#">33-2653</a>		Clip, Front Panel
29	35-2106	<a href="#">21001871</a>	Bumper, Cabinet
30	<a href="#">33-2653</a>		Cabinet
31	35-2108	<a href="#">21001871</a>	Bumper, Cabinet
32	25-7733	<a href="#">681414</a>	Cabinet
			Screw, 10AB X 1/2

