


Magic Chef W208KA 02 - CONTROL PANEL

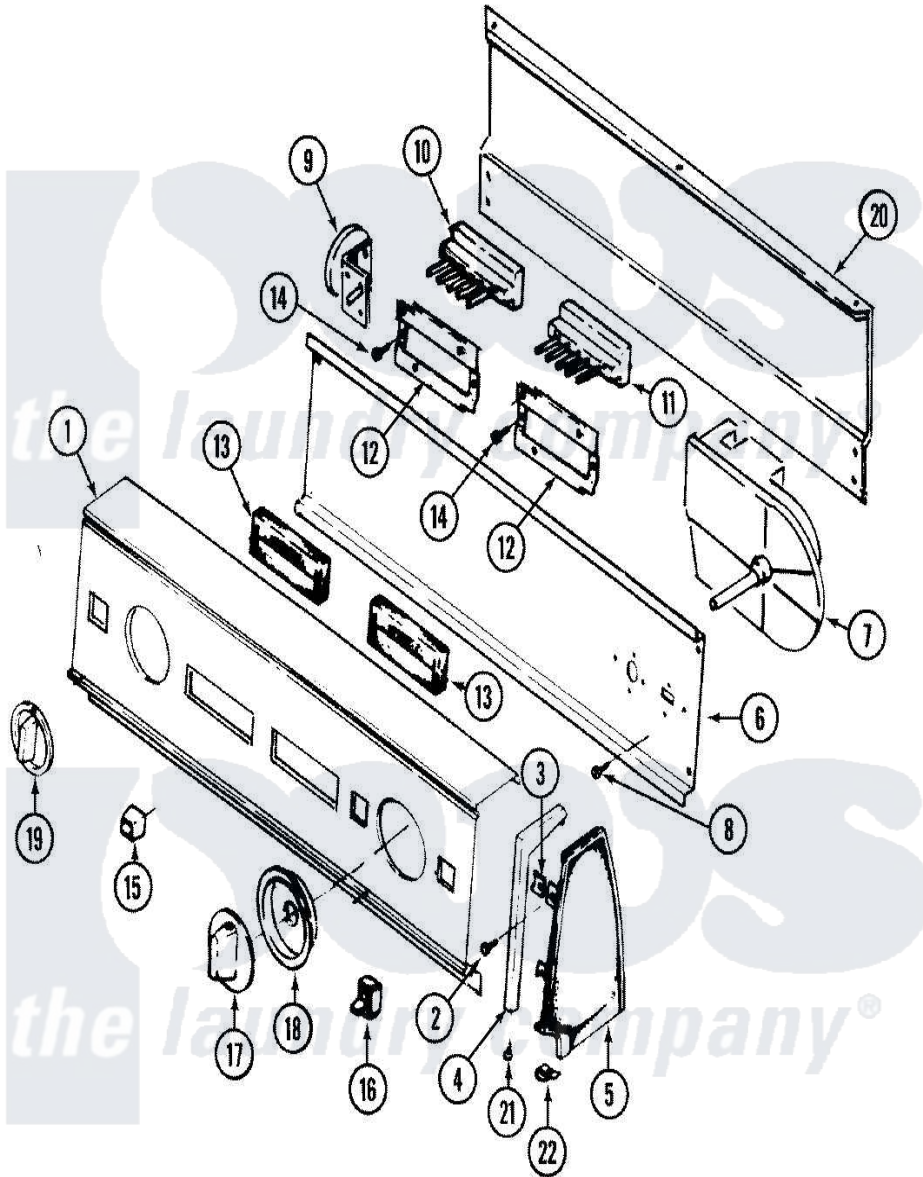

Magic Chef [Residential Magic Chef W208KA Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-3457			Screw, Sems
"	35-3925		Not Available	PANEL, CONTROL
2	25-7760			Screw
"	25-7793			Screw
3	25-7702			Speedclip, End Cap To Control Panel
4	53-2412			End Trim RH
"	53-2413			End Trim L.H.
5	35-2488	21001452		Cap- End
"	35-2487	21001451		Cap- End
6	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-3190		Not Available	SHIELD, CONTROL
7	35-3843			Timer
8	25-0205	216412		Screw, Bracket To Timer
9	35-3691	21001554		Switch, Water Level
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer

	25-3092	90707		Head Tapping
10	35-3862			Switch, 4 Pushbutton
11	35-3861			Switch, 5 Pushbutton
12	33-6621		Not Available	BRACKET, SWITCH
13	35-3515		Not Available	PAD, SWITCH
14	25-7712		Not Available	SCREW
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-3162		Not Available	PUSHBUTTON
16	35-3897		Not Available	SWITCH, ROCKER (BLACK)
17	35-3962	21001282		Knob, Timer
18	35-3964	21001497		Skirt Ri
19	35-3960	21001283		Knob, Selector----Piq
20	35-2688	21001460		Shield, Rear
21	25-7496	25-7760		Screw
22	25-7851			Speedclip, End Cap To Top
23	21001053		Not Available	MANUAL, USE & CARE
"	35-3942		Not Available	MANUAL, USE & CARE
24	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

