


Magic Chef W208KV 02 - CONTROL PANEL (W208KV)

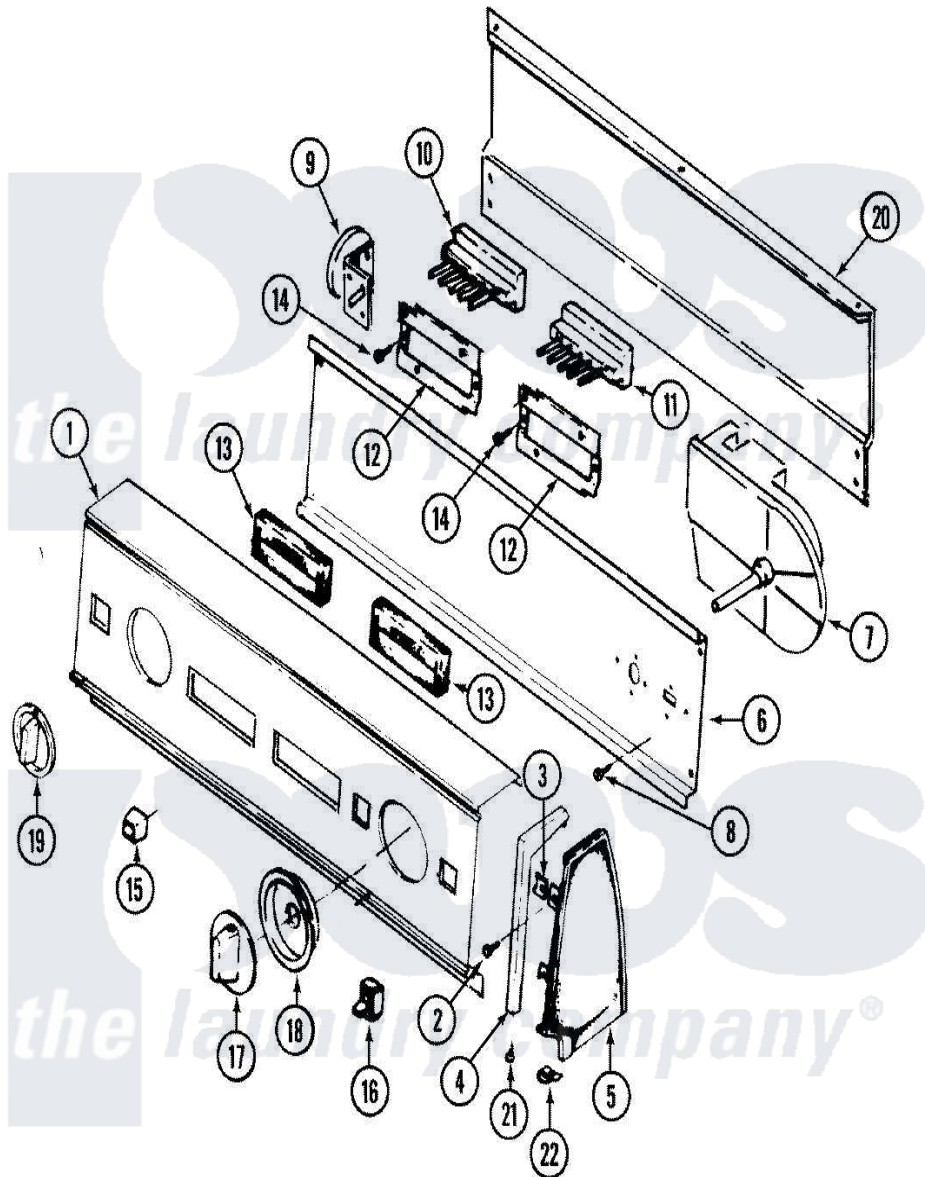

Magic Chef [Residential Magic Chef W208KV Washer Parts](#) Parts Diagram 02 - CONTROL PANEL (W208KV)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-3190		Not Available	SHIELD, CONTROL
"	35-3926		Not Available	PANEL, CONTROL
2	25-7649	910187		Screw
"	25-7760			Screw
3	25-7702			Speedclip, End Cap To Control Panel
4	53-2410		Not Available	END TRIM R.H. (WHT)
"	53-2411		Not Available	END TRIM L.H. (WHT)
5	35-2668	21001453		Cap- End
"	35-2669		Not Available	CAP, END (LT)(WHT)
6	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-3190		Not Available	SHIELD, CONTROL
7	35-3843			Timer
8	25-0205	216412		Screw, Bracket To Timer
9	35-3691	21001554		Switch, Water Level
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer

	25-3092	90707	Head Tapping
10	35-3862		Switch, 4 Pushbutton
11	35-3861		Switch, 5 Pushbutton
12	33-6621	Not Available	BRACKET, SWITCH
13	35-3515	Not Available	PAD, SWITCH
14	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7712	Not Available	SCREW
15	35-3191		Pushbutton
16	35-3898	21001813	Switch, Rocker
17	35-3963	21001237	Knob, Timer
18	35-3965	21001502	Skirt Ri
19	35-3961	21001239	Knob, Selector
20	35-2688	21001460	Shield, Rear
21	25-7496	25-7760	Screw
22	25-7851		Speedclip, End Cap To Top
23	35-3942	Not Available	MANUAL, USE & CARE
"	35-0872-3	Not Available	MANUAL, USE & CARE
24	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF

