


Magic Chef W20DA3 01 - BASE & DRIVE

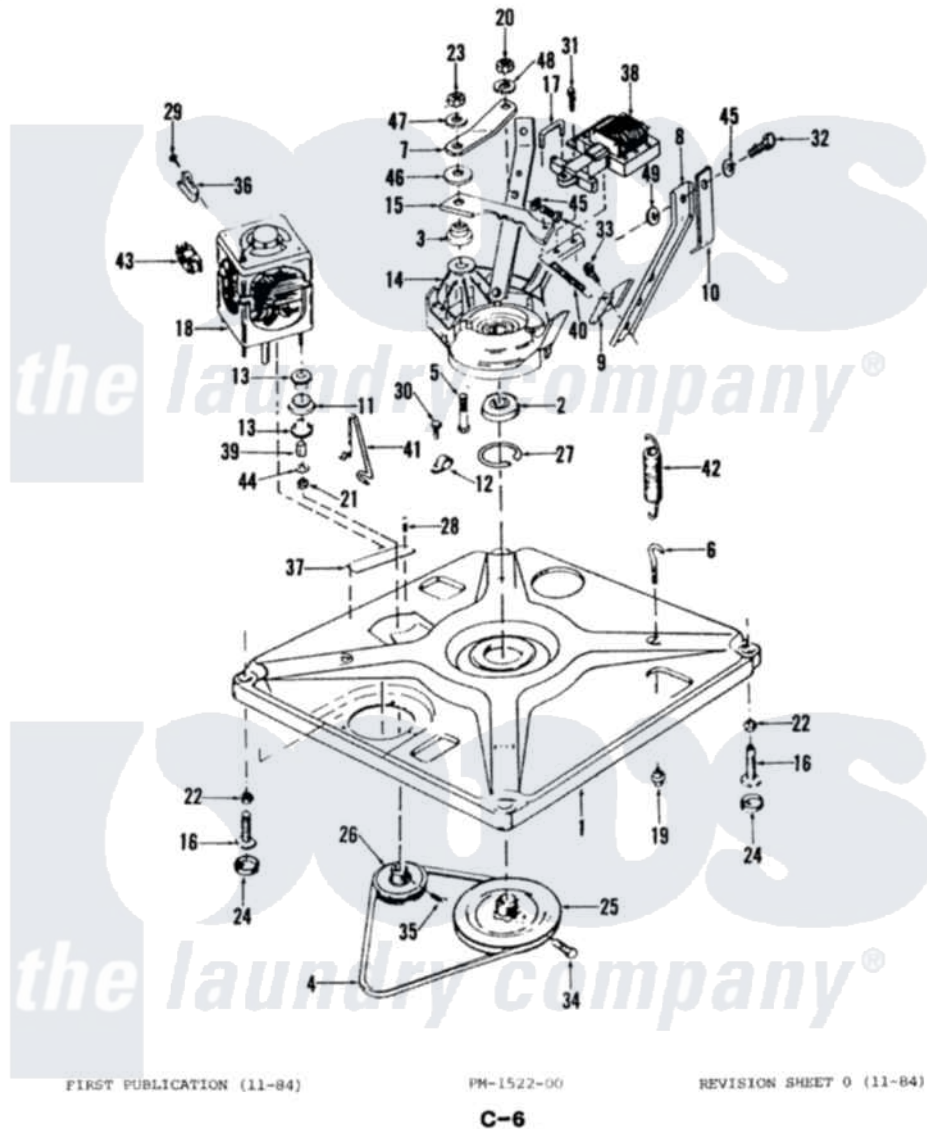

Magic Chef [Residential Magic Chef W20DA3 Washer Parts](#) Parts Diagram 01 - BASE & DRIVE
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-9617		Not Available	BASE/TRI-POINT
2	63-5225	21001840		Bearing
3	33-8335	33-9966		Brk Ltch Bearng
4	33-9787	35-0425		Belt
5	25-7790		Not Available	HEX HD BOLT
6	25-7365			Eye Bolt
7	33-9554		Not Available	SUPPORT BRACE
8	33-9569			Tub Brace
9	33-9391		Not Available	BRACKET
10	33-6880			Bracket
11	33-9139	LA-1040		Motor Gromme
12	25-7265		Not Available	WIRING CLAMP
13	33-9136		Not Available	BUSHING
14	33-9579			Susp Housing
15	33-4287N		Not Available	BRAKE LATCH KIT
"	33-9520		Not Available	BRAKE LATCH

16	33-1249	35-0771	Leveling Leg
17	33-7518		Link
18	33-9224N	LA-1010	Motor Kit
19	25-7362		Anchor Nut
20	25-7798		Not Available HEX NUT
21	25-0224	3400029	Nut, Adapter Plate
22	25-7032	25-7915	Hex Nut
23	25-7304		Locknut
24	34-0062	25001119	Foot And Pad Assembly
25	33-5976		Not Available DRIVE PULLEY
26	33-0410		Not Available MOTOR PULLEY
27	25-7360	25-7850	Retaining Ring
28	25-7769		Not Available SCREW
29	25-7779		Not Available SCREW
30	25-7218		Not Available SCREW
31	25-7432		Not Available SCREW
32	25-7275		Not Available SCREW
33	25-7498	25-7359	Screw
34	25-7361		Not Available SET SCREW
35	25-7117		Set Screw
36	33-9137		Not Available FOOT SLIDE
37	33-8573		Not Available PIVOT SLIDE
38	33-8291		Not Available BRAKE SOLENOID
39	25-7768		Not Available SPACER
40	33-7519		Not Available BRAKE SPRING
41	33-9140	33-9935	Pivot Spring
42	33-9553		Not Available SPRING
43	33-7195	LA-1048	Motor Switch
44	25-7047		Washer, Flat
45	25-7413		Not Available FLAT WASHER
46	33-0279		Not Available WASHER
47	25-7549		Not Available FLAT WASHER
48	25-7089		Not Available LOCKWASHER

