


Magic Chef W20DA3 02 - CONTROL PANEL

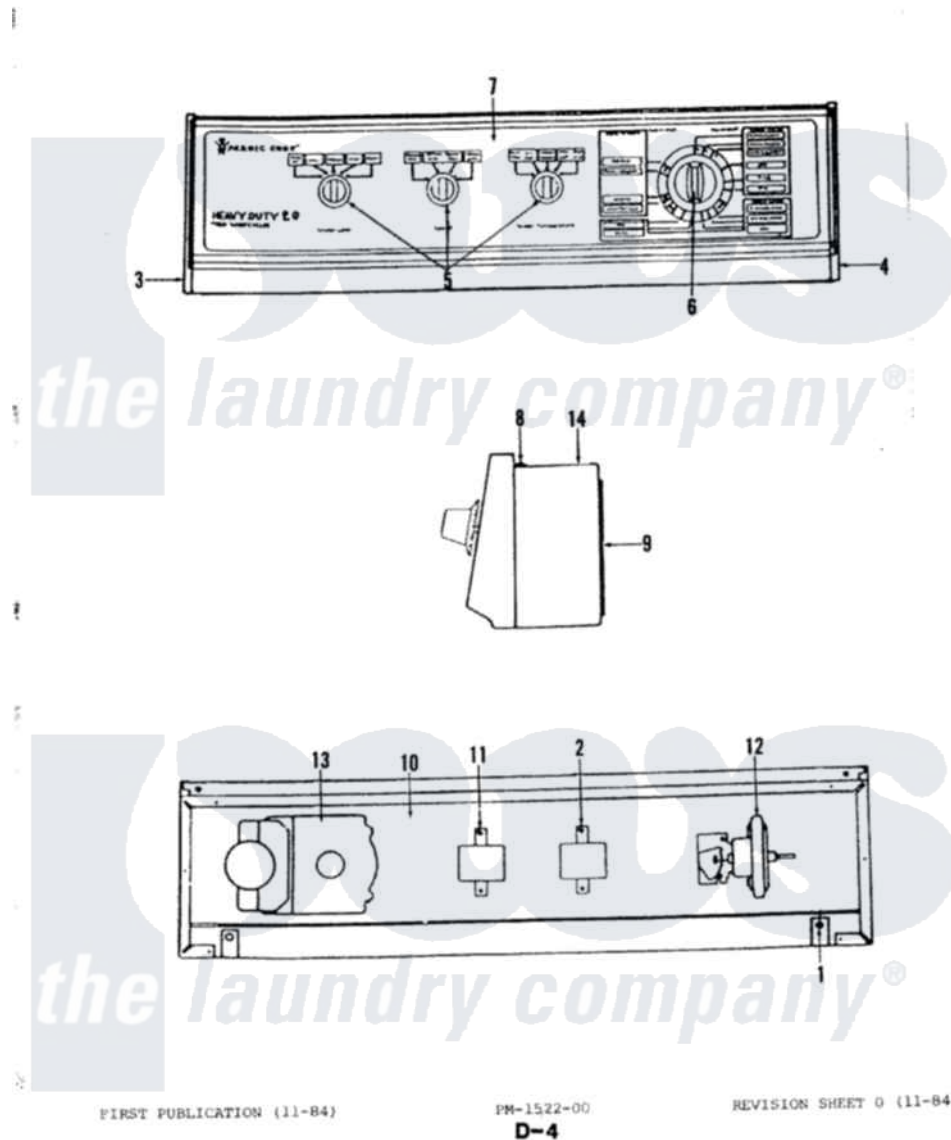

Magic Chef [Residential Magic Chef W20DA3 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7461		Not Available	CLIP
2	33-7887			Switch
3	33-6765			LH End Cap
4	33-6766			RH End Cap
5	33-9618		Not Available	SELECTOR KNOB
6	33-9634			Knob Assembly
"	33-9129	RA43882-2		Timer
7	25-7496	25-7760		Screw
"	33-9959		Not Available	CONTRL PANEL
8	25-0205	216412		Screw, Bracket To Timer
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-6044			Set Screw
"	25-7649	910187		Screw
9	33-8909		Not Available	SHIELD
10	33-9367		Not Available	SHIELD
11	33-6937			Selector Switch

12	33-9732		Pressure Switch
13	25-0129	Not Available	CODE H
14	33-9668	Not Available	WRAPPER
"	33-9668-24	Not Available	WRAPPER
"	33-9668-25	Not Available	WRAPPER

