


Magic Chef W20DA4 02 - CONTROL PANEL

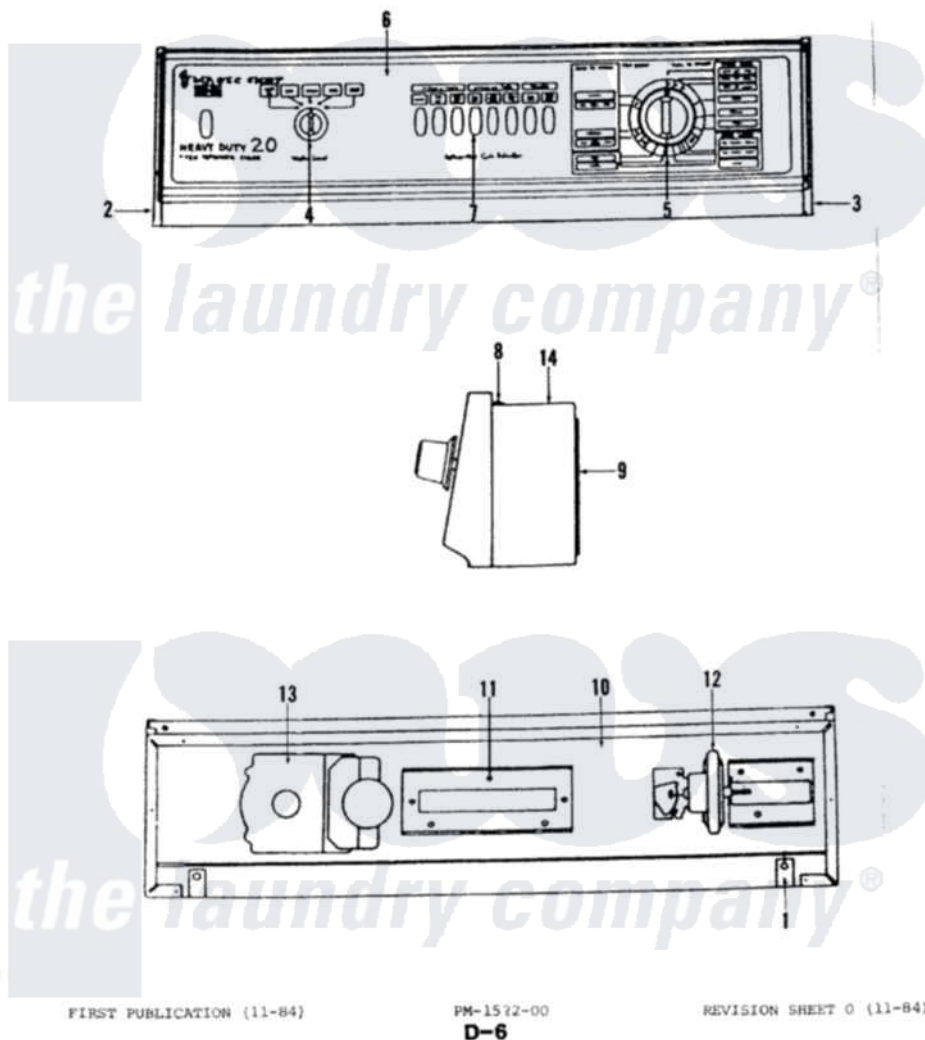

FIRST PUBLICATION (11-84)

PM-1572-00
D-6

REVISION SHEET 0 (11-84)

Magic Chef [Residential Magic Chef W20DA4 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7461		Not Available	CLIP
2	33-6765			LH End Cap
3	33-6766			RH End Cap
4	33-9618		Not Available	SELECTOR KNOB
5	33-9129	RA43882-2		Timer
"	33-9634			Knob Assembly
6	33-9917		Not Available	CONTRL PANEL
7	25-7496	25-7760		Screw
"	83-0215		Not Available	CYCLE BUTTON
8	25-0205	216412		Screw, Bracket To Timer
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-6044			Set Screw
"	25-7649	910187		Screw
9	33-8909		Not Available	SHIELD
10	33-9367		Not Available	SHIELD
11	33-9989		Not Available	SELECTOR SWITCH

"	33-9989	Not Available	SELECTOR SWITCH
"	33-9989	Not Available	SELECTOR SWITCH
12	33-9732		Pressure Switch
13	25-0129	Not Available	CODE H
"	33-9839	Not Available	TIMER
14	33-9668-24	Not Available	WRAPPER

