


# Magic Chef W20DA4 03 - EXTERIOR

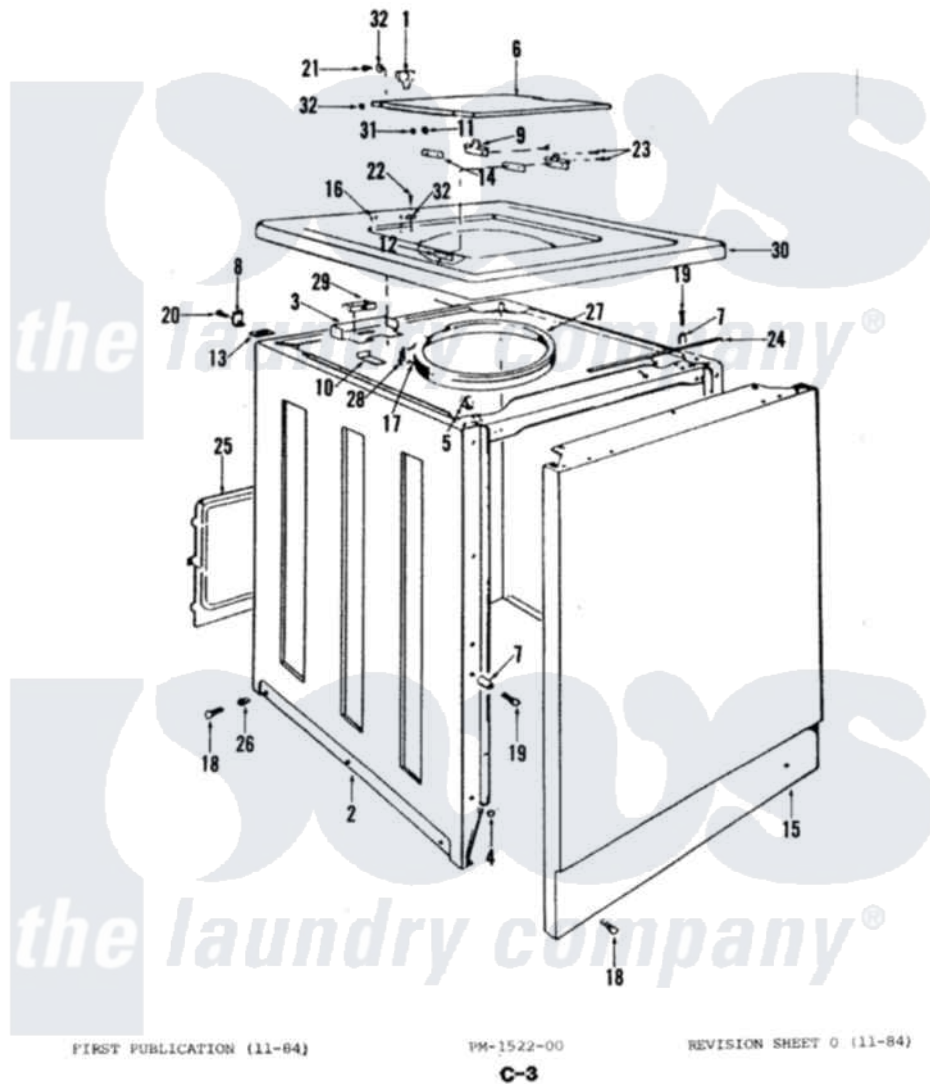

FIRST PUBLICATION (11-84)

PM-1522-00

REVISION SHEET 0 (11-84)

C-3

Magic Chef [Residential Magic Chef W20DA4 Washer Parts](#) Parts Diagram 03 - EXTERIOR

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">43-0057</a>			Actuator, Door Switch
2	33-6068-24		Not Available	CABINET BODY
3	33-8289	<a href="#">12001187</a>		Kit, Lid Switch Assembly
4	<a href="#">33-2653</a>			Bumper, Cabinet
5	<a href="#">25-7285</a>			Clip
6	33-9955-24		Not Available	CLOTHES DOOR
7	<a href="#">34-9701</a>			Guide, Cabinet
8	33-7450	<a href="#">35-2846</a>		Hinge, Cabinet Top
9	<a href="#">33-6956</a>			Hinge
10	33-8828	<a href="#">12001187</a>		Kit, Lid Switch Assembly
11	25-8057		Not Available	PLASTIC NUT
12	33-8058		Not Available	SPEEDNUT
13	<a href="#">33-0930</a>			Pad, Top Hinge
14	<a href="#">33-6957</a>			Hinge Pad
15	33-9255-24		Not Available	FRONT PANEL
16	<a href="#">33-2653</a>			Bumper, Cabinet

17	33-6093		Not Available	RETAINING RING
18	25-7001	<a href="#">308685</a>		Side Trim )
19	<a href="#">25-6109</a>			Screw
20	25-7732	<a href="#">681414</a>		Screw, 10AB X 1/2
21	<a href="#">25-7438</a>			Screw
22	25-7463	<a href="#">7101P012-60</a>		Screw
"	25-7458	<a href="#">308685</a>		Side Trim )
23	25-7455	<a href="#">99002757</a>		Screw
24	33-9948		Not Available	CUSHION STRIP
25	33-8687		Not Available	REAR SHIELD
26	33-2088		Not Available	SLEEVE
27	33-6092		Not Available	SPLASH GUARD
28	<a href="#">33-0767</a>			Spring
29	33-9064	<a href="#">12001187</a>		Kit, Lid Switch Assembly
30	33-9362-24		Not Available	CABINET TOP
31	25-7086	<a href="#">Y0308025</a>		Washer, Stainless Steel
32	<a href="#">25-7436</a>			Nylite Washer

