


# Magic Chef W20DN3 02 - CONTROL PANEL

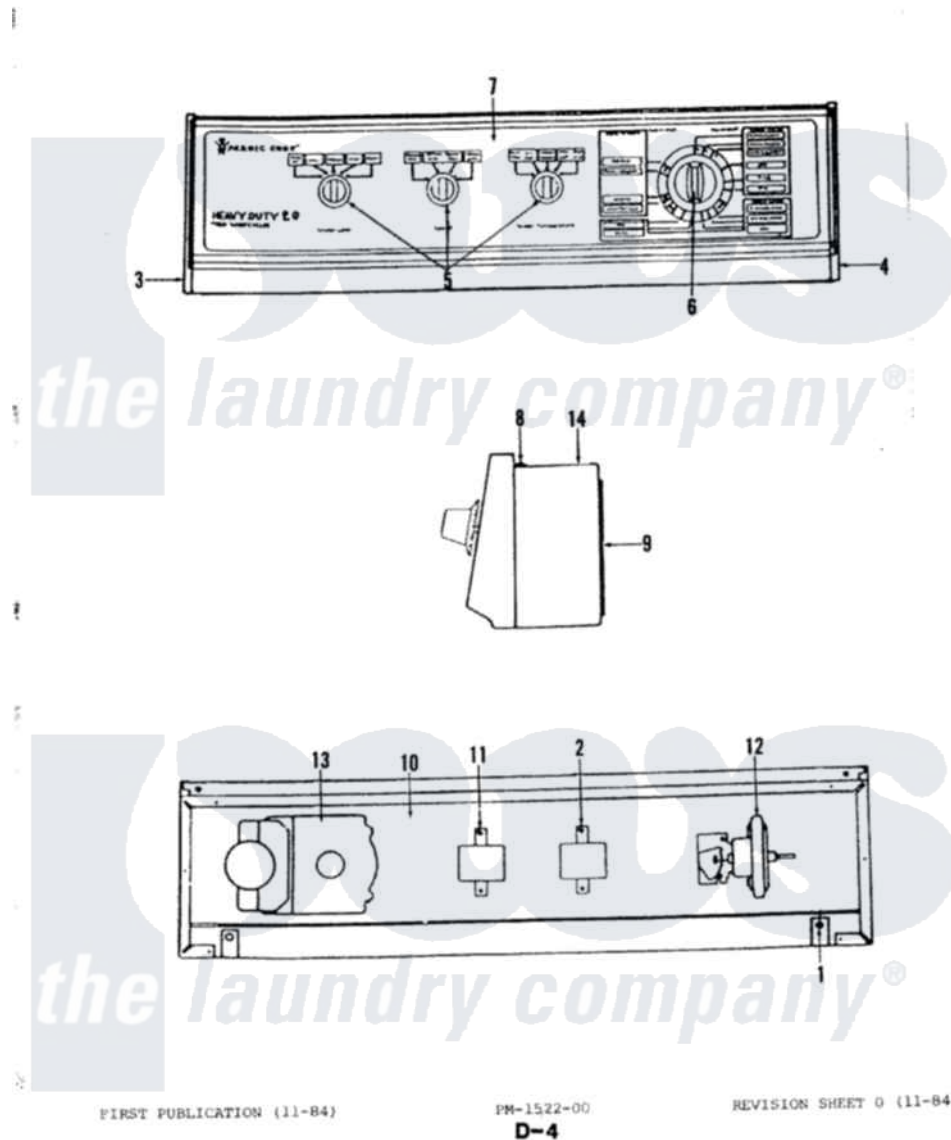

FIRST PUBLICATION (11-84)

PM-1522-00

REVISION SHEET 0 (11-84)

D-4

Magic Chef [Residential Magic Chef W20DN3 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7461		Not Available	CLIP
2	<a href="#">33-7887</a>			Switch
3	<a href="#">33-6765</a>			LH End Cap
4	<a href="#">33-6766</a>			RH End Cap
5	33-9618		Not Available	SELECTOR KNOB
6	<a href="#">33-9634</a>			Knob Assembly
"	33-9129	<a href="#">RA43882-2</a>		Timer
7	25-7496	<a href="#">25-7760</a>		Screw
"	33-9959		Not Available	CONTRL PANEL
8	25-0205	<a href="#">216412</a>		Screw, Bracket To Timer
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">25-6044</a>			Set Screw
"	25-7649	<a href="#">910187</a>		Screw
9	33-8909		Not Available	SHIELD
10	33-9367		Not Available	SHIELD
11	<a href="#">33-6937</a>			Selector Switch

12	<a href="#">33-9732</a>		Pressure Switch
13	25-0129	Not Available	CODE H
14	33-9668	Not Available	WRAPPER
"	33-9668-24	Not Available	WRAPPER
"	33-9668-25	Not Available	WRAPPER

