


Magic Chef W20DN3 03 - EXTERIOR

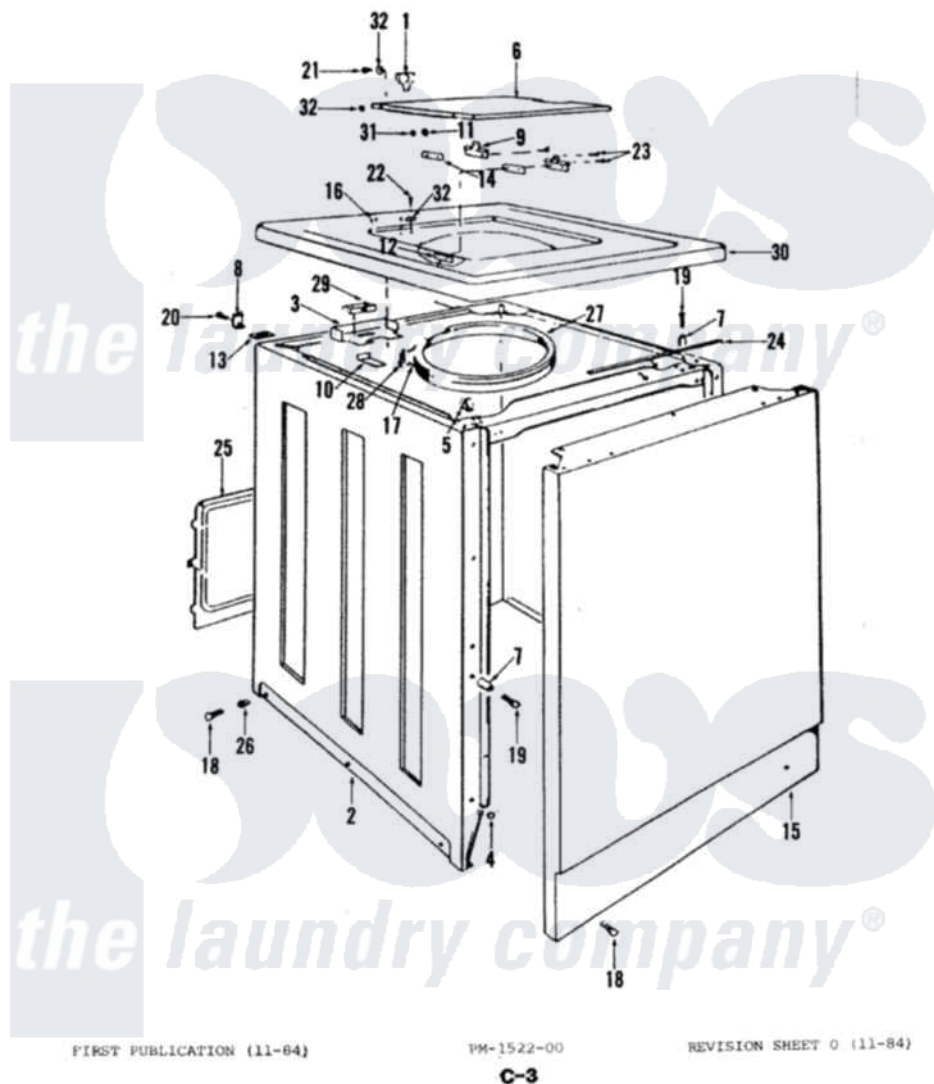

Magic Chef [Residential Magic Chef W20DN3 Washer Parts](#) Parts Diagram 03 - EXTERIOR
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|--------------------------|---------------|--------------------------|
| 1 | 43-0057 | | | Actuator, Door Switch |
| 2 | 33-6068 | | Not Available | CABINET BODY |
| 3 | 33-8289 | 12001187 | | Kit, Lid Switch Assembly |
| 4 | 33-2653 | | | Bumper, Cabinet |
| 5 | 25-7285 | | | Clip |
| 6 | 33-7929 | 35-2103 | | Clother Door |
| 7 | 34-9701 | | | Guide, Cabinet |
| 8 | 33-7450 | 35-2846 | | Hinge, Cabinet Top |
| 9 | 33-6956 | | | Hinge |
| 10 | 33-8828 | 12001187 | | Kit, Lid Switch Assembly |
| 11 | 25-8057 | | Not Available | PLASTIC NUT |
| 12 | 33-8058 | | Not Available | SPEEDNUT |
| 13 | 33-0930 | | | Pad, Top Hinge |
| 14 | 33-6957 | | | Hinge Pad |
| 16 | 33-2653 | | | Bumper, Cabinet |
| 17 | 33-6093 | | Not Available | RETAINING RING |

| | | | | |
|----|-------------------------|-----------------------------|---------------|--------------------------|
| 18 | 25-7001 | 308685 | | Side Trim) |
| 19 | 25-6109 | | | Screw |
| 20 | 25-7732 | 681414 | | Screw, 10AB X 1/2 |
| 21 | 25-7438 | | | Screw |
| 22 | 25-7463 | 7101P012-60 | | Screw |
| " | 25-7458 | 308685 | | Side Trim) |
| 23 | 25-7455 | 99002757 | | Screw |
| 24 | 33-9948 | | Not Available | CUSHION STRIP |
| 25 | 33-8687 | | Not Available | REAR SHIELD |
| 26 | 33-2088 | | Not Available | SLEEVE |
| 27 | 33-6092 | | Not Available | SPLASH GUARD |
| 28 | 33-0767 | | | Spring |
| 29 | 33-9064 | 12001187 | | Kit, Lid Switch Assembly |
| 30 | 33-9362 | | Not Available | CABINET TOP |
| 31 | 25-7086 | Y0308025 | | Washer, Stainless Steel |
| 32 | 25-7436 | | | Nylite Washer |

