


Magic Chef W20EA4 02 - CONTROL PANEL

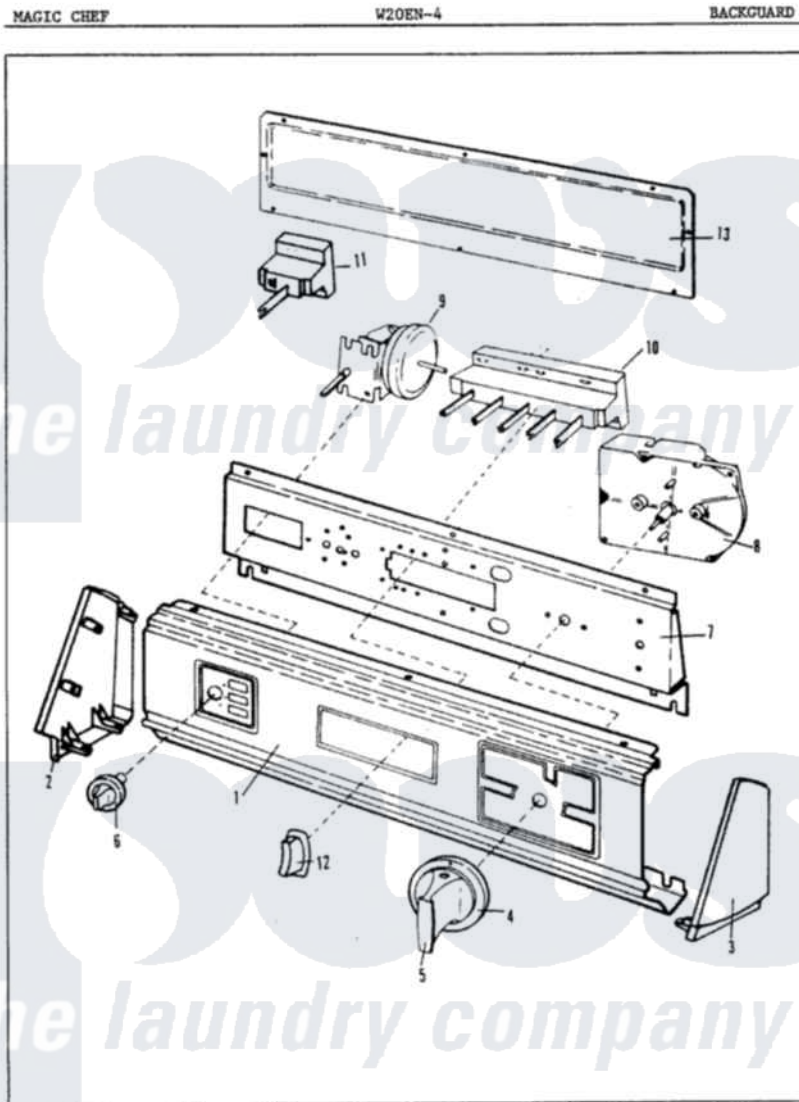

Issued 4/86

C-1

Magic Chef [Residential Magic Chef W20EA4 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7793			Screw
"	35-0265		Not Available	CONTROL PANEL
2	53-0265			LH Endcap
3	25-7760			Screw
"	53-0278		Not Available	TRIM, END CAP (LT)
"	25-7702			Speedclip, End Cap To Control Panel
"	53-0264			RH Endcap
"	53-0277		Not Available	TRIM, END CAP (RT)
4	35-0384	12500058		Knob Ski
5	35-0498	12500058		Knob Ski
"	35-0149		Not Available	TIMER KNOB
"	25-6044			Set Screw
6	35-0452		Not Available	SELECTOR KNOB
7	53-0267		Not Available	CONTROL SHIELD
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	25-0088	489483		Screw 10-32 X 1/2
"	35-0157			Timer
"	35-0489	35-0728		Timer
"	35-0116			Timer Motor 3/5 RPM
9	35-0112	35-0782		Pressure Switch
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
10	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-9989		Not Available	SELECTOR SWITCH
"	33-8540		Not Available	SWITCH PAD
"	33-6620		Not Available	BRACKET
"	25-7713		Not Available	SCREW
11	25-7712		Not Available	SCREW
"	33-6621		Not Available	BRACKET, SWITCH
"	33-9914			PB Switch
"	33-8541		Not Available	SWITCH PAD
12	35-0385			Pushbutton
13	25-7851			Speedclip, End Cap To Top
"	25-7852			Speedclip, Rr Shld To End Cap
"	25-7697	25-2219		Screw
"	25-7592		Not Available	SCREW
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	53-0268	21001460		Shield, Rear

the laundry company[®]

the laundry company[®]