


# Magic Chef W20EA4 04 - TUB

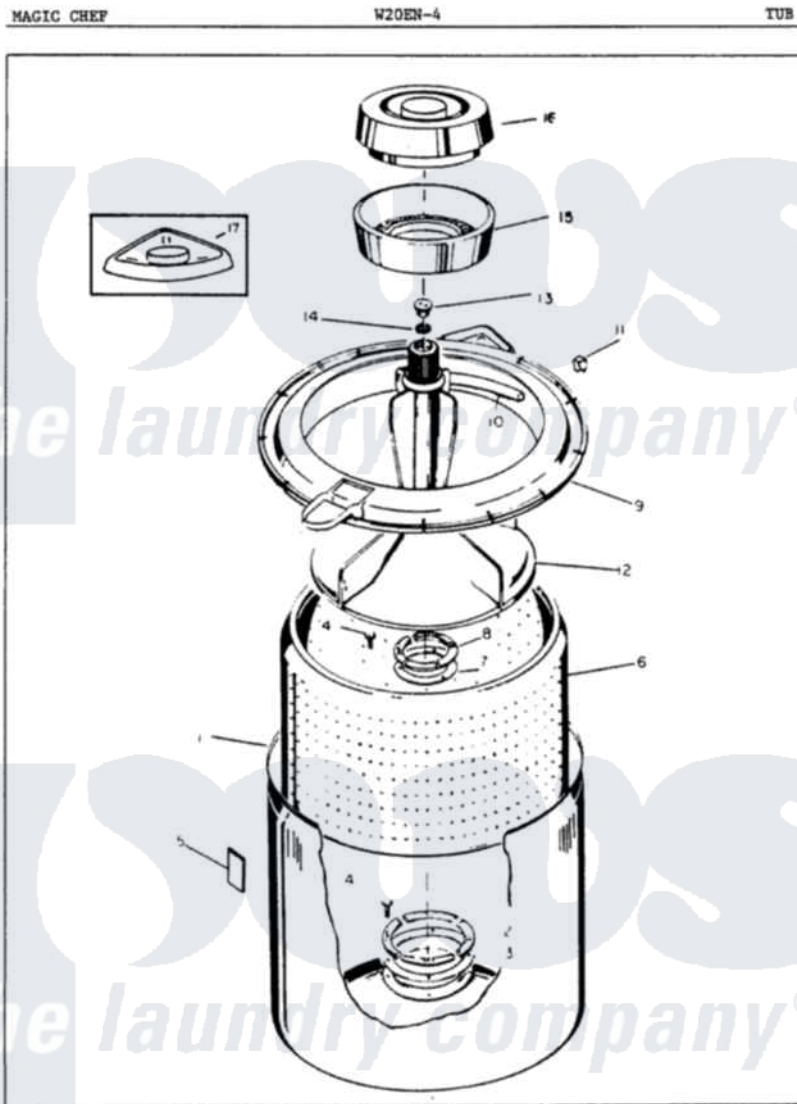

B-8

Magic Chef [Residential Magic Chef W20EA4 Washer Parts](#) Parts Diagram 04 - TUB  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-9392		Not Available	TUB ASSEMBLY
2	33-8800	<a href="#">33-8800K</a>		Plate
3	<a href="#">33-6905</a>			Gasket
4	25-7783	<a href="#">4356852</a>		Screw
5	33-3232	<a href="#">35-0538</a>		Pad
6	35-0004		Not Available	BASKET ASM
"	33-9566	<a href="#">33-9500N</a>		Basket Kit
7	<a href="#">33-6902</a>			Gasket
"	<a href="#">33-8959</a>			Gasket
8	33-8799		Not Available	REINF PLATE
9	35-0537	<a href="#">35-0993</a>		Tub Top
10	<a href="#">33-3055</a>			Gasket
11	<a href="#">25-7748</a>			Clip
12	35-0049		Not Available	AGITATOR
13	<a href="#">33-6241</a>			Cap
14	<a href="#">25-7330</a>			Rubber Washer

15	33-9888		Not Available	LINT FILTER
16	33-9827	<a href="#">35-2550</a>		Dispenser, Rinse
17	33-9906	<a href="#">21001167</a>		Dispenser, Bleach
"	35-0345		Not Available	INSERT M/W

