


Magic Chef W20EY3 04 - TUB

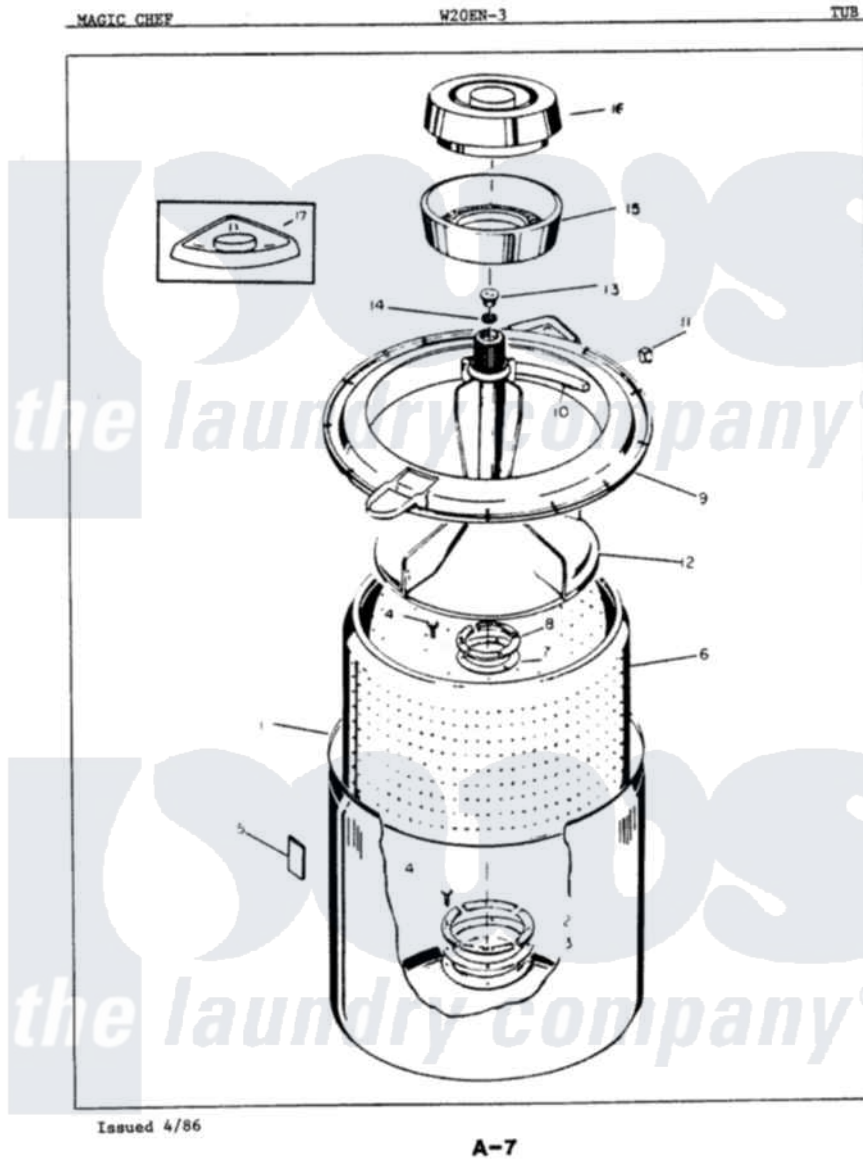

Magic Chef [Residential Magic Chef W20EY3 Washer Parts](#) Parts Diagram 04 - TUB
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-9392		Not Available	TUB ASSEMBLY
2	33-8800	33-8800K		Plate
3	33-6905			Gasket
4	25-7783	4356852		Screw
5	33-3232	35-0538		Pad
6	35-0004		Not Available	BASKET ASM
"	33-9566	33-9500N		Basket Kit
7	33-6902			Gasket
"	33-8959			Gasket
8	33-8799		Not Available	REINF PLATE
9	35-0537	35-0993		Tub Top
10	33-3055			Gasket
11	25-7748			Clip
12	35-0049		Not Available	AGITATOR
13	33-6241			Cap
14	25-7330			Rubber Washer

15	33-9888		Not Available	LINT FILTER
16	33-9827	35-2550		Dispenser, Rinse
17	33-9906	21001167		Dispenser, Bleach
"	35-0345		Not Available	INSERT M/W

