


Magic Chef W20FA3 02 - CONTROL PANEL

MAGIC CHEF

W20FN-4

BASE & DRIVE

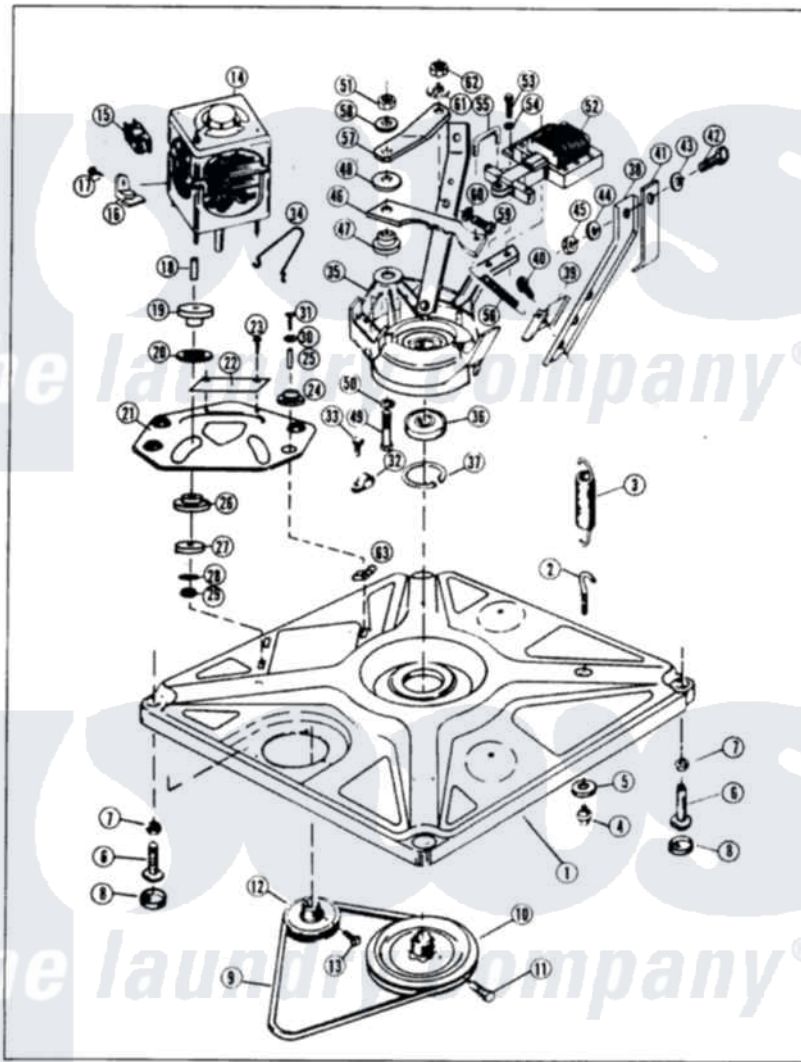

Issued 11/87

Magic Chef [Residential Magic Chef W20FA3 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-0764		Not Available	CONTROL PANEL
2	53-0265			LH Endcap
"	53-0264			RH Endcap
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	25-7702		Speedclip, End Cap To Control Panel
9	53-0365	53-1676	Shield, Control
10	25-7583		Not Available PLASTIC NUT
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
"	53-0268	21001460	Shield, Rear
11	35-0728		Timer
"	35-0116		Timer Motor 3/5 RPM
12	25-0088	489483	Screw 10-32 X 1/2
13	35-0180	12500058	Knob Ski
14	35-0498	12500058	Knob Ski
15	35-0114		Not Available TEMP SWITCH
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	35-0168		Not Available SELECTOR KNOB
17	35-0162		Not Available ROTARY SWITCH
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0782		Pressure Switch

