


Magic Chef W20FA3 03 - EXTERIOR

MAGIC CHEF

W20FN-3

BASE & DRIVE

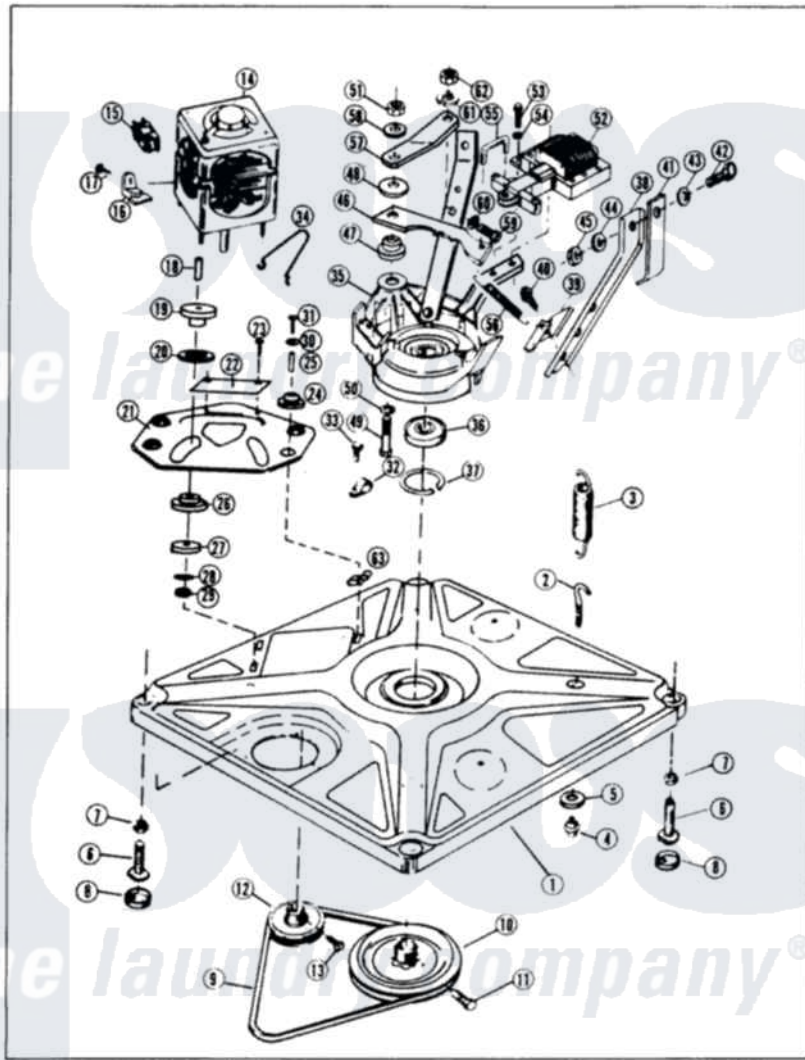

Issued 11/87

Magic Chef [Residential Magic Chef W20FA3 Washer Parts](#) Parts Diagram 03 - EXTERIOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0061-24		Not Available	CABINET BODY
2	25-7001	308685		Side Trim)
3	25-7458	308685		Side Trim)
"	25-7071		Not Available	LOCKWASHER
"	33-2088		Not Available	SLEEVE
4	34-9701			Guide, Cabinet
5	25-6109			Screw
6	33-2653			Bumper, Cabinet
7	33-9948		Not Available	CUSHION STRIP
8	33-8687		Not Available	REAR SHIELD
9	25-2000		Not Available	SCREW
10	35-0056-24		Not Available	FRONT PANEL
11	25-7001	308685		Side Trim)
12	25-7071		Not Available	LOCKWASHER
13	35-0586-24		Not Available	CABINET TOP
14	25-7285			Clip

15	33-7450	35-2846	Hinge, Cabinet Top
16	33-0930		Pad, Top Hinge
17	25-7732	681414	Screw, 10AB X 1/2
18	33-9064	12001187	Kit, Lid Switch Assembly
"	33-2653		Bumper, Cabinet
19	33-8911	12001187	Kit, Lid Switch Assembly
20	33-8289	12001187	Kit, Lid Switch Assembly
21	25-7437	40040701	Screw, Tapping No.6b-20
22	33-9063	12001187	Kit, Lid Switch Assembly
"	25-7878		Clip
23	25-7463	7101P012-60	Screw
24	25-7436		Nylite Washer
25	35-0607-24	Not Available	CLOTHES DOOR
"	35-0581		Bumper, Door
26	33-6956		Hinge
27	33-6957		Hinge Pad
28	33-8058	Not Available	SPEEDNUT
29	25-7455	99002757	Screw
30	43-0057		Actuator, Door Switch
31	25-7436		Nylite Washer
32	25-7438		Screw
33	25-7455	99002757	Screw
34	25-7086	Y0308025	Washer, Stainless Steel
35	25-7436		Nylite Washer
36	25-8057	Not Available	PLASTIC NUT
37	35-0697	Not Available	SPLASHGUARD
38	33-6093	Not Available	RETAINING RING
39	33-0767		Spring
40	25-7752	3196169	Screw, Element
"	35-0663	Not Available	CABT BRACE

