


# Magic Chef W20FA4 02 - CONTROL PANEL

MAGIC CHEF

W20FN-4

BACKGUARD

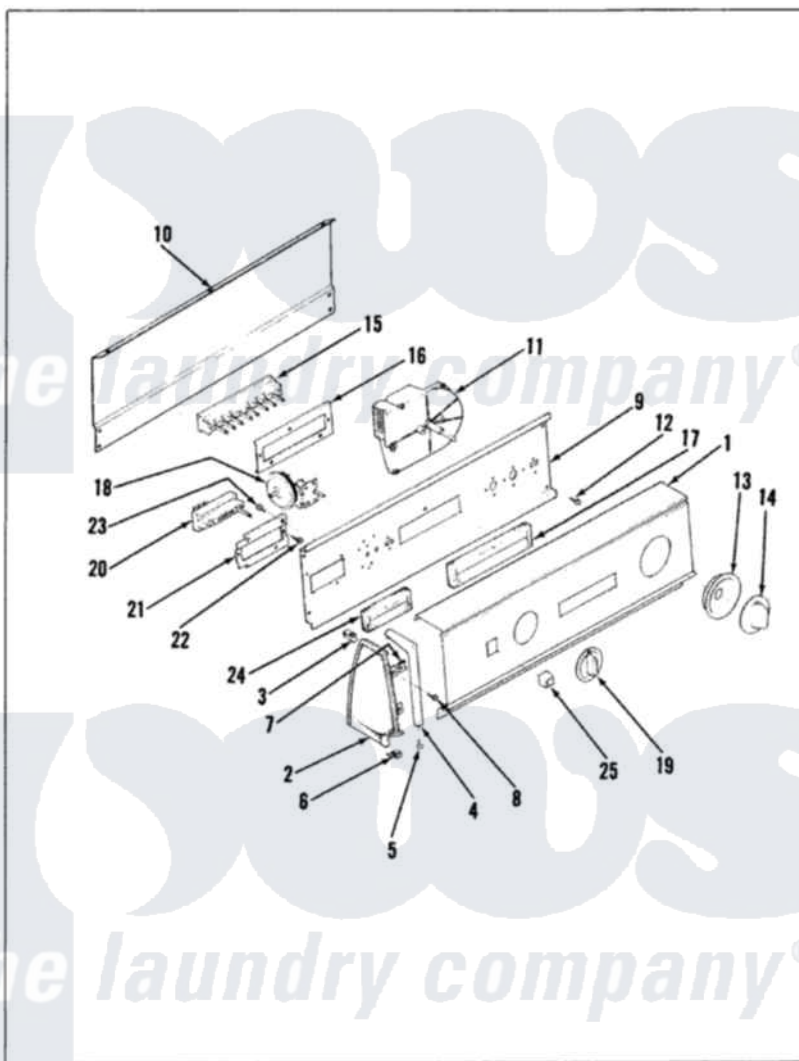

Issued 11/87

Magic Chef [Residential Magic Chef W20FA4 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">35-0770</a>			Control Panel
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
2	<a href="#">53-0265</a>			LH Endcap
"	<a href="#">53-0264</a>			RH Endcap
3	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
4	53-0278		Not Available	TRIM, END CAP (LT)
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
5	<a href="#">25-7760</a>			Screw
6	34-9487		Not Available	PLATE, REINFORCEMENT
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	25-7697	<a href="#">25-2219</a>		Screw
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel

8	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-0267	Not Available	CONTROL SHIELD
10	25-7583	Not Available	PLASTIC NUT
"	<a href="#">25-3457</a>		Screw, Sems
"	53-0268	<a href="#">21001460</a>	Shield, Rear
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
11	<a href="#">35-0116</a>		Timer Motor 3/5 RPM
"	<a href="#">35-0728</a>		Timer
12	25-0088	<a href="#">489483</a>	Screw 10-32 X 1/2
13	35-0180	<a href="#">12500058</a>	Knob Ski
14	35-0498	<a href="#">12500058</a>	Knob Ski
15	33-9989	Not Available	SELECTOR SWITCH
16	33-6620	Not Available	BRACKET
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
17	33-8540	Not Available	SWITCH PAD
"	<a href="#">35-0385</a>		Pushbutton
18	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">35-0782</a>		Pressure Switch
19	35-0168	Not Available	SELECTOR KNOB
20	<a href="#">33-9914</a>		PB Switch
21	33-6621	Not Available	BRACKET, SWITCH
22	25-7712	Not Available	SCREW
23	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
24	33-8541	Not Available	SWITCH PAD
25	<a href="#">35-0385</a>		Pushbutton

*the laundry company*<sup>®</sup>

**Howes**  
*the laundry company*<sup>®</sup>