


Magic Chef W20FA4C 05 - TUB

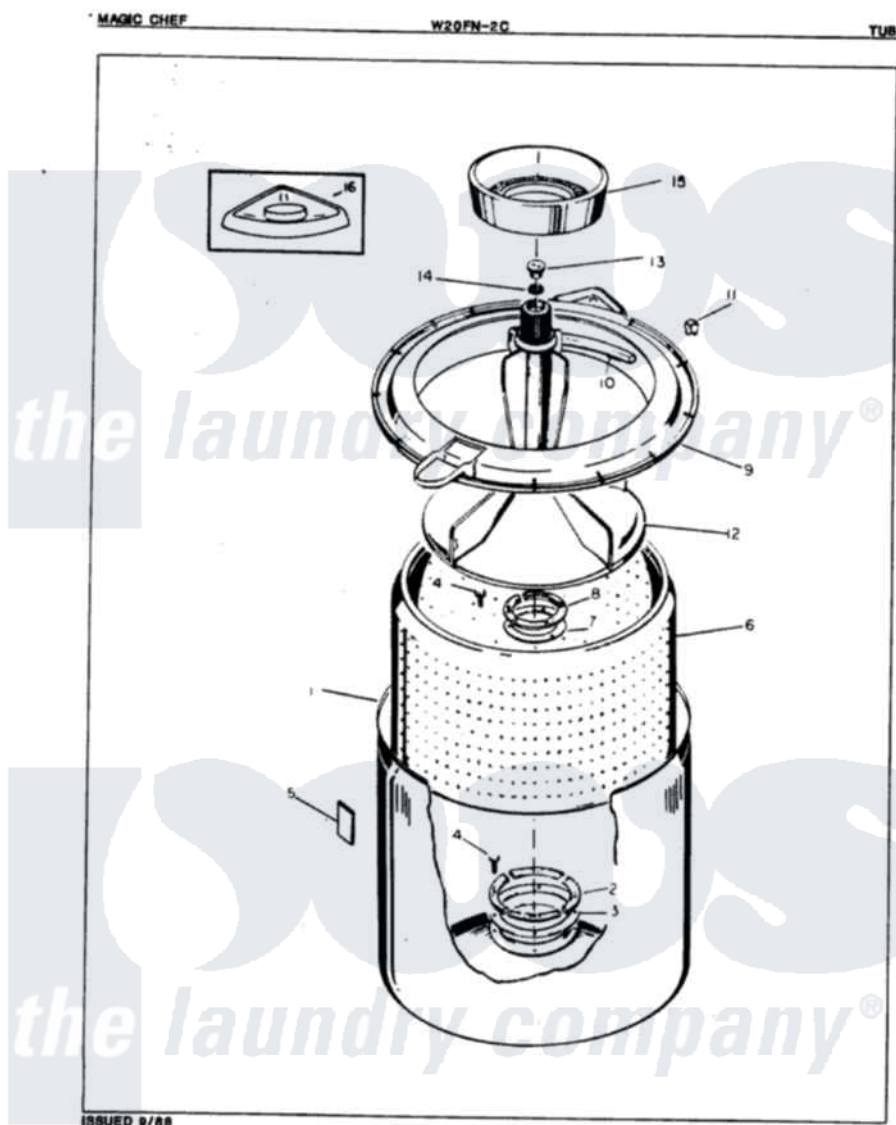

Magic Chef [Residential Magic Chef W20FA4C Washer Parts](#) Parts Diagram 05 - TUB
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-9392		Not Available	TUB ASSEMBLY
2	33-8800	33-8800K		Plate
3	33-6905			Gasket
4	25-7783	4356852		Screw
5	35-0538			Pad
6	35-0004		Not Available	BASKET ASM
7	33-8959			Gasket
8	33-8799		Not Available	REINF PLATE
9	35-0537	35-0993		Tub Top
10	33-3055			Gasket
11	25-7748			Clip
12	35-0049		Not Available	AGITATOR
13	33-6241			Cap
14	25-7330			Rubber Washer
15	33-9888		Not Available	LINT FILTER
16	33-9827	35-2550		Dispenser, Rinse

